

# USER MANUAL



## Avonic PTZ Camera 20x zoom CM70-NDI

# Disclaimer, Contact, IP Rating and CE Marking

## Disclaimer

All text, graphics, photographs, trademarks, logos, artwork and computer code (collectively, "Content"), including but not limited to the design, structure, selection, coordination, expression, "look and feel" and arrangement of such Content, contained in this Manual is owned, controlled or licensed by or to Avonic, and is protected by trade dress, copyright, patent and trademark laws, and various other intellectual property rights and unfair competition laws.

Except as expressly provided in these Terms of Use, no Content of this Manual may be copied, reproduced, republished, uploaded, posted, publicly displayed, encoded, translated, transmitted or distributed in any way (including "mirroring") to any other computer, server, Web site or other medium for publication or distribution or for any commercial enterprise, without the prior written consent of Avonic.

## Copyright ©2022 AVONIC All Rights Reserved.

The information contained in this Manual is subject to change without notice.

## Contact Info

For any questions or suggestions, contact your reseller or local distributor of Avonic.

Visit the Avonic website [www.avonic.com](http://www.avonic.com) to find your local Avonic distributor or to download the most recent version of the documentation.

## Join Avonic on Social Media



[www.Facebook.com/avonicPTZ](http://www.Facebook.com/avonicPTZ)



[www.instagram.com/avonicPTZ](http://www.instagram.com/avonicPTZ)



[www.Linkedin.com/company/avonic](http://www.Linkedin.com/company/avonic)



[www.youtube.com/channels/avonic](http://www.youtube.com/channels/avonic)



[www.twitter.com/avonic](http://www.twitter.com/avonic)

## IP Rating

The IP Rating (ingress protection) for this Product is IP30. This means that the Product has an intrusion protection against solid objects over 2.5mm, e.g. tools & wires and has no moisture protection.

## CE Marking

The Product has a CE Marking. The CE labels are placed at the bottom of the Product and on the packaging. See the respective figures below:

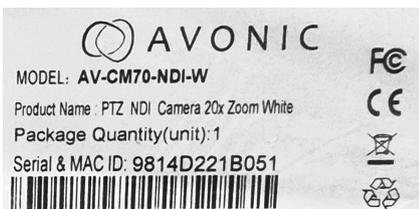


Figure 1: CE Marking (Product)

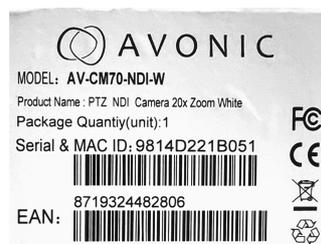


Figure 2: CE Marking (Packaging)

# EU DECLARATION OF CONFORMITY

The Avonic Declaration of Conformity is in accordance with EN ISO/IEC 17050-1 and generated using the ProductIP compliance platform.

Figure 3: EU Declaration of Conformity

Declaration number:	<b>DOCIP 819694</b>	
Name and address of manufacturer / EU-AR:	<b>Avonic Exportweg 11a 2645ED Delfgauw Netherlands</b>	
<b>THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF:</b>		
Name and address of manufacturer:	<b>Avonic Exportweg 11a 2645ED Delfgauw Netherlands</b>	
Product identification:	<b>PTZ Camera 12x/20x/30x Zoom White AV-CM7x</b>	
<b>THE PRODUCTS MENTIONED IN THIS DECLARATION ARE IN CONFORMITY WITH:</b>		
<b>EU Community Legislation</b>	<b>Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU [OJEU L174/88-110, 01.07.2011] Electromagnetic Compatibility (EMC) Directive 2014/30/EU [OJEU L96/79-106, 29.03.2014] Ecodesign energy-related products Directive 2009/125/EC [OJEU L285/10-35, 31.10.2009] Low Voltage Directive (LVD) 2014/35/EU [OJEU L96/357-374, 29.03.2014]</b>	
Harmonised standards	<b>Safety of electrical equipment</b> EN 60065:2014 + AC:2016 + AC:2017 + AC:2017 + AC:2018  <b>Electromagnetic Compatibility (EMC)</b> EN 55020:2007 + A11:2011 + A12:2016 EN 55032:2015 + AC:2016 EN 55035:2017 EN 61000-3-2:2014 EN 61000-3-3:2013  <b>Restricted substances in electrical products</b> EN 50581:2012 EN IEC 63000:2018  <b>Ecodesign</b> Regulation (EC) 278/2009 - Ecodesign of external power supplies (EPS)	
Other specifications:		
Notified Body:		
Additional Information:		
<b>SIGNED FOR AND ON BEHALF OF:</b>		
Place and date of issue:	<b>Delfgauw, 24 October 2019</b>	
Signature:		
Name, function:	<b>Walter Harrewijn, CEO</b>	
Company name:	<b>Avonic</b>	

# IMPORTANT INFORMATION

## Liability

Avonic will NOT be held responsible for any damage or injury caused by unqualified persons carrying out these tasks, or by not following the instructions in this Manual.

## Intended Use and Non-Intended Use

### Installation



The following applies to the **installation** of the camera:

- The installation activities in this Manual should ONLY be executed by experienced technicians.
- The installation activities should NOT be executed by minors, mentally disabled persons or other persons not qualified to perform these tasks.

### Operation



The following applies to the **operation** of the camera:

- The operational activities described in this Manual should ONLY be executed by people with enough technical knowledge to perform the activities in a safe manner.
- This Product is specifically developed for video conferencing / streaming via internet by companies, institutes and universities. It is NOT meant for private use in the residential area.
- This Product should ONLY be used indoors.
- This Product is NOT a medical device and should NOT be used as a substitute for professional medical judgment. It is NOT designed or intended for use in the diagnosis of disease or other conditions, or in the cure, mitigation, treatment, or prevention of any condition or disease. Please consult your healthcare provider prior to making any decisions related to your health.

## Important Precautions

	This Product is NOT intended for use where failure of the device could lead to death, personal injury, or severe environmental damage.
	Be sure that you have COMPLETELY READ and UNDERSTOOD ALL information in this Manual before unpacking, installing and using this Product. Keep the Manual in a safe place for future reference or download it from <a href="http://www.avonic.com">www.avonic.com</a> .
	Failure to follow the SAFETY NOTES as described in this chapter could result in fire, electric shock, injury, or damage to this Product or other property.
	Power this Product ONLY with the included cable and power adapter. Other adapters may not meet applicable safety standards, and could pose a risk of death or injury when connected.

## Symbols Used in This Manual

Symbol	Meaning	Description
	Danger	Not following the instructions associated with this symbol may lead to personal injury and / or serious damage to the Product.
	Electrical Shock	Not following the instructions associated with this symbol may lead to life-threatening situations and / or serious damage to the Product.

Symbol	Meaning	Description
	Listed	Caution should be exercised related to the information listed in the user manual. Not following this information or instructions may lead to injury and/or damage to the product.
	Important	The information associated with this symbol requires special attention.
	Information	The information associated with symbol refers to a general remark or a reference to other documentation.
	Instruction	This symbol refers to one or more user instructions that must be followed as is documented in the user manual.
	Recycling	Specific parts of the Product can be re-used.

## Acronyms

The following acronyms are used in this Manual:

<b>AAE</b>	Aperture Auto Exposure
<b>AWB</b>	Aperture White Balance
<b>BLC</b>	Black Light Control
<b>CCM</b>	Customizable Color Matrix
<b>CMOS</b>	Complementary Metal Oxide Semiconductor
<b>DRC</b>	Dynamic Range Compression
<b>EV</b>	Exposure Value
<b>HD</b>	High Definition
<b>HDMI</b>	High-Definition Multimedia Interface
<b>IP</b>	Internet Protocol
<b>MJPEG</b>	Motion-JPEG
<b>NDI</b>	Network Device Interface
<b>NR</b>	Noise Reduction
<b>OSD</b>	On-Screen Display
<b>PoE</b>	Power over Ethernet
<b>PTZ</b>	Pan / Tilt / Zoom
<b>RTMP</b>	Real-Time Messaging Protocol
<b>RTSP</b>	Real-Time Streaming Protocol
<b>SAE</b>	Shutter Auto Exposure
<b>SDI</b>	Serial Digital Interface
<b>SKU</b>	Stock Keeping Unit
<b>SNR</b>	Signal to Noise Ratio
<b>SRT</b>	Secure Reliable Transport
<b>TCP</b>	Transmission Control Protocol
<b>UDP</b>	User Datagram Protocol

# Contents

Disclaimer, Contact, IP Rating and CE Marking.....	ii
EU DECLARATION OF CONFORMITY.....	iii
IMPORTANT INFORMATION.....	iv
Liability.....	iv
Intended Use and Non-Intended Use.....	iv
Installation.....	iv
Operation.....	iv
Important Precautions.....	iv
Symbols Used in This Manual.....	iv
Acronyms.....	v
INTRODUCTION.....	9
Purpose of This Manual.....	9
Target Audience.....	9
Document Structure.....	9
SAFETY INSTRUCTIONS.....	10
Intended Use.....	10
Important Precautions.....	10
Handling.....	10
Mounting.....	10
Ventilation.....	11
Repair.....	11
Power and Adapter.....	11
Atmospheric Conditions.....	11
PRODUCT OVERVIEW.....	12
Description.....	12
Features.....	12
UNPACKING.....	13
Package Contents.....	13
Handling Precautions.....	14
Unpacking the Camera.....	14
Return Procedure.....	14
MOUNTING AND INSTALLATION.....	15
Mounting on Wall or Ceiling.....	15
Connecting the Components to the Camera.....	16
Balanced Audio Connection.....	16
Connecting a Controller to a Camera.....	17
Connecting via USB, HDMI or SDI.....	17
Serial Connecting via RS-232 or RS-485.....	18
Connecting via NDI®   HX/ LAN.....	19
OPERATION.....	20
WebGUI.....	20
Optional Features.....	20
Login.....	20
First time usage.....	21
Preview (LOCAL).....	24
AUDIO.....	25
VIDEO.....	26
Using the Remote Control.....	46
a. Power.....	46
b. Set.....	46
c. Camera Select.....	47

d. Number Keys.....	47
e. Focus + -.....	47
f. Auto/Manual Focus.....	47
g. Zoom + -.....	47
h. Set & Clear Preset.....	48
i. PTZ Keys (up/down/left/right).....	48
j. Home.....	48
k. BLC ON/OFF.....	48
l. Menu.....	48
m. Function Keys (F1/F2/F3/F4).....	48
n. Blank Buttons.....	48
Other Key Combinations.....	49
Tally Light Functionality.....	49
Enable tally light.....	50
OSD Menu.....	51
1. MENU.....	52
2. SETUP.....	52
3. CAMERA.....	52
3.1 EXPOSURE.....	53
3.2 COLOR.....	53
3.3 IMAGE.....	53
3.4 FOCUS.....	54
3.5 NOISE REDUCTION.....	54
3.6 STYLE.....	54
4. PTZ.....	54
5. VIDEO FORMAT.....	55
6. NETWORK SETTINGS.....	55
7. VERSION.....	55
8. RESTORE DEFAULT.....	55
Using the System Select.....	56
MAINTENANCE.....	57
Camera Maintenance.....	57
Usage Precautions.....	57
TRANSPORT AND STORAGE.....	58
DISPOSAL AND RECYCLING.....	59
TROUBLESHOOTING.....	60
General.....	60
Power Issues.....	60
Image.....	60
No image.....	60
Abnormal image.....	60
Dithering or flickering image.....	60
Color issues.....	60
Autofocus Issues.....	61
Control.....	61
No self-test (PTZ cameras only) and no power LED.....	61
Remote Controller does not work.....	61
Camera does not respond to commands send over IP.....	61
WebGUI.....	61
Cannot enter WebGUI.....	61
Firmware update failed.....	61
APPENDIX A - VISCA SETTINGS AND COMMAND LIST.....	62
VISCA over Serial Connection.....	62
VISCA over IP.....	62
VISCA over IP using the full Sony VISCA protocol.....	64

Camera Return Commands.....	65
Camera Control Commands.....	66
Inquiry Commands.....	72
APPENDIX B - DIMENSIONS.....	76
APPENDIX C - HTTP API.....	77
How to use HTTP API.....	77
Curl.....	78
{"GetEnv"}.....	79
PTZ.....	80
PTZ speed.....	80
Speed by Zoom.....	81
Image Freezing.....	81
Low power mode.....	81
Zoom Speed.....	81
Preset Pan Speed.....	81
Preset Tilt Speed.....	81
Preset Zoom Speed.....	81
Focus Mode.....	81
Preset.....	82
Audio.....	83
Video.....	83
Video encoder.....	83
Video Streaming.....	84
(RTP) Multicast Streaming.....	85
Camera Settings.....	86
Video OSD.....	89
Output Format.....	90
SRT.....	91
Network.....	91
Network configure and port settings.....	91
Ethernet.....	92
DNS.....	92
NDI.....	93
System.....	93
License.....	93
Time.....	94
User.....	95
Update.....	95
Default and Reboot.....	95
APPENDIX D - CMOS SENSOR CHARACTERISTICS.....	96
APPENDIX E - DATASHEET (SPECIFICATIONS).....	97
SPECIFICATIONS CM70-NDI.....	97
APPENDIX F - LIST OF SUPPORT ARTICLES.....	98
Support articles NDI.....	99
Index.....	100

# INTRODUCTION

## Purpose of This Manual

This Manual describes the safety precautions and the instructions for safe unpackaging, installation, operation, maintenance and disposal of the Avonic CM70-NDI camera.



In this Manual, the Avonic CM70-NDI camera is referred to as the 'Product'.

## Target Audience

This Manual is developed for installation technicians who install the Product at client sites, and for IT professionals who are responsible for operating the Product.

## Document Structure

The Manual is subdivided into the following **Chapters**:

1. Introduction
2. Safety
3. Product Overview
4. Unpacking
5. Mounting and Installation
6. Operation
7. Maintenance
8. Transport and Storage
9. Disposal and Recycling
10. Troubleshooting

Additionally, it contains the following

- Appendix A - VISCA Settings and Command List
- Appendix B - Dimensions
- Appendix C - HTTP API
- Appendix D - CMOS Image Sensor Characteristics
- Appendix E - Datasheet (Specifications)
- Appendix F - List of Support Articles

# SAFETY INSTRUCTIONS

This chapter contains important safety information regarding the unpacking, installation and use of the camera.

## Intended Use

 See section [Intended Use and Non-Intended Use](#) on page iv for details.

### Important Precautions

	This Product is NOT intended for use where failure of the device could lead to death, personal injury, or severe environmental damage.
	Be sure that you have COMPLETELY READ and UNDERSTOOD ALL information in this Manual before unpacking, installing and using this Product. Keep the Manual in a safe place for future reference or download it from <a href="http://www.avonic.com">www.avonic.com</a> .
	Failure to follow the SAFETY NOTES as described in this chapter could result in fire, electric shock, injury, or damage to this Product or other property.
	Power this Product ONLY with the included cable and power adapter. Other adapters may not meet applicable safety standards, and could pose a risk of death or injury when connected.

### Handling

-  To prevent the risk of injury, take the following precautions when handling this Product:
- Handle the Product with care. It is made of metal, glass, and plastic and has sensitive electronic components inside.
  - The Product can be damaged if dropped, burned, punctured or crushed, or if it comes into contact with liquid.
  - Do not pick up and move the Product unit while a tripod is attached. The fitting may break under the weight of the tripod, which may result in injury.
  - If you suspect any damage to the Product, discontinue its use, as it may cause overheating or injury.

### Mounting

-  To prevent the Product from falling down which may cause injuries:
- Set up this Product on a hard, stable surface or mount it to a wall or ceiling.
  - ONLY use an Avonic mount for mounting to a wall or ceiling.
  - Ensure the mounting construction is capable of supporting four times the weight of the Product. (See 'General Specifications > Weight product' in the Product Datasheet for the exact weight.)
  - Use a safety loop or drop protection that prevents the Product from falling if the mounting construction fails.
  - During installation, NEVER install a Product above a person.
  - Check the installation at least once a year. An improper mounting could cause the unit to fall off, resulting in personal injury.

## Ventilation



To prevent the risk of life-threatening injury or damage to the Product or other property, caused by electric shock or fire hazard due to overheating:

- Maintain adequate ventilation by NOT installing or placing the Product unit in a bookcase, built-in cabinet or any other confined space.
- Ensure that curtains or any other material does NOT obstruct the ventilation.

## Repair



Take the following precautions if the Product should be repaired:

- Don't open this Product and don't attempt to repair it yourself. Disassembling the Product may damage it or may cause injury to you.
- If this Product is damaged, malfunctioning, or if it comes into contact with liquid, contact Avonic or an Avonic Authorized Service Provider.
- Repairs by service providers other than Avonic or an Avonic Authorized Service Provider may not involve the use of Avonic genuine parts and may affect the safety and functionality of the device. You can find more information about repairs and service at [www.avonic.com](http://www.avonic.com).

## Power and Adapter



To prevent the risk of life-threatening injury or damage to the Product or other property, caused by electric shock or fire hazard:

- Power this Product ONLY with the included cable and power adapter. Other adapters may not meet the applicable safety standards. They could pose a risk of death or injury when connected.
- Do NOT use damaged cables.
- Do NOT power the Product in a moist / wet environment.
- Before you power the Product, ensure the cable is fully inserted into the power adapter.
- Plug the power adapter directly into a power outlet.
- Do NOT use the power adapter at a moist / wet location.
- Do NOT connector disconnect the power adapter with wet hands.
- Keep the Product, cable, and power adapter in a dry and well-ventilated area when in use.
- Stop using the power adapter and any cables if any of the following conditions exist:
  - The power adapter plug or prongs are damaged.
  - The cable becomes frayed or otherwise damaged.
  - The power adapter is exposed to excessive moisture, or liquid is spilled into it.
  - The power adapter has been dropped, and its enclosure is damaged.

## Atmospheric Conditions



To prevent the risk of injury or damage to the Product or other property caused by a potentially explosive atmosphere:

- Do NOT use this Product in an area with a potentially explosive atmosphere, such as areas where the air contains high levels of flammable chemicals, vapors, or particles (such as grain, dust, or metal powders), may be hazardous.
- Exposing this Product to environments having high concentrations of industrial chemicals, including near evaporating liquified gasses such as helium, may damage or impair this Product functionality.
- Obey all signs and instructions.

# PRODUCT OVERVIEW

## Description

The CM70-NDI is a high-quality PTZ camera with concurrent HDMI, 3G-SDI, USB 2.0 and IP stream ethernet outputs.

The CM70-NDI is equipped with NewTek's high-efficient IP technology called NDI® | HX. This all-in-one PTZ camera from Avonic allows the move to an all IP infrastructure even for mobile applications. With IP deployment on existing networks all cameras detected within your network become directly available for use without complex configuration. Video, audio, control and power all with PoE connecting your CM70-NDI camera to hundreds of systems, devices and applications that support NDI.

The CM70-NDI includes a rich feature set known from the CM70 series and has the ability to deliver outstanding quality even under low light conditions. The combination of a high-quality PTZ camera with a protocol that improves every live production give the CM70-NDI endless possibilities.



## Features

The Avonic CM70-NDI camera has the following features:

### Lens

High-quality glass lens, 20x optical zoom and 55.2° horizontal field of view.

### Low Light

High SNR CMOS combined with Digital Noise Reduction (DNR) for a clear picture, even under very low light conditions.

### Full HD 1080p60

Full HD 1920 x 1080p60 resolution and Pristine image quality.

### IP-features

The camera can be powered using Ethernet port with PoE (802.3af) functionality, accessed via WebGUI and controlled by VISCA over IP / Onvif and stream video.

### DUAL low latency IP-Stream

H265, H264, optional SRT and MJPEG compression at a bitrate up to 40Mbit, thus enabling Full HD video stream by ultra-low latency over RTSP, RTMP, UDP, Unicast, Multicast and NDI® | HX support.

### Outputs

3G-SDI, HDMI, USB 2.0 (1080p30) and IP.

### Control

Camera control using common protocols: VISCA, Pelco-D / P via RS-232, RS-485, IP (VISCA, NDI® | HX), Onvif or IR.

### Audio embedding

Balanced audio input with embedding into IP stream, SDI and HDMI outputs.

### Optional Premium features

Optional premium features: SRT streaming, Tally light, configurable Color Matrix. License AV-LC70-1 (sold separately).

# UNPACKING

This describes the contents of a complete Product package, and instructions for safe unpacking and (if necessary) Product return.

It is subdivided into the following sections:

1. Package Contents
2. Handling Precautions
3. Unpacking the Camera
4. Return Procedure

## Package Contents

The following tables contains an overview of the package contents of the Product.

No.	Quantity	Description	Avonic SKU
1	1 pc	PTZ Camera	AV-CM70-NDI-W/B
2	1 pc	Remote Control	AV-CM40-RC
3	1 pc	USB cable type A to type A	AV-USB20-AA
4	1 pc	Power Adapter 12V/A (GME Technology (Shenzhen) Co., Ltd , model number: GME24A - 120200FDS2)	AV-CM40-PSU
5	1 pc	RS-232 9-pin D-Sub female to DIN -8 male	AV-CM-RS-232
6	1 pc	5-way Phoenix Balanced audio con. (CTBP92HE/5)	AV-PHNX-5
7	1 pc	2-way Phoenix RS-485 connector	AV-PHNX-2

Each item is visualized below and referenced by the associated number in the table above:



Figure 4: Package Contents

## Power Supply Usage



Use only the Power Adapter of GME Technology (Shenzhen) Co., Ltd with model number: GME24A - 120200FDS2. See also number 4 in the package contents above.

## Handling Precautions



Always take the camera by its base and do **not** move the position of the lens manually. See below.

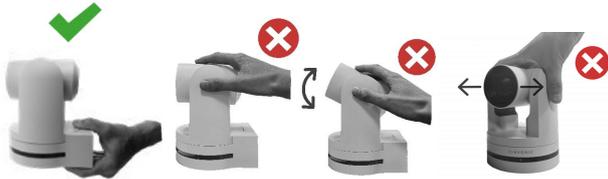


Figure 5: Handling Precautions

## Unpacking the Camera



Execute the following steps to unpack the camera and associated components:

1. Open the box.
2. Verify that the contents of the box exactly matches the items as described in [Package Contents](#). If this is NOT the case, contact Avonic and stop here.

The camera should be in its protective foam as follows:



Figure 6: Camera in Foam

3. Verify that the plastic camera bag is sealed. If this is NOT the case, contact Avonic and stop here.
4. Break the seal of the sealed camera bag.
5. Take the camera out of the bag. Be sure to follow the [Handling Precautions](#) on page 14 while doing so.
6. Install the camera following the steps as described in the chapter [MOUNTING AND INSTALLATION](#) on page 15

## Return Procedure



If, for any reason, you have to return the camera to Avonic, Execute the following steps:

1. Place the camera back in its protective foam. Verify that the lens is in HORIZONTAL position!
2. Place the camera with **all** of its components in the box.
3. Verify that the contents of the box **exactly** matches the items as described in [Package Contents](#).
4. Contact [Avonic](#) for the Return Procedure.

# MOUNTING AND INSTALLATION

This chapter describes the steps you have to perform to mount and install the Product in a correct and safe manner.

These steps are subdivided into the following groups, each of which is described in a separate section:

1. Mounting on Wall or Ceiling
2. Connecting the Components to the Camera
3. Connecting a Controller to a Camera
4. Connecting the camera to a local network



Take the following precautions to prevent the Product from falling down which may cause injuries:

- Set up this Product on a hard, stable surface, or mount it to a wall or ceiling.
- ONLY use an Avonic mount for mounting to a wall or ceiling.
- Ensure the mounting construction is capable of supporting four times the weight of the Product. (See 'General Specifications > Weight product' in the Product Datasheet for the exact weight.)
- Use a safety loop or drop protection that prevents the Product from falling if the mounting construction fails.
- During mounting and installation, NEVER install a Product above a person.
- Check the installation at least once a year. An improper mounting could cause the unit to fall off, resulting in personal injury.

## Mounting on Wall or Ceiling

The following accessories (AV-MT200 and AV-MT250) are separately available if the client wants to mount the camera to the wall or ceiling. Contact your Avonic reseller or local distributor for purchasing details.



### Wall and Ceiling mount (AV-MT200)

SKU white: AV-MT200-W

SKU black: AV-MT200-B



### Ceiling mount (AV-MT250)

SKU white: AV-MT250-W

SKU black: AV-MT250-B



Visit [www.avonic.com](http://www.avonic.com) to download instructions for mounting the camera to the wall or ceiling using the accessories AV-MT200 or AV-MT250.

## Connecting the Components to the Camera



Execute the following steps to connect the components to the camera:

1. Connect all provided components (see [Package Contents](#)) to the ports at the rear of the camera. The figure below shows the applicable ports.

	<ol style="list-style-type: none"> <li>1. Kensington Lock</li> <li>2. Balanced Audio Line in 5-pin Phoenix connector</li> <li>3. RS-485 two-wire serial communication with 2-pin Phoenix connector</li> <li>4. System Select (see <a href="#">Using the System Select</a>)</li> <li>5. RS-232 mini-DIN-8 IN (connect the supplied RS-232 cable)</li> <li>6. RS-232 mini-DIN-8 OUT for daisy chaining RS-232 connection</li> <li>7. BNC 3G-SDI output, SMPTE 425M level A.</li> <li>8. HDMI Type A</li> <li>9. USB2.0 Type A, UVC video output and control</li> <li>10. RJ45 Ethernet connection, with PoE, NDI®   HX certified (48Vdc, 0.25A, comply with LPS/PS2 circuits)</li> <li>11. DC 12V power with locking screw (connect the supplied DC PSU)</li> <li>12. Power ON/OFF</li> <li>13. Fall protection eye</li> </ol>
--	--

Figure 7: Camera Ports

2. If you have connected the power cable to the camera, set the power switch at the back of the camera to 'ON'. If you use a PoE Ethernet connection instead, ensure that the Power switch is always 'ON'. After empowering the camera, it starts initializing by first rotating the Pan-Tilt to the maximum top right position and then to the center.



**If position preset '0' has been stored, this is the position that will be called after initialization.**

The current IR-channel setting and IP Address of the camera are displayed on the [OSD Menu](#). From this point onwards, the user can start controlling the camera.

### Balanced Audio Connection

To connect balanced audio to the camera, you need the following:

- Double Male XLR cable with the possibility to connect it to a 5 pins phoenix connector (CTBP92HE/5: see [package contents](#)).
- Audio input device with multiple XLR input/ outputs, such as a mixer. (It is also possible to use audio over HDMI: see [Embedded audio and and CM70 USB video output](#) on the website and scroll down.)
- PoE (CAT) cable for streaming. See below:






Follow the instructions below to connect the audio cable to the phoenix and the XLR connectors.

1. Connect the wires of the audio cable as is shown in picture 1 to both XLR connectors. Note that the pictures of the connector's back are **mirrored!**
2. Connect the wires of the other side of the audio cable as is shown in picture 2.




Take note that the colors of the wires could be different in your audio cable according to the pictures (XLR and Phoenix connector) below. You need to know which one are the right and left channels and which one is the GND (ground).

Picture 1: XLR connector

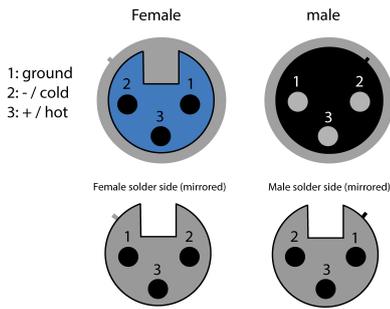

Picture 2: Phoenix connector

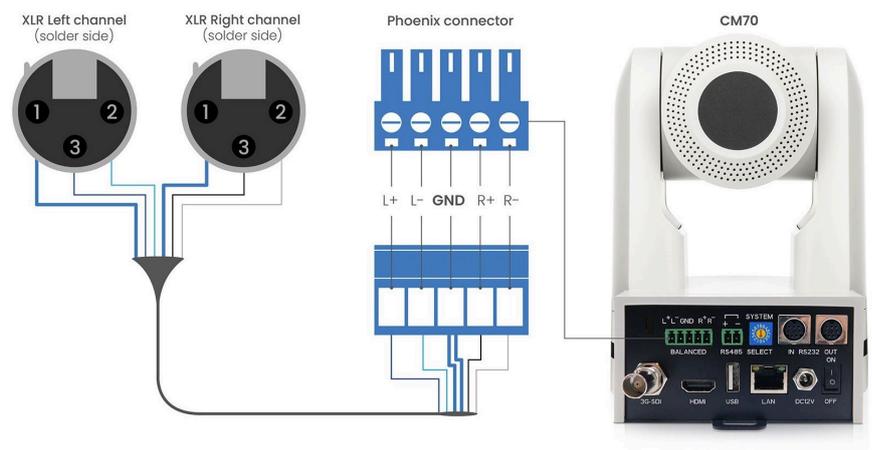

## Connecting a Controller to a Camera

You can connect one or more cameras to an VISCA (serial) controller.



See <https://avonic.com/en/product-categorie/controllers/> for an overview of the available controllers.

A controller gives you direct control over the most important camera settings (e.g., Pan, Tilt, Zoom, Focus, White Balance). You can access all other settings through the [OSD Menu](#) of the camera using the controller.

### Connecting via USB, HDMI or SDI



Execute the following steps to connect the camera to a desktop or a (computer) monitor via USB, HDMI or SDI:

1. Connect the camera to the desktop or monitor via the USB, HDMI or SDI port (see figure above).
2. Open the Windows Camera app or a third-party camera app.
3. Open the Settings.
4. Select the camera you just connected, or click on the option / icon to change the camera to the camera you just connected.
5. Press the [MENU](#) button on the provided IR Remote Control to open the [OSD Menu](#).



See [Using the Remote Control](#) for more information on how to use the Remote Control.

## Serial Connecting via RS-232 or RS-485

### COM Port Settings

In default working mode, the camera can connect to a VISCA controller via an RS-232 or RS-485 serial interface. The applicable COM port settings are (where '\*' stands for 'Default value'):

#### RS-232

- Baudrate: 2400/4800/9600\*/115200
- Start bit: 1 bit
- Data bit: 8 bits
- Stop bit: 1 bit

#### RS-485 (half-duplex mode)

- Baudrate: 2400/4800/9600\*
- Start bit: 1 bit
- Data bit: 8 bits
- Stop bit: 1 bit

### RS-232 Interface



Connect the controller to the back of the camera via the RS-232 cables as shown below:

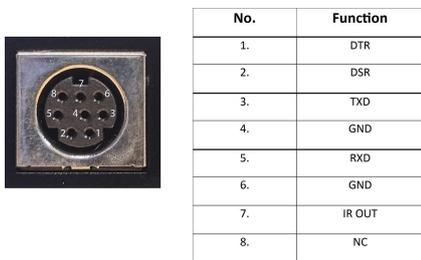


Figure 8: RS-232 Interface (Mini DIN-8)

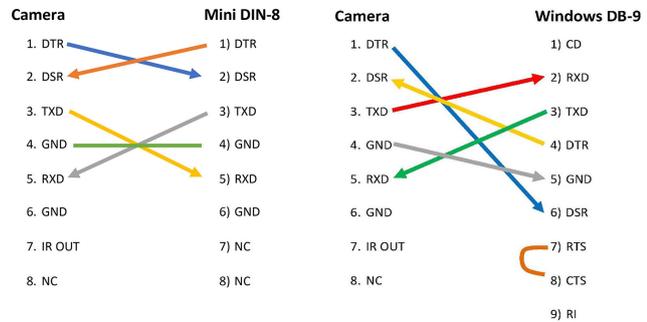


Figure 9: RS-232 Cable and Interface Connection (Mini DIN-8 and Windows DB-9)

### RS-232 Network Connection



Execute the following step to connect the controller to the back of the camera(s) via RS-232:

1. Make the connection using **daisy chaining** network architecture. Keep in mind that the maximum cable length for RS-232 is 10-15m.

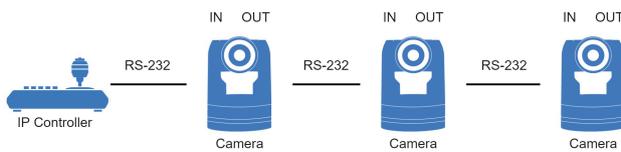


Figure 10: RS-232 Network Connection Diagram

### RS-485 Interface



Connect the controller to the + and - at the back of the camera via the RS-485 cables, as shown below. Note that the color of the connecting cables (red and black in the figure) may vary.



Figure 11: RS-485 Interface

## RS-485 Network Connection



Execute the following steps to connect multiple cameras to RS-485:

1. Attach the cameras to a 2-wire twisted pair bus (maximum length 1200m) that is terminated at both ends with a 120Ω-impedance resistor.
2. Ensure that the maximum distance from the bus to the back of the camera or controller is 5m. If you use only ONE camera, the impedance resistor is not needed.

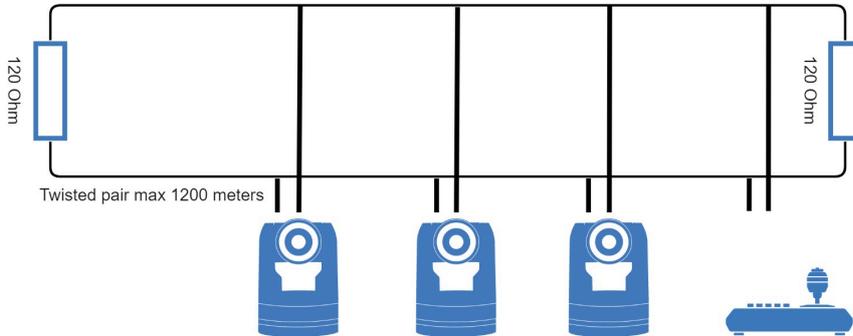


Figure 12: RS-485 Network Connection Diagram

## Connecting via NDI® | HX/ LAN

The NDI® | HX connection allows you to connect and control your Avonic NDI® | HX camera through compatible hardware or software on your local network (LAN). Once the camera is installed on the local network (LAN) it is possible to use the NDI® | HX connection.

For installation use, downloading and installing the NewTek NDI Tools pack will provide a useful array of practical tools and utilities. The pack can be downloaded at <https://www.newtek.com/ndi/applications/>

## Settings

By default, the IP address of the camera is "192.168.5.163" with "admin" for both the username and password.

The control parameters for the CM70-IP series cameras are as follows:

- IP Address: 192.168.5.163
- Username: admin
- Password: admin
- TCP or UDP port: 1259

## IP (Network) Connection



Execute the following steps an Avonic PoE camera to a LAN:

1. Use a standard (PoE) switch. If the unit is simultaneously connected to both PoE and its own power supply, the power supply will take priority. If the power supply is disconnected when PoE is present, the camera will remain operational without interruption.
2. Ensure that addressing is done via IP. When using VISCA over IP, the 'x' in all the '8x' addresses is always '1', where the Visca address in a Visca over IP environment is always 1. (See [Appendix A - VISCA Settings and Command List](#) for more information.)

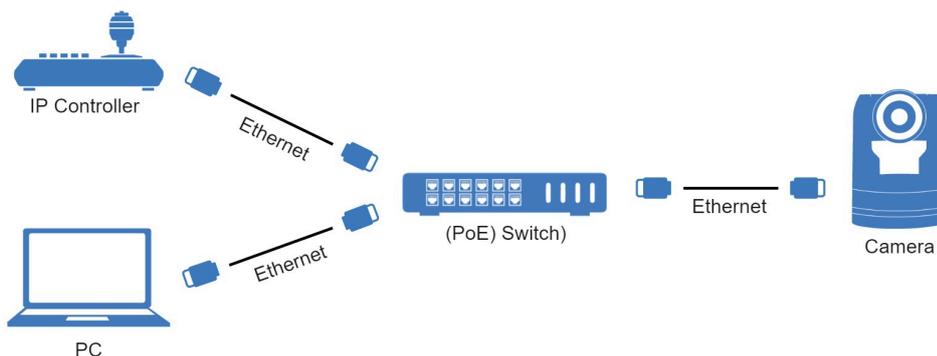


Figure 13: IP Network Connection Diagram

# OPERATION

This chapter describes all the camera features to help you to understand how the camera can be used. This is subdivided into the following sections:

1. [WebGUI](#)
2. [Using the Remote Control](#)
3. [Other Key Combinations](#)
4. [OSD Menu](#)
5. [Using the System Select](#)



If you want to read more about the functionality of the camera than is documented in this chapter, it is recommend to read the [support articles](#) from the list in appendix F.

## WebGUI

You can access change settings in the camera by using the WebGUI. The WebGUI can be accessed over IP using your local network.

### Optional Features

For this Product there are some optional features in the WebGUI that are only available when you purchase an optional license. This optional license ([LC70-1](#)) is available at the accessories page of our website. The following features are optional:

1. [SRT \(Secure Reliable Transport\)](#) see also [SRT](#) on the website
2. [CCM \(Customizable Color Matrix\)](#)
3. [Tally Light functionality](#)

### Login

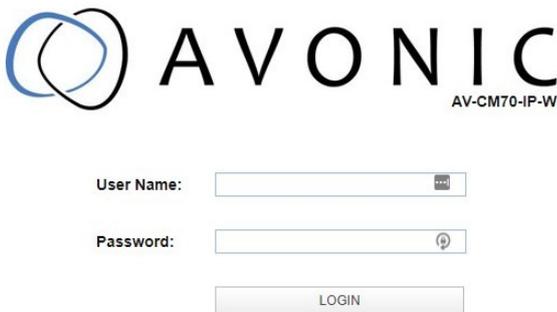


Figure 14: WebGUI > Login



Execute the following steps to log on to the WebGUI:

1. Open your web browser. Enter the default IP address "192.168.5.163". The "Login" screen appears.
2. Enter "admin" for both the Username and Password and Click **LOGIN** to continue. There is also a possibility to automatically fill in the Username and Password (see [User](#)).



- If **DHCP** is enabled and no **DHCP** server is available, the camera will automatically appoint an IPv4 link-local address between **169.254.0.0** and **169.254.255.255**. The IP address is shown on the screen at start-up
- If you don't know the cameras IP address read: [How do I know the IP address assigned to my camera?](#)

After a successful logon, the WebGUI is displayed. Here, you can select various tabs that are described below.

## First time usage

If you are using the camera for the first time, it is helpful for you first to setup the basic camera settings before explaining the functionalities of the camera in detail. According to the light conditions in your room or on stage, you can follow instructions at:

1. [Basic Camera Setup](#)
2. [Basic Camera Setup using \(semi\)manual settings](#)

## Basic Camera Setup

Do you have changing light conditions? Follow then the instructions below to set up the basic camera settings. After that you can read more about the functionality in this chapter.

<h3>1. Connect cables</h3> <ul style="list-style-type: none"> <li>Connect a CAT6a cable to the ethernet port of the camera and a (PoE) network switch. If you use a standard switch, connect also the power cable.</li> <li>Connect a HDMI cable to the camera and a monitor.</li> <li>Turn the ON/OFF button at the back of the camera to ON. When the camera starts, the lens will turn from back to forth and will finish with the lens straight forward. This will take a few seconds.</li> </ul>	
<h3>2. Login and change output resolution</h3> <ul style="list-style-type: none"> <li>Use the <a href="#">standard IP address</a> and login to the WebGUI.</li> <li>Navigate to Output Format and change the video out format when your monitor does not support the standard video resolution (1080p60). Click SAVE to save the new resolution format.</li> <li>You can also use the <a href="#">System Select</a> at the back of the camera to change the video output format.</li> </ul>	
<h3>1. Focus</h3> <ul style="list-style-type: none"> <li>Navigate to Video &gt; Camera Settings &gt; Focus in the WebGUI.</li> <li>Choose Focus Mode &gt; Auto</li> <li>At <b>AF-Zone</b> choose Education Tracking, Moving Objects or Meeting. This depends on the person or object to be filmed: <ul style="list-style-type: none"> <li><b>Education Tracking:</b> For a person or object that is moving a lot left to right and vice versa in the room or on stage.</li> <li><b>Moving Objects:</b> For a person or object that is moving a lot in any direction in the room or on stage.</li> <li><b>Meeting:</b> for general meeting purposes where the person or object in the room or on stage is not moving a lot.</li> </ul> </li> <li>If you have chosen education tracking or moving objects, set the <b>AF-Sensitivity</b> to high. You can leave it to low or middle when you have chosen Meeting at AF-Zone.</li> </ul>	
<h3>2. Exposure</h3> <p>Navigate to <a href="#">Exposure</a> tab and set the <a href="#">Gain Limit</a> (G.Limit). The higher the Gain Limit, the lighter will become the picture.</p>	

### 3. Color

Navigate to the **Color** tab and set the **WB Mode** to Auto.




### 4. Image

Navigate to **Image** tab and set the **sharpness**. The higher the number, the more sharp the picture will become.



### 5. Noise Reduction

Navigate to **Noise Reduction** tab and set the **NR-2D** to Auto.

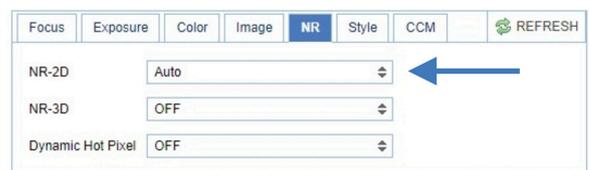

## Basic camera setup using (semi)manual settings

Do you have fixed light conditions? Or is the filmed person or object not clear towards the background and the autofocus has difficulties to find the correct focus? Then a (semi)manual setup is useful. Follow the instructions below:


### 1. Connect cables

- Connect a CAT6a cable to the ethernet port of the camera and a (PoE) network switch. If you use a standard switch, connect also the power cable.
- Connect a HDMI cable to the camera and a monitor.
- Turn the ON/OFF button at the back of the camera to ON. When the camera starts, the lens will turn from back to forth and will finish with the lens straight forward. This will take a few seconds.




### 2. Login and change output resolution

- Use the **standard IP address** and login to the WebGUI.
- Navigate to Output Format and change the video out format when your monitor does not support the standard video resolution (1080p60). Click SAVE to save the new resolution format.
- You can also use the **System Select** at the back of the camera to change the video output format.

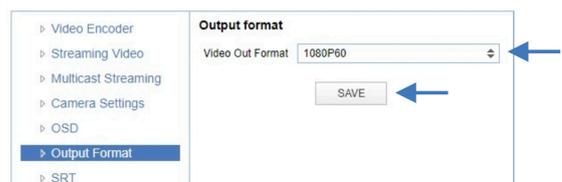

### 1. Focus

- Navigate to Video > Camera Settings > Focus
- If you have difficulties to focus, choose Focus Mode > Manual. Otherwise set the **Focus Mode** to Auto and choose at AF-Zone > Education Tracking/ Moving Objects if the filmed person or object is moving a lot, or Meeting for general meeting purposes.
- Set the **AF-Sensitivity** to high if you have chosen Education Tracking or Moving Objects. Otherwise you can leave it to low.

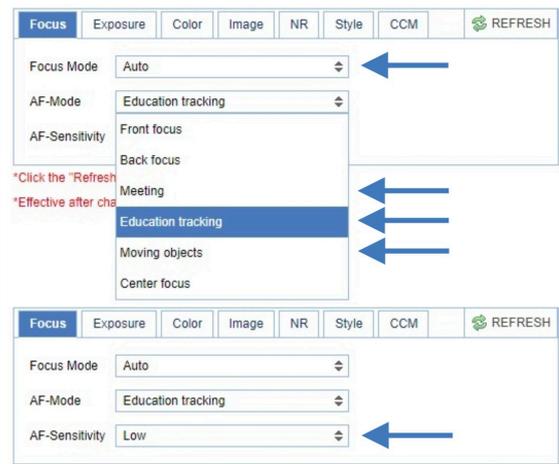


### 2. Exposure

- Navigate to the Exposure tab
- Choose one of the following at Mode:
  - **SAE**: Do you have fast moving persons or objects before the camera? Choose this mode to set the shutter speed.
  - **AAE**: Do you need more depth of field, because the distance between the camera and filmed object is large? Choose this mode to set the Iris (F-stop).
  - **Bright**: Do you have challenging light conditions? Choose this mode to set the artificial brightness.
  - **Manual**: Do you have fast moving person or object on large distance? Choose Manual to set the shutter speed and the Iris (F-stop).



### 3. Color

- Navigate to the Color tab
- Choose at **WB Mode** one of the White Balance values (2400K ~ 7100K).
  - Do you have a lot of yellow light? Set the value of the WB Mode approximately between the 5000K and 7100K.
  - Do you have a lot of blue light? Set the value of the WB Mode approximately between the 2400K and 3300K.
- If needed change the **Hue** to compensate.

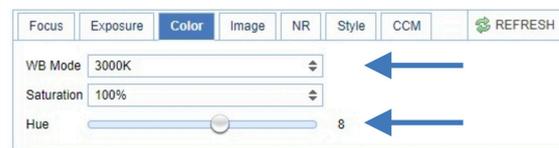

### 4. Image

- Navigate to the Image tab and set the **sharpness**.
- If needed change also the **bright** and **contrast** settings to add more brightness to the picture.



### 5. Noise Reduction

- Do you have a lot of noise in the picture? Navigate to the Noise Reduction tab and change the **NR-2D** (still-standing objects) and the **NR-3D** (moving objects) to smooth the picture over.



## Preview (LOCAL)

In this tab, you can see a preview of the camera IP video output.

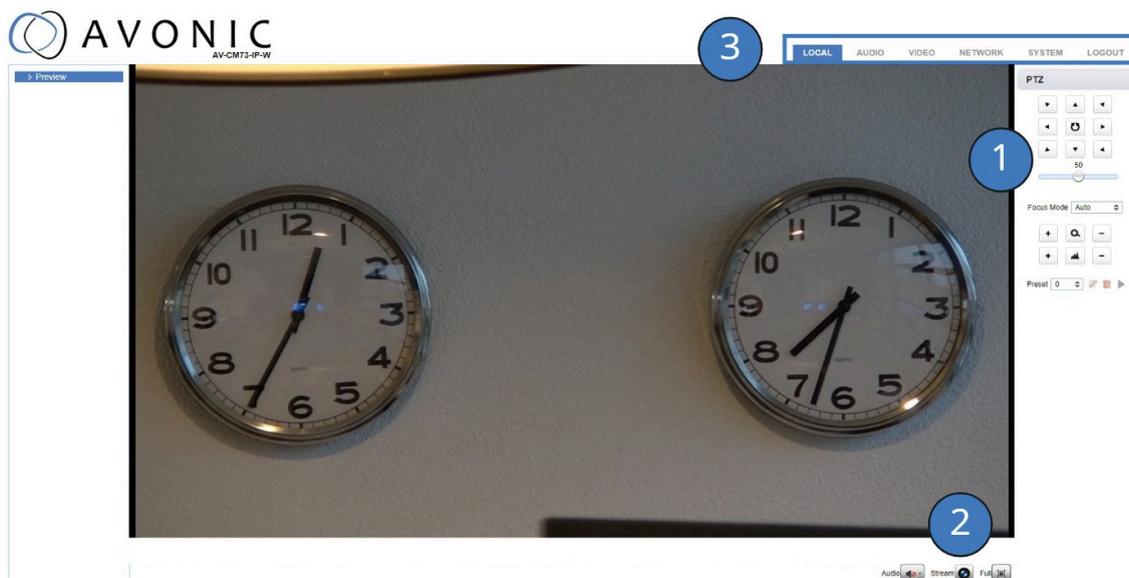


Figure 15: WebGUI > Preview

Next to the preview you see:

1. PTZ keys to move the lens of the camera and Focus keys (works only when the focus is set to manual). You can adjust the PTZ speed (the speed when the camera moves) by using the bar below the PTZ keys.
2. • Audio icon to set the audio to ON (Connect first an audio cable to the [balanced audio](#) input of the camera). Note that you first have enabled the [Audio Enable](#) at the Audio tab of the WebGUI.
  - Stream icon to switch the main and sub stream. Click the icon to switch to the sub stream and click again to turn back to the main stream.
  - Click the Full icon to switch to full screen. Press ESC to turn back to WebGUI Preview.
3. On top: The main tabs to enter different pages of the WebGUI.



The Preview feature works **ONLY** if the main or sub stream is set to 'H264' (see [VIDEO - Camera Settings](#)).

## Set, Call and delete presets




To set, call and delete presets do the following:

1. Set the camera in the desired position with the desired zoom and focus level.
2. Type the number of the preset under Preset and click on the **SET** icon.
3. To call a preset, select the number of that preset and click the **RUN** icon.
4. To delete a preset, select the preset number of that preset and click the **CLEAR** icon.

The presets stores the Pan, Tilt and position as well as zoom level (no exposure, or white balance settings). If manual focus is chosen, the focus position is also stored. If you use preset 0 to set a preset, note that when you start the camera again, the lens will automatically move to the camera position of preset 0 after the camera has started. Delete preset 0 to start the camera with the lens straight forward.

Next to the preset icons there is also a "Home" icon (at the center of the PTZ buttons). If you click on that icon, the camera will zoom out and moves to a position with the lens straight forward. The "Home" icon cannot be used as a (normal) preset and affects, like the presets, only the Pan, Tilt and Zoom position of the camera.

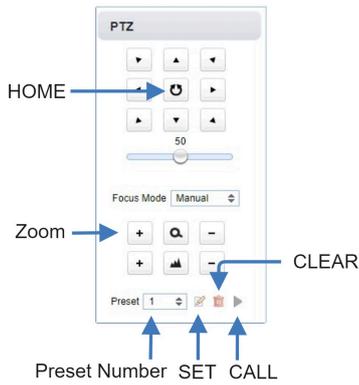

## AUDIO



Connect first an audio cable with XLR connectors to the 5 pins Phoenix connector and connect the cable to the camera. See [Balanced Audio Connection](#) on page 16

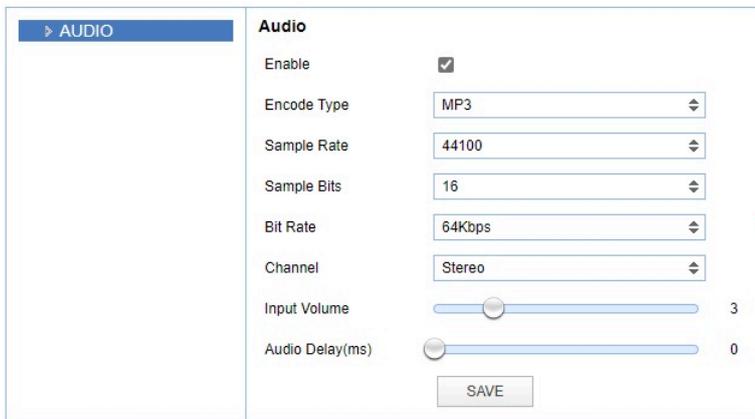


Figure 16: WebGUI > Audio




Make your settings as follows:

1. Enable (checked) or disable (blank) embedding of audio input (camera rear).
2. Select the encoding type: mp3, AAC or G.711A.
3. Select the sample rate: 16000, 32000, 44100 or 48000.
4. Set the sample bits always to 16.
5. Select the Bitrate: 32, 48, 64, 96 or 128 Kbps.
6. Select the Channel: Mono or Stereo.
7. Set the Input Volume: 1 ~ 10.
8. Set the Audio Delay (ms): 0 ~ 200.
9. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.



Make sure to **enable audio** and to click at the **audio** button on the bottom of the "Preview page" of the WebGUI.

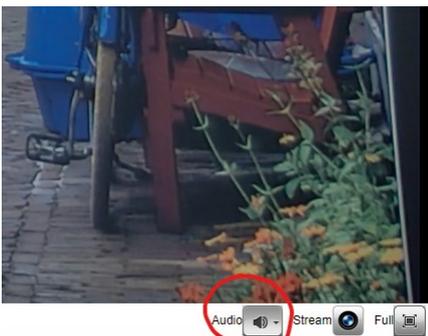

## VIDEO

You can use the VIDEO tabs (described below) to define your settings for the video output, including the main settings of the camera's OSD.

### VIDEO - Video Encoder

Figure 17: WebGUI > VIDEO > Video Encoder

The Video Encoder settings are listed below.

Video Encoder Option	Main Stream	Sub Stream
Compressed Format	MJPEG/ H.264/ H265	MJPEG/ H.264/ H265
Profile	BP/ MP/HP	BP/ MP/HP
Image Size	1920*1080/1280*720	1920*1080/1280*720/ 320*180/ 320*240/ 640*360
Rate Control	CBR (constant bit rate) / VBR (variable bit rate) depending on format	
Image quality	Fixed at 'best'	Fixed at 'good'
Bit Rate(Kb/s)	64-40960	64-40960
Frame Rate (F/s)	5-60 frames per second	5-30 frames per second
I FrameInterval	1-300	1-150
I Framemin. QP	10-51	10-51
Streamname	live/av0	live/av1
RTSP Link	rtsp://<ip-address>/live/av0	rtsp://<ip-address>/live/av1
RTP Package	Small Package (standard MTU size, 1500 bytes) Big Package (approx. 60kb MTU size)	



NDI uses the **Main Stream** of the camera. Execute the following steps to save your settings:

1. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.
2. Reboot the camera if you changed RTP package.



Read this [article](#) from Youtube and the [article](#) from Facebook for setting up a correct stream, if you want to stream via Youtube or Facebook.

## VIDEO - Streaming Video

Figure 18: WebGUI > VIDEO > Streaming Video

The recommended Streaming Video settings are listed below. See for more [Streaming](#) on the website.

Stream Option	Main Stream	Sub Stream
<b>Enable</b>	Mark checkbox to enable	Mark checkbox to enable
<b>Protocol Type</b>	RTMP, SRT	RTMP, SRT
<b>Host Address</b>	192.168.5.11	192.168.5.11
<b>Host Port</b>	1935	1935
<b>Stream Name</b>	live/av0	live/av1
<b>User Name</b>	Empty is default setting	Empty is default setting
<b>Password</b>	Empty is default setting	Empty is default setting
<b>Password for stream encryption*</b>	Empty is default setting	Empty is default setting
<b>Crypto Key Length in bytes</b>	0, 16, 24, 32	0, 16, 24, 32




Execute the following steps to save your settings:

1. Mark the checkbox to enable and select RTMP or SRT as Protocol Type. Note that you need an [optional license](#) if you want to use SRT.
2. (\* in the table ) Enter a value for **Password for stream encryption** if the selected **Protocol Type** is "SRT". Note that this is the **Caller Mode**. For the **Listener Mode** see [Video - SRT](#).
3. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.
4. Start an video streaming application like VLC mediaplayer, Daum Potplayer etc. to stream the video.

## VIDEO - Multicast Streaming

If you want to stream your video (live) to a selective group of hosts inside a network, then multicast streaming is recommend. Multicast streaming allows you to send data (video) to a group of hosts in a network simultaneously with limited network load. For this you need a connection to a switch with the possibility for multicast streaming to send video stream. A connection of the clients to this multicast switch is needed to request the video stream from the switch. See the picture below:

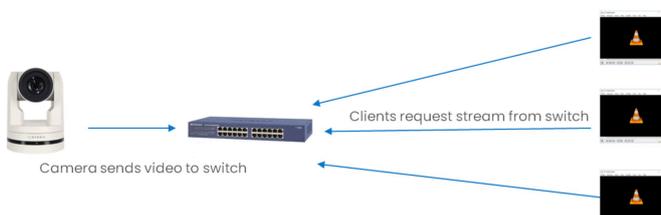

Next to multicast, there is also unicast allowing you to stream video (via RTSP) to one single users IP address. For more information read also [Unicast, Multicast and Broadcast](#) on the website.

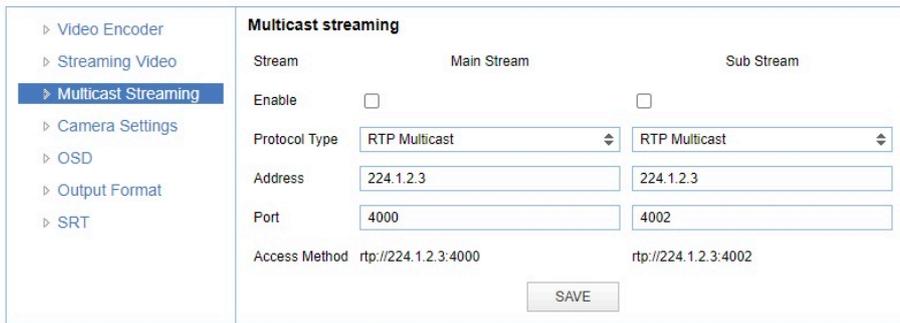


Figure 19: WebGUI > VIDEO > Multicast Streaming

The recommended Multicast Streaming settings are listed below.

Stream Option	Main Stream	Sub Stream
<b>Enable</b>	Mark checkbox to enable/ disable	Mark checkbox to enable/ disable
<b>Protocol Type</b>	RTP Multicast/ TS Multicast/ TS Unicast	RTP/ TS Multicast/ TS Unicast
<b>Address (multicast)</b>	224.0.0.0~ 239.255.255.255	224.0.0.0~ 239.255.255.255
<b>Address (unicast)</b>	Specify the IP address to which you want the Unicast stream pushed.	
<b>Port</b>	4000 (default)	4002 (default)
<b>Access Method</b>	rtp://224.1.2.3:4000	rtp://224.1.2.3:4002



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

## VIDEO - Camera Settings

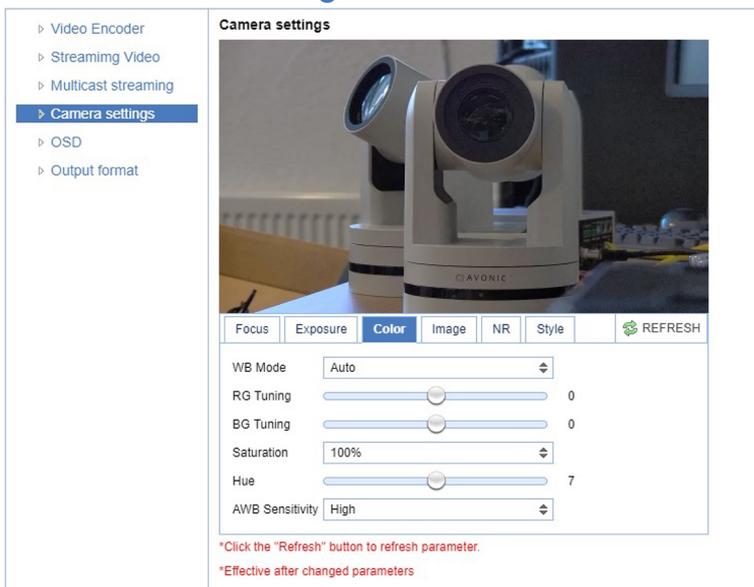


Figure 20: WebGUI > VIDEO > Camera Settings



Execute the following steps to define your camera settings:

1. Use the **Camera Settings** tabs (described below) to change the OSD settings as if you are using the remote control.
2. If you have changed a value with the remote control, update the WebGUI using the **REFRESH** button.



A picture is shown **ONLY** if the main video stream is set to H264.

## Focus

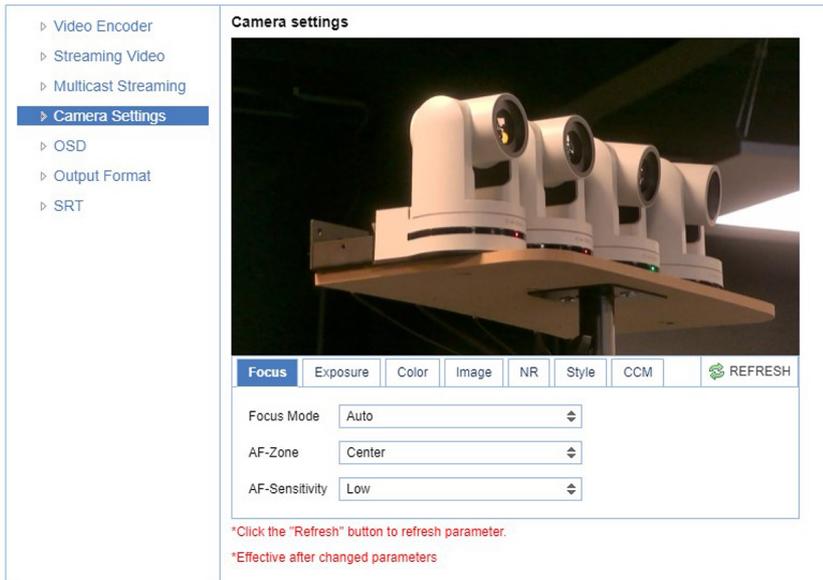


Figure 21: WebGUI > VIDEO > Camera Settings > Focus

The Focus settings are explained below.

### Focus Mode

<b>Auto</b>	The camera determines the focus position and will adjust to the contents of the filmed object.
<b>Manual</b>	The user is able to set a fixed focus position manually. This can be useful when the contents of the filmed object are not clear towards the background and the autofocus has difficulty finding the correct focusing.
<b>One-push</b>	The camera will focus once and will keep the focus in that position until another focus command is sent.

### AF-Zone

This setting defines the area where the autofocus is aimed at. Note that this setting is not visible at manual focus.

<b>Front Focus:</b>	Focus close to the camera has priority. If there is no object or person to focus on from close, the camera will focus on an object or person further away.
<b>Back Focus:</b>	Focus far from the camera has priority. If there is no object or person to focus on from far away, the camera will focus on an object or person closer to the camera.
<b>Meeting:</b>	For general meeting scenarios. Focus straight before the camera, but focussing in the whole room or stage is considered.
<b>Education Tracking:</b>	* For focussing in the whole room or on stage, but when the object or person before the camera moves from left to right, or vice versa, no re-focussing is happening. This feature is recommend when you are using your camera for educational purposes.
<b>Moving Objects:</b>	For focussing in the whole room or on stage, but re-focussing is done when the object or person is moving around.
<b>Center Focus:</b>	Focus straight forward at the middle of the room or on stage and re-focussing is done when the object or person moves.



\*This feature will NOT literally track/follow a person in the room or on stage.

## AF-sensitivity

Sets the level of speed with which the autofocus responds. This can be useful if you have people walking through the picture. If the setting is 'High', the camera will respond immediately. If the setting is 'Low' or 'Medium', the camera will not react to sudden and short changes in the picture.



Note that in some cases the autofocus will have some difficulties to focus. We strongly recommend to focus manually to avoid autofocus issues. See also the Troubleshooting/ Image in this manual.

## Exposure

If you click in the field after the option 'mode', you will see that you have the following Exposure options: Auto, Manual, SAE, AAE and Bright. These options are described below.

### Auto Exposure Mode

In Automatic exposure mode, the camera determines the iris and shutter settings. See the settings below:

### EV (Exposure Value): ON/OFF and Level

If the light conditions require this, you can create a quick adjustment to your current exposure settings without actually changing the fundamental values like iris and shutter.



Take care to not 'overdo' the settings or the picture will become washed out bright or too dark.

### BLC (Back Light Compensation): ON/OFF

Compensation for having to film against bright light directly into the lens. See the pictures below:

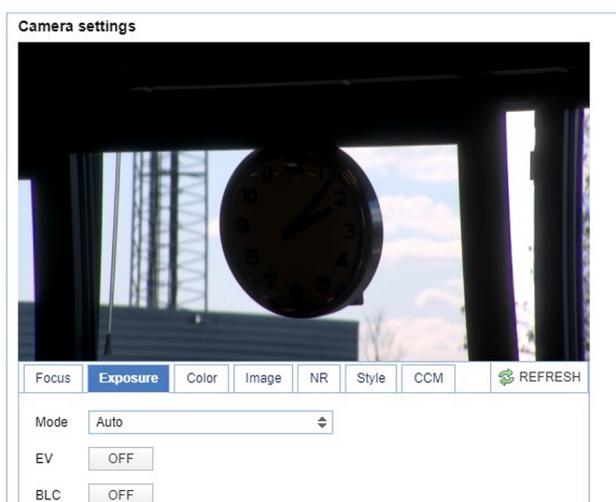


Figure 22: Camera Settings > Auto Expo (BLC OFF)

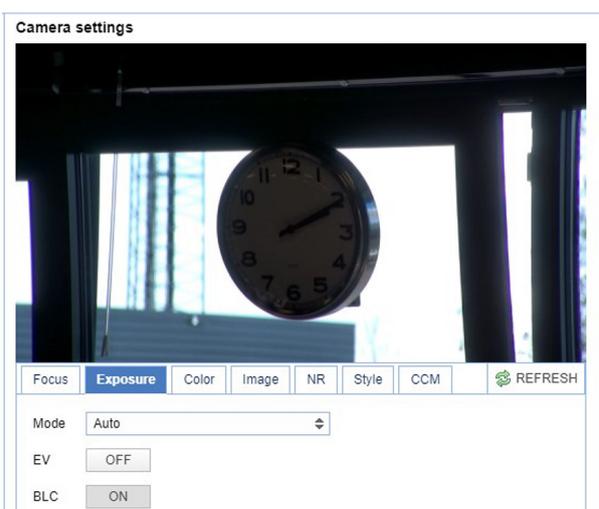


Figure 23: Camera Settings > Auto Expo (BLC ON)

## Flicker

This setting handles the flickering of artificial lighting in its operating space. Options are 50Hz, 60Hz and OFF. See for more [Antiflickering](#) on the website.

## G.Limit

Gain limit is the maximum level of artificial brightness and contrast that the camera can automatically add to the image. This setting will make a significant difference to the overall picture.



This setting add noise to the picture in dark areas and produce a washed out, greyish picture.

## DRC

Dynamic Range Compression has a similar effect on the picture as the above mentioned gain limit. The DRC works by compressing the natural dynamic range of the image by taking out the darkest and lightest parts. This can be a particular helpful setting when the light conditions are challenging. The differences should be clearly visible in dark parts of the image, as they will become lighter/more grey as the level of DRC increases.

## Manual Exposure Mode



Figure 24: WebGUI > VIDEO > Camera Settings > Manual Exposure Mode

In Manual exposure mode, you can manually set the shutter, Iris and DRC options.

### Shutter

The shutter setting determines the amount of time per second that the sensor is exposed. The range of the shutter speed setting is 1/25th of a second (40 milliseconds) to 1/10000th of a second (0.1 milliseconds). If you shoot a video with a shutter time of 1/25th of a second, you can imagine that the video becomes blurry and overexposed. The faster the shutter is set to open and close, the sharper your filmed object will become. However, the amount of light that falls onto the sensor is also diminished. A higher shutter setting comes in handy when you have regularly a fast moving person or object before the camera. Otherwise keep the shutter as low as possible.



If you are inexperienced or if the light conditions change a lot, it's best practice to keep the camera on the automatic exposure setting.

### Iris

The Iris is a part of a lens that regulates the amount of light that passes through the lens and onto the sensor, by altering the diameter of the hole through which the light enters. The diameter of the hole is measured in **F-stop** value. A higher value results in less light, while a lower setting results in more light. This setting affects the length of the depth of field. The higher F-stop you use, the deeper your depth of field. Reason: the smaller the aperture, the more focused the light beams will be, resulting in a more focused image. This means that the light beams are so "concentrated" that the focus point of the lens is at an area far from the lens (making the camera in the picture sharp), but the object at the front (the IR remote control) will be not in the focus area and become out of focus. A higher F-stop value comes in handy when the filmed person or object is in great distance from the camera (and zooming in more is not possible). At the other side the lower F-stop values are useful when the filmed person or object is close to the camera.



Figure 25: Exposure > Manual with Iris F2.0 (left) and Iris F6.8 (right)

### DRC

Dynamic Range Compression has a similar effect on the picture as the above mentioned gain limit. The DRC works by compressing the natural dynamic range of the image by taking out the darkest and lightest parts. This can be a particular helpful setting when the light conditions are challenging. The differences should be clearly visible in dark parts of the image, as they will become lighter/more grey as the level of DRC increases.

### SAE Mode (Shutter Auto Exposure)

The shutter speed is user-adjustable in this mode. The camera automatically decides the best Iris F-stop value for an optimal exposure setting. Note that this setting will come with a cost. The higher the shutter speed, the more sharp the picture become, but also the more dark the picture will be.



The shutter speed is the amount of time that each frame of the sensor has been exposed to light.

To compensate for poor lighting conditions, it is possible to adjust the Gain and DRC (Dynamic Range Compression). The DRC works by compressing the natural dynamic range of the image, by taking out the darkest and lightest parts. This can be a particular helpful setting when the light conditions are challenging. The differences should be clearly visible in dark parts, as they will become lighter / more grey as the level of DRC increases.

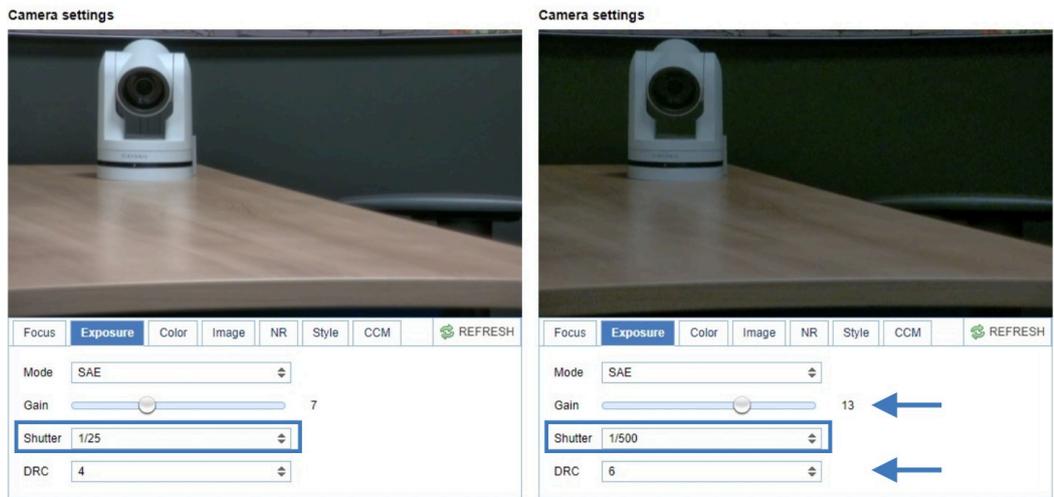


Figure 26: Exposure > Shutter speed at 1/25 (left) and 1/500 (right)

### AAE Mode (Aperture Auto Exposure)

In this mode you can set the Iris F-stop value (aperture). The higher the F-stop value, the deeper the depth of field you will become in the picture. The camera will automatically set the shutter speed based on the Iris F-stop set by the user. As the camera determines the preferable shutter speed, it is possible to turn the anti flicker setting to the required 50Hz or 60Hz to eliminate the effects of a shutter functioning at 1/50th of a second, for example. Like, with the shutter speed in SAE mode, there is a cost. The higher the F-stop value, the more dark the picture become. To compensate this you can set both the Gain Limit and the DRC.

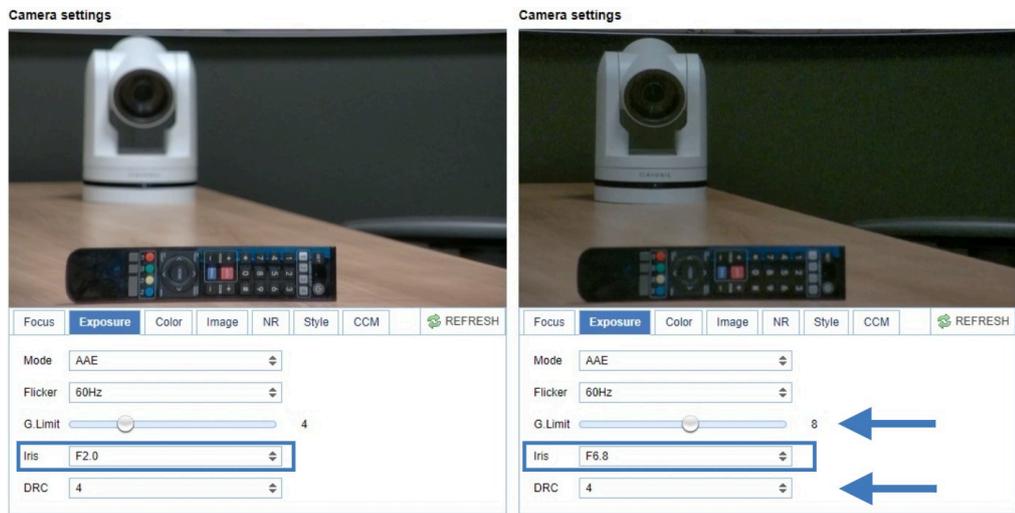


Figure 27: Exposure > AAE with Iris F1.8 (left) and Iris F6.8 (right)

## Bright Mode

This mode is to try and create a decent image when the light conditions are exceptionally poor.

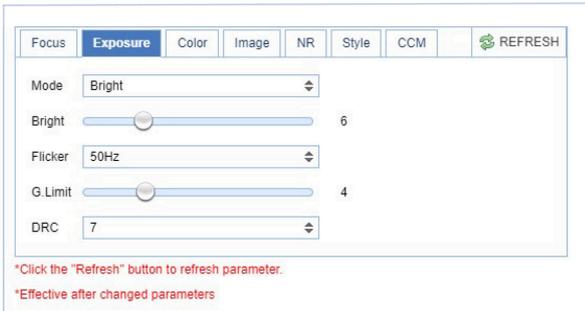


Figure 28: WebGUI > VIDEO > Camera Settings > Bright Exposure Mode

In this mode, you should keep the Bright level, Gain limit and DRC as low as possibly acceptable to avoid getting too much noise in the picture. If the level of noise in the image becomes unacceptable, you can use noise reduction to smooth the picture over.

## Color

The color modes inside the camera are designed in such a way that the video output of the camera can match the current light conditions to produce accurate colors. There are several automatic preset modes and a manual mode to set the colors to the preference of the user.


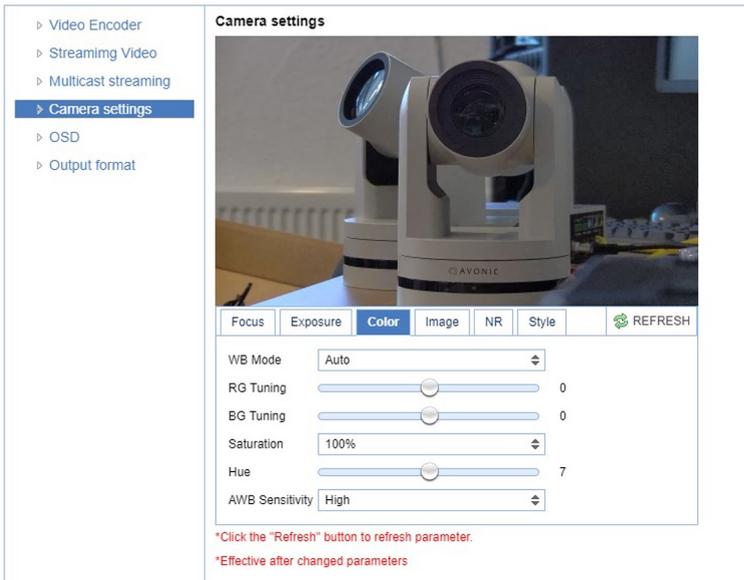


Figure 29: WebGUI > VIDEO > Camera Settings > Color

The settings are listed below.

<b>WB mode</b>	The camera continuously measures and defines the light conditions and acts accordingly (Auto). In this mode, there are some adjustments that can be made to tune the image to the preference of the user (in manual or when the white balance is set to a specific value).
<b>RG Tuning</b>	Red Gain Tuning, increase or decrease red.
<b>BG Tuning</b>	Blue Gain Tuning, increase or decrease blue.
<b>Saturation</b>	How saturated the image's colors are. 0% would produce a black and white image.
<b>Hue or tint</b>	The balance between green and red. 0 is green, 14 is red.
<b>AWB Sensitivity</b>	This setting indicates how quickly the camera responds to changing light settings.

## Image

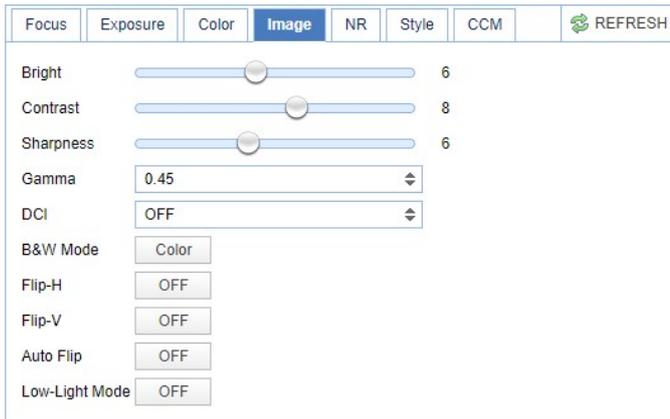

\*Click the "Refresh" button to refresh parameter.

\*Effective after changed parameters


Figure 30: WebGUI > VIDEO > Camera Settings > Image

These are settings that have an effect on the image post-processing. Basically, these settings are all artificial: they don't affect the optical parts of the camera itself.

The settings are listed below.

<b>Bright</b>	The amount of detail that is visible in darker areas of the image. Be careful not to set this setting too high, as you will see that the image becomes 'milky-white'!
<b>Contrast</b>	The amount of detail that is visible in lighter areas of the image.
<b>Sharpness</b>	Artificial contrast, be careful no to set this too high as it will create a sort of 'halo' around sharp edges of filmed objects. The setting of sharpness coincides with the setting of noise reduction.
<b>Gamma</b>	The gamma curve selection has to do with the perception of the human eye to lighter and darker. If you select a higher rate of gamma, you will see that the picture become darker, but you get also more detail.
<b>DCI</b>	The Dynamic Contrast affects the contrast of the picture. The higher the number, the more contrast you will get.
<b>B&amp;W Mode</b>	Black and White Mode makes the picture black and white.
<b>Flip-H, Flip-V, Auto flip</b>	The Flip-H mode turns the picture horizontally, while the Flip-V mode turns it vertically by 180 degrees. When Auto Flip is on, the camera will automatically flip the picture horizontal and vertical.
<b>Low-Light Mode</b>	The Low-Light mode is present to be able to film when the environment in which the camera sits is almost completely dark. The frame rate will drop to 10 frames per second, to catch as much light on the sensor as possible. If this mode is needed to produce a picture, add more light to the scene to get better results.

## NR (Noise Reduction)

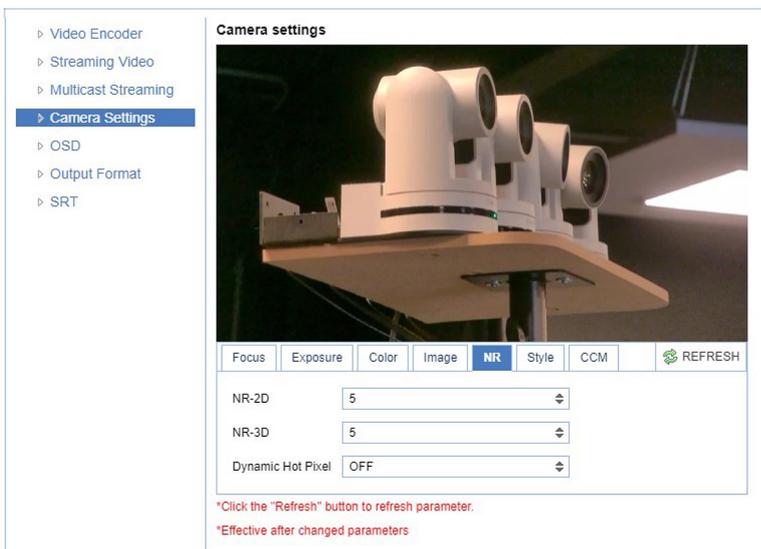

\*Click the "Refresh" button to refresh parameter.

\*Effective after changed parameters

Figure 31: WebGUI > VIDEO > Camera Settings > NR

Noise reduction can be used to soften the image when noise is present due to poor lighting conditions. The higher the amount of noise reduction, the softer the image will get, ultimately resulting in loss of details.

Be careful when adjusting the noise reduction, as it can take away the natural 'crispness' of the image. You will lose the natural 'crispness' of the image, if you set the dynamic contrast and gain too high (this will cause more noise). Better practice is to add light to the filmed object.

<b>NR-2D</b>	Used for still-standing objects.
<b>NR-3D</b>	Used for moving objects.
<b>Dynamic Hot Pixel</b>	A dynamic hot pixel is a defective pixel which look much brighter than they should and will sometimes become visible due to long exposure shots of the camera at a higher rate of light sensitivity. This is often visible as sparkles in the picture. The Dynamic Hot Pixels mode corrects the pixel so that the pixel will appear as normal on the filmed picture.

## Style



Figure 32: WebGUI > VIDEO > Camera Settings > Style

Here, you can choose the style you want, such as **Default** (standard setting), **Normal** (which makes the picture more 'natural'), **Clarity** (makes the picture more clear), **Bright** (which makes the picture more bright) and **Soft** (which softens the picture).

## CCM (Customizable Color Matrix)

If you have purchased the additional license for SRT and the Customizable Color Matrix (CCM), the Camera Settings menu will have an extra tab in the camera settings: CCM. With this feature you can match the colors from the Avonic CM70 series cameras with cameras from other manufacturers. The colormatrix is a 3x3 "table" that affects red, green and blue in the filmed picture and their relation to it.



1. Open **Video > Camera Settings > CCM**
2. Click on **Enable CCM** to enable this feature. You will see the default setting with a natural picture.
3. Read the paragraphs below first before you are changing these numbers!

### Camera settings




## Channels and Signals

The color matrix becomes visible when the CCM feature is enabled. It has a vertical and a horizontal Red, Green, Blue (RGB) row. By filling these with numbers it is possible to change the colors in the picture.



- Channels:** Horizontal RGB row. This **corresponds** with red, green and blue parts in the picture, but changes also secondary colors, because these colors are having some red, green and blue in them.
- Signals:** Vertical RGB column. This **subtracts or adds** red, green, blue from or to the filmed picture.

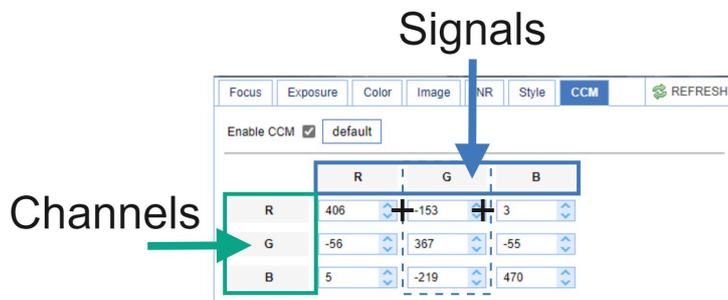

## Matching and finetuning colors

Matching and finetuning colors is not so simple as it looks. That is because changing colors in a camera works different if you compare it with painting. It is important that you realize that the cells from the sensor (photovoltaic cells) do not carry any color information, only **luminance** information. In other words: the cells will make colors in the picture **more brighten or darker** in such a way that the balance between the colors shifts.

You need to know also that the processor in the camera, for example, makes everything in the red parts red. That does not mean that everything in the red parts IS red! Even if there are a few pixels green or blue, the sensor sees it and will make them red as well. That is why colors can look different in a camera, then when you are painting.



- There is no database or any tutorial that can help to match colors between specific camera systems of different manufacturers. Every camera system works different and so the color matrix does. Changing a number in a cell, for example, in 256 in the matrix of the CM70 series camera, does not mean that this will change in exactly the same color in the picture from an another camera.
- Practice a lot to learn for yourself what the best settings are to match the colors between the CM70 series camera and a camera from an another manufacturer.
- Read the paragraphs "channels and signals," "subtracting and adding colors" to learn about the matrix.

## Subtracting colors

You can subtract colors using numbers **above or below** zero in the **same cell** or in a cell of the **same row**.


- For example: If you change the number in the green channel > Red signal in a number **above zero**, it means that you are subtracting the red signal from the green channel, making green parts purple, because the camera sensor removes red into the green parts of the picture. Red and yellow parts become more green, as the red signal is decreased leaving a green tint behind. If you have a sharp eye, you can see that other colors in the picture become slightly lighter. By changing the same number in a number **below zero**, you have the same result, but other colors in the picture become slightly darker.
- If the number in the Green channel > Green Signal is changed with the same amount as in the Green channel > Red signal, green is subtracted from the picture, removing the greenish tint from the yellow and red parts. This makes the colors as they were before, but less intense and darker (because **light** is removed and not color).




Remember that:

- +256** in G-R = Red signal is **subtracted** from the green channel, changing the balance between green and red towards green. This means that red pixels in the picture will turn slightly into green and since there a lot of red pixels are in red and yellow parts, a greenish tint is "left behind" in the picture. **+256** in G-G = Green is **subtracted** from the green channel, changing the balance between red and green as it was by removing the greenish tint from the picture. Light is removed from the picture, colors become less intense and darker.
- +256** in a cell makes the picture slightly lighter, while **-256** in a cell makes the picture slightly darker.
- Subtracting** a color from the picture affects the colors from the whole picture, because there are also pixels from that color in other colors in the picture even if you cannot see them. See the pictures below:

Red and yellow parts green. left: +256, right: -256

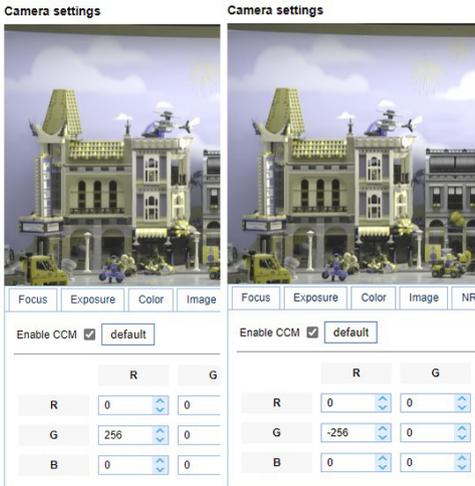

Without the greenish tint. left: +256, right: -256

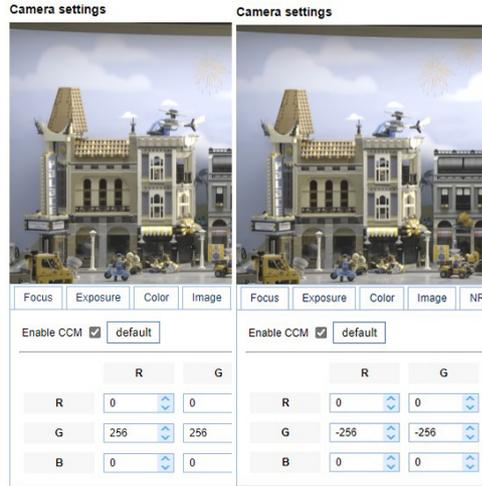

### Adding colors


You can add colors by changing the balance between the red, green and blue signals. A color will be added if a number above zero is used in one cell and a number below zero is used in another cell of the same channel, or if the cells of different signals and channels are filled with a number. For example:

1. By changing the number in the Blue channel > Red signal to a number above zero and in the Blue channel > Blue signal in a number below zero, you can add blue to the picture, resulting in purple in red and yellow parts and green in blue parts.
2. By doing the opposite, changing the number in the Blue channel > Red signal to a number **below** zero and in the Blue signal > Blue channel to a number **above** zero, you can add red to the picture. However, since zero in a cell is not nothing, the color green will be added too in this case! This means that red parts in the picture will not become (blood) red, but orange and yellow parts become more saturated. Also the difference between the number above zero and below zero will play a role. The greater the difference between the two numbers, the more color is added and the more saturated the picture will become.






1. Adding colors is possible by using a number **above** and **below** zero in the same channel (row).
2. The bigger the difference between the numbers **above** zero and **below** zero, the more color is added to the picture and the more saturated the picture become.
3. The colors that will be shown, depends on the **balance** between red, green and blue signals.

+256 red and -256 blue

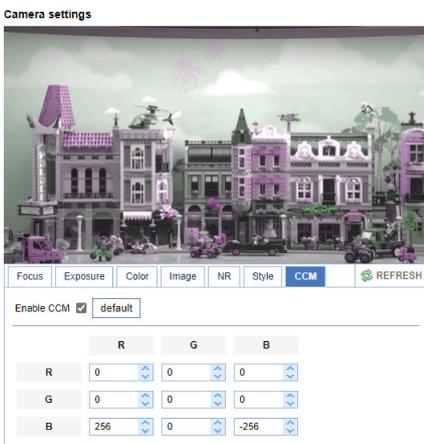

-512 red and +512 blue

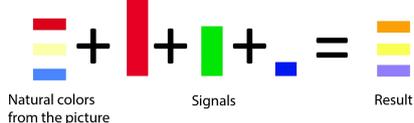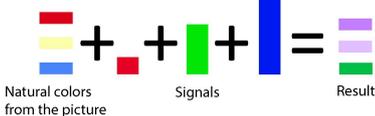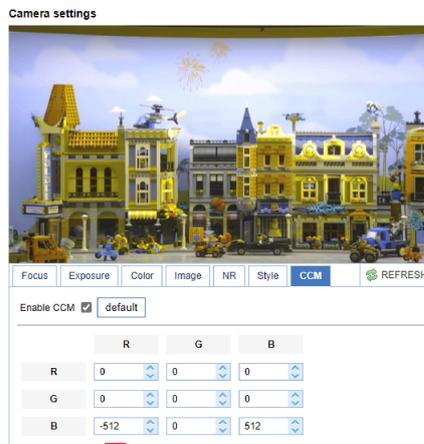

## VIDEO - OSD

- ▶ Video Encoder
- ▶ Streaming Video
- ▶ Multicast streaming
- ▶ Camera settings
- ▶ OSD
- ▶ Output format

**OSD**



Show Time      OSD Offset  Title  Time  
 Show Title  
 Time Font Color   
 Title Font Color

**OSD Font Size**

According to the resolution  Scale size automatically

Master Stream OSD Font Size

Slave Stream OSD Font Size

Figure 33: WebGUI > VIDEO > OSD

In this area, you can put a camera name and time as overlay on the IP stream (the overlay feature is exclusively available on the IP stream, not on other outputs).



**Note that only the output of the camera will be shown with the main stream set to H264.**

### Fields

You can enable or disable **Show Time** and **Show Title** can be enabled or disabled by marking or unmarking the checkbox next to the respective setting (the time and name settings can be found under the tab **SYSTEM**, sections **Attributes** and **Time**).

You can use the dropdown menus **Time Font Color** and **Title Font Color** to set the desired font colors.

You can use the directional arrows on the right to move the title and time to the preferred position on the screen.

### OSD Font Size (related to Camera Name and Time)

You can use **Scale size automatically** for both main stream and sub stream. If checked, the camera name and time overlay will always scale with the image, keeping the proportions intact.



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

## VIDEO - Output Format

Figure 34: WebGUI > VIDEO > Output Format

This setting is related to the output resolution and frame rate on the HDMI and SDI connectors.

Use the WebGUI to set the resolution of the main and sub IP streams. The resolution of the USB output is determined by the computer that is connected to it.



Click **SAVE** (not shown here) to apply your settings. A small confirmation dialogue appears in the bottom right corner.



Video output over IP cannot be a higher resolution than the physical SDI/HDMI output setting.

## VIDEO - SRT

These settings are related to SRT streaming protocol. SRT is **only** available when you purchase our [optional license](#). With SRT you can define the port, passkey and encryption bit.



When not using Encryption, please make sure to set the **Crypto key length** to 0.

SRT Listener Mode and Caller Mode are both supported. You can define the Listener mode settings here, whereas the Caller Mode settings can be defined in the [Streaming Video tab](#).

See the respective figures below for the Listener and Caller Mode Settings, respectively.

Figure 35: WebGUI > VIDEO > SRT (Listener Mode)

Stream	Main Stream	Sub Stream
Enable	<input type="checkbox"/>	<input type="checkbox"/>
Protocol Type	SRT	SRT
Host Address	192.168.5.11	192.168.5.11
Host Port	1935	1935
Stream Name	live/av0	live/av1
User Name		
Password		
Password for stream encryption		
Crypto key length in bytes	0	0

Figure 36: WebGUI > VIDEO > Streaming Video (Caller Mode)

## NETWORK



Use the tabs on the NETWORK screen to define the appropriate **Port**, **Ethernet** and **DNS** settings.

### Port Settings

Port Settings	
Port Data	3000
Port Web	80
Port Onvif	2000
Port Soap	1936
Port RTMP	1935
Port Rtsp	554
Port Visca	1259
Port WebSocket	8088

Figure 37: WebGUI > NETWORK > Port Settings

You can define specific ports for the different streaming outputs and protocols the camera supports.



**Make sure these settings don't interfere with other uses and services on the same network.**



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

### NETWORK - Ethernet

In this section, you can specify the IP settings for the Ethernet adapter.

Ethernet	
DHCP	<input type="checkbox"/>
IP Address	192.168.5.163
Subnet Mask	255.255.255.0
Default Gateway	192.168.178.1
MAC Address	98:14:D2:21:12:F0

Figure 38: WebGUI > NETWORK > Ethernet



Execute the following steps to save your settings:

1. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.
2. Reboot the camera.

## NETWORK - DNS

Here, you can specify the **Preferred** and **Alternative DNS Server**.

Figure 39: WebGUI > NETWORK > DNS



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

## NDI® | HX Settings

This part concerns the NDI® | HX functionality of your Avonic NDI® | HX camera. With the NDI enabled and NDI control enabled, you can easily control every device with NDI® | HX functionality in your IP network. See also [NDI Studio Tools](#) on the website and the [article list](#) in appendix F at the end of this manual.

<b>NDI Enable</b>	Checkmark box turns the NDI®   HX capability ON or OFF
<b>NDI Control Enable</b>	Enable/disable NDI®   HX functionality of your camera.
<b>Tally Light Enable</b>	Enable/disable tally light functionality. To do this you need an additional license with optional features (one of them is the tally light).
<b>NDI Name</b>	Is the name with which the camera presents itself to other NDI®   HX hardware or software on the local Network (LAN). This is useful for easy camera recognition.
<b>NDI Group</b>	Sometimes you want to limit visibility of NDI camera to specific systems. Or may need access to NDI cameras from another subnet. The NDI Access Manager lets you assign sources to groups, and choose which of these various systems receive. This setting sets up to which group this camera must belong.

## SYSTEM

You can use the **SYSTEM** tabs (described below) to define the desired system settings.

### License

Figure 40: WebGUI > SYSTEM > License

If you have purchased the license for the premium features of this camera, you can enter the License key here to unlock these features. **Reboot is not required as the license is instantly activated.** See for more information [How to register a license in a CM70 series.](#)



You can acquire a license through your local sales channel or directly at Avonic.



Execute the following steps to enter your license key:

1. Enter your license key in the **license** field.
2. Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner

## Attributes

Figure 41: WebGUI > SYSTEM > Attributes

Specifying a specific device name to be displayed in the OSD can be useful when using multiple cameras on the same LAN. The Device-ID is always 1 (addressing is done via IP). The language cannot be changed.



**The ONVIF protocol does NOT accept spaces in the camera name.**



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

## Time

Figure 42: WebGUI > SYSTEM > Time

You can **manually** set the time and date, or synchronize the time and date via a computer or an external server on the LAN or WAN.



Either click **SAVE** to apply your manual settings, or **SYNC** to synchronize the time and date.

## User



Figure 43: WebGUI > SYSTEM > User

You can define different users with specific permission levels and different username / passwords combinations. There are 2 levels of users: **administrators** with access to all features, and **user-1 and user-2** with access to the preview and PTZ controls. Click **SAVE** to apply your settings.

It is also possible to fill in automatically your user name and password using your browser. To do this save your username and password in your browser, enable the HTTP Basic Authentication and click **SAVE**. Read also [HTTP Basic Authentication](#) on the website for more.



Note that, if you enable the HTTP Basic Authentication (and save it), you **cannot** log out in the traditional way! To log out from the WebGUI, disable this option and **refresh** your browser. See the picture above.

## Update



Figure 44: WebGUI > SYSTEM > Update

By default, this screen shows a readout of the current firmware versions. The **Update file** provides a firmware upgrade functionality via this screen. When the camera is done uploading and processing the update, it will automatically reboot. See [How to update a CM40 or CM70 series camera](#) on the website for more information.



Execute the following steps to perform a firmware upgrade.

1. Click **Choose File** to select the firmware update file.
2. Click **UPGRADE** to start the firmware upgrade wizard.
3. Follow the steps in the wizard.
4. Wait until the process finishes and reboots.
5. Refresh your browser and log in again after the reboot.

## Default

If necessary, you can perform a factory reset. This restores all default settings. See also [How can I reset my CM40/CM70 camera from the WebGUI?](#) for more information. If you want only to reset the IP configuration (IP address, Gateway and DNS server) read [How to reset the IP Configuration in a CM40/CM70 camera](#).

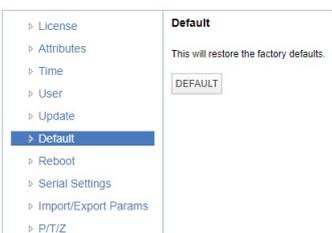


Figure 45: WebGUI > SYSTEM > Default



Click on the button **This will restore the factory defaults** to perform a factory reset. When completed, the camera automatically reboots. The camera will be ready for use again after the boot cycle.

## Reboot

If necessary, you can manually perform a camera reboot. It is also possible to create a new reboot schedule to automatically reboot the camera at any time you want.

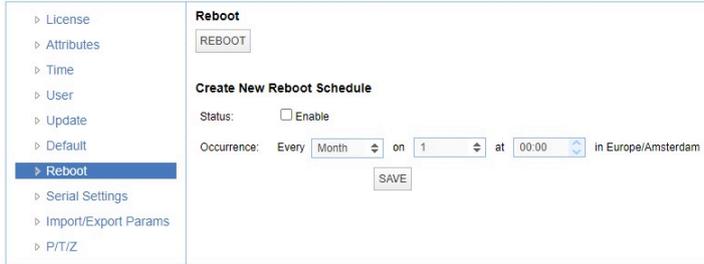


Figure 46: WebGUI > SYSTEM > Reboot



Click on the button **Reboot** to reboot the camera. It will be ready for use again after the boot cycle.



Follow instructions below if you want to create a new reboot schedule.

1. Enable "create new reboot: status".
2. Select at "occurrence" the month and day and select the time you want to reboot the camera. Take note that **Amsterdam/ European timezone** is used!

## Serial Settings

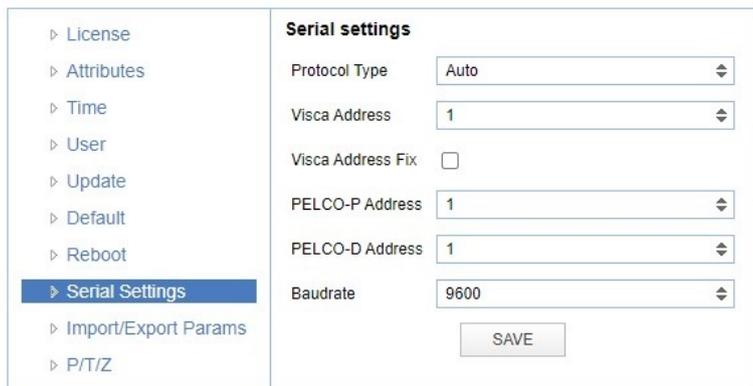


Figure 47: WebGUI > SYSTEM > Serial Settings

You can choose the preferred protocol to use and the accompanying address to go with it. Or you can select the default protocol type 'Auto' to let the camera detect which protocol is being used. Note that **addressing** is still needed, even with the automatic setting.



Click **SAVE** to apply your settings. A small confirmation dialogue appears in the bottom right corner.

## Import/Export Parameters



Figure 48: WebGUI > SYSTEM > Import/Export

The CM7x cameras have the ability to import or export a configuration.

Execute the following steps to import or export your configuration parameters:

1. Select the appropriate button to import or export your configuration parameters.
2. Follow the steps in the wizard that appears.

**The exported settings do NOT include any presets that are stored in the camera!**

## P/T/Z

Figure 49: WebGUI > SYSTEM > P/T/Z

In this window, you can define various P/T/Z settings for your camera. These are:

<b>PTZ Speed</b>	This increases the maximum pan and tilt speed. This can be useful in a conference system where quick action is necessary. The camera will produce slightly more noise when this setting is set to 'high'.
<b>Speed by zoom</b>	This mode affects PTZ speed when the camera is zoomed in to its max. If you move the stick of your controller when this mode is disabled, it will move too fast to control it. Enabling reduces this speed in relation to the current zoom factor.
<b>Image Freezing *</b>	You can freeze the image when the camera moves from one preset to another preset when you use your (remote) controller.
<b>Low Power Mode:</b>	The camera will go in stand by mode to reduce its power when this mode is enabled. In order to reduce the power the camera uses, the camera will shut down the IP Port. To activate the camera again, use a serial connection or the IR Remote to set off the Low Power Mode.
<b>Enable/ Disable Infrared Receiver:</b>	It is possible to enable/disable the Infrared Receiver. Note that, when you disable the Infrared Receiver and the Low Power Mode is enabled, it will <b>NOT</b> be possible to activate the camera again using the IR Remote Control!
<b>Zoom Speed</b>	You can set the speed to which the camera will zoom in to the image. The higher the number, the faster the camera will zoom in. This works only when the remote controller is used to control the camera.
<b>Preset Pan, Tilt and Zoom Speed</b>	This mode affects the speed to which the camera is switching from one preset to another when you use your (remote) controller. The higher the number, the faster it will switch.

\* If you are using audio during streaming, put it first **OFF** before freezing the image! Freezing the image could produce a paused audio output on the IP Stream. This leads to (audio) stuttering. The video stutters when it is re-engaged, but this is rather easily solvable by putting the iFrame value at 4 or 5 times per second, that is quick enough to counteract the video stutter.

## MJPEG Snapshot

The Avonic CM7x-IP cameras are equipped with a MJPEG snapshot feature to, for example, implement into third party software. Every time the page is refreshed, the picture will be updated.

To access the MJPEG snapshot feature, use the following format: <http://IP/img/capjpg/snapshot.jpg>. See also [MJPEG Snapshot](#) on the website.

## Using the Remote Control

The Product is provided with an IR Remote Control for full control of the camera and use of the OSD menu.



Figure 50: Remote Control

The various options (a. through n.) are described below.

### a. Power



1. Put two AAA 1.5v batteries in the IR Remote Control. Use **ONLY** this type of batteries! Using other type of batteries can damage the IR Remote Control.
2. Press the **Power** button to turn on the camera. If the position preset '0' has been stored, this will be called after initialization.
3. Press the **Power** button again to turn the camera off. It will turn to the back when turned off, this is called the "privacy mode".

### b. Set

This button has **no** function with this camera.

### c. Camera Select

Up to 4 different cameras can be controlled with one IR remote Control. You can use the **camera select** buttons [1,2,3,4] to select the IR channel that the remote control is using. The default camera IR channel is 1.



1. To control a camera on first use, select camera 1 (IR channel 1) on the remote control.
2. To control a second camera, you first need to change the IR channel stored in the camera from 1 to 2. Then do the following:
  - a. First turn off the other cameras in the room you don't want to change, to prevent that other cameras also get changed accidentally.
  - b. Select camera 1 on the remote control, because the camera is still configured to listen to IR channel 1.
  - c. Press [\*]→[#]→[F2] to change the IR channel inside the camera to IR channel 2. The camera will confirm this on the screen.
  - d. Select camera 2 on the remote control to control this camera.

Key Combinations: (Default IR address is 1)

[*]→[#]→[F1]	Camera Address No. 1
[*]→[#]→[F2]	Camera Address No. 2
[*]→[#]→[F3]	Camera Address No. 3
[*]→[#]→[F4]	Camera Address No. 4



The Function buttons F1, F2, F3 and F4 are the colored buttons on the remote.



Figure 51: Function Buttons on Remote

### d. Number Keys

The number keys are used to call presets.



Press the number [0-9] of the desired preset and the camera will respond accordingly (See 'h' on how to set & clear presets).

### e. Focus + -



1. Push the button [manual focus] first before using the focus buttons.
2. Focus the camera with the [+] and [-] button.  
If the camera does not respond, check if the camera is set to auto-focus.

### f. Auto/Manual Focus



Set the camera to 'auto focus' or 'manual focus'.  
If the camera is configured to 'auto focus', the buttons [Focus + -] are disabled.  
If the camera is in 'manual focus' and the **Zoom** buttons are used, the camera automatically switches to 'auto focus'.

### g. Zoom + -



Zoom the camera with these buttons.

## h. Set & Clear Preset

A preset is a specific position of a camera that you save in the camera. A preset is assigned to a number from 0-9.



1. To set a preset, first point the camera in a specific directing and a specific zoom position.
2. Assign the position to a number with the button **Set Preset**.
3. You can call the preset by pressing one of the numbers 0-9 on the remote control.

Set Preset: [SET PRESET]→[<number>]

Call Preset: [<number>]

Clear Preset: [CLEAR PRESET]→[<number>]

If the position preset '0' has been stored, this position will be called after initialization.



**Use ONLY presets between 0-9 when using the Remote Control. For presets 10 or higher you need a serial or IP connection!**

## i. PTZ Keys (up/down/left/right)



Use these keys to move the camera in the desired direction.

## j. Home



If you use this key, the camera will automatically turn to its start up position: the camera will zoom out and turns to a position with the lens straight forward. This affects only the Pan, Tilt and Zoom position and NOT the focus level of the camera, or exposure and white balance settings!

## k. BLC ON/OFF



Use this key to enable / disable the Back Light Compensation feature.

## l. Menu



1. Use the **Menu** button to open the **On Screen Display (OSD)** menu. This menu is visible on the HDMI/SDI output.
2. If the menu is not in English, press [\*]→[#]→[4] to change the Menu language into English.

## m. Function Keys (F1/F2/F3/F4)

Used to configure the IR channel of the camera. See '**c. Camera Select**' above for instructions.

## n. Blank Buttons

These buttons have NO function with this camera.

## Other Key Combinations

The following key combinations on the Remote Controller have specific functions. These are:

Combination	Function
[*] → [#] → [4]	Menu set to English
[*] → [#] → [6]	Restore factory defaults
[*] → [#] → [9]	Flip switch (just temporary flip to view the image flipped)
[*] → [#] → [Auto]	Enter into the aging mode, only for quality control purposes
[*] → [#] → [Manual]	Restore the default username, password, and IP address
[#] → [#] → [#]	Clear all presets
[#] → [#] → [0]	Switch the video format to 1080p60*
[#] → [#] → [1]	Switch the video format to 1080p50*
[#] → [#] → [2]	Switch the video format to 1080i60*
[#] → [#] → [3]	Switch the video format to 1080i50*
[#] → [#] → [4]	Switch the video format to 720p60*
[#] → [#] → [5]	Switch the video format to 720p50*
[#] → [#] → [6]	Switch the video format to 1080p30*
[#] → [#] → [7]	Switch the video format to 1080p25*
[#] → [#] → [8]	Switch the video format to 720p30*
[#] → [#] → [9]	Switch the video format to 720p25*



The camera returns to the video output setting of the system select after a reboot.



**Use ONLY presets between 0-9 when using the Remote Control. For presets 10 or higher you need a serial or IP connection!**

## Tally Light Functionality

When you have purchased the [optional license \(LC70-1\)](#) then the tally light of the camera is controllable. Without this the LED on the front of the camera cannot be controlled. Note that the tally light of the camera can **ONLY** be controlled through the VISCA commands. This is not possible through the WebGUI or the OSD menu of the camera. See for the commands [How to control a tally light on the CM70 series camera?](#) or the [VISCA commands](#) in appendix A in this manual.




## Enable tally light

To use the tally light functionality in the CM70-NDI camera, you need first to enable the tally light functionality.



Follow the instructions below:

1. Navigate to [Network > NDI](#) in the WebGUI
2. Enable **Tally Light Enable**. See the picture below:

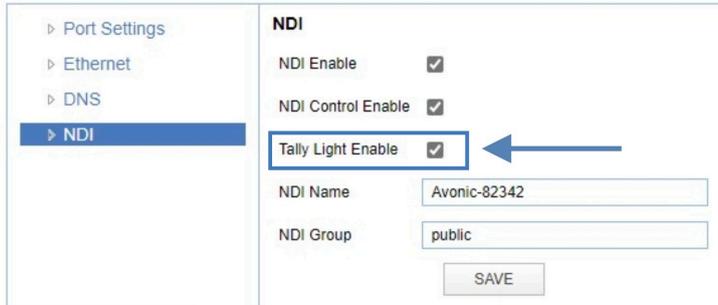

The screenshot shows the NDI configuration page in the WebGUI. On the left, a navigation menu lists 'Port Settings', 'Ethernet', 'DNS', and 'NDI', with 'NDI' selected. The main content area is titled 'NDI' and contains the following settings:

- NDI Enable
- NDI Control Enable
- Tally Light Enable  (highlighted with a blue box and an arrow)
- NDI Name: Avonic-82342
- NDI Group: public

A 'SAVE' button is located at the bottom of the configuration area.

## OSD Menu

Each camera is provided with an **On-Screen Display (OSD) Menu**.

This is an integrated on-screen menu that can be accessed within the camera to change specific functions that effect how the camera processes an image.

The OSD Menu is visible on the HDMI and SDI outputs.

The OSD menu can be accessed by the Remote Control or an Avonic PTZ controller. See also [How can I open the OSD menu of my camera on the website](#).

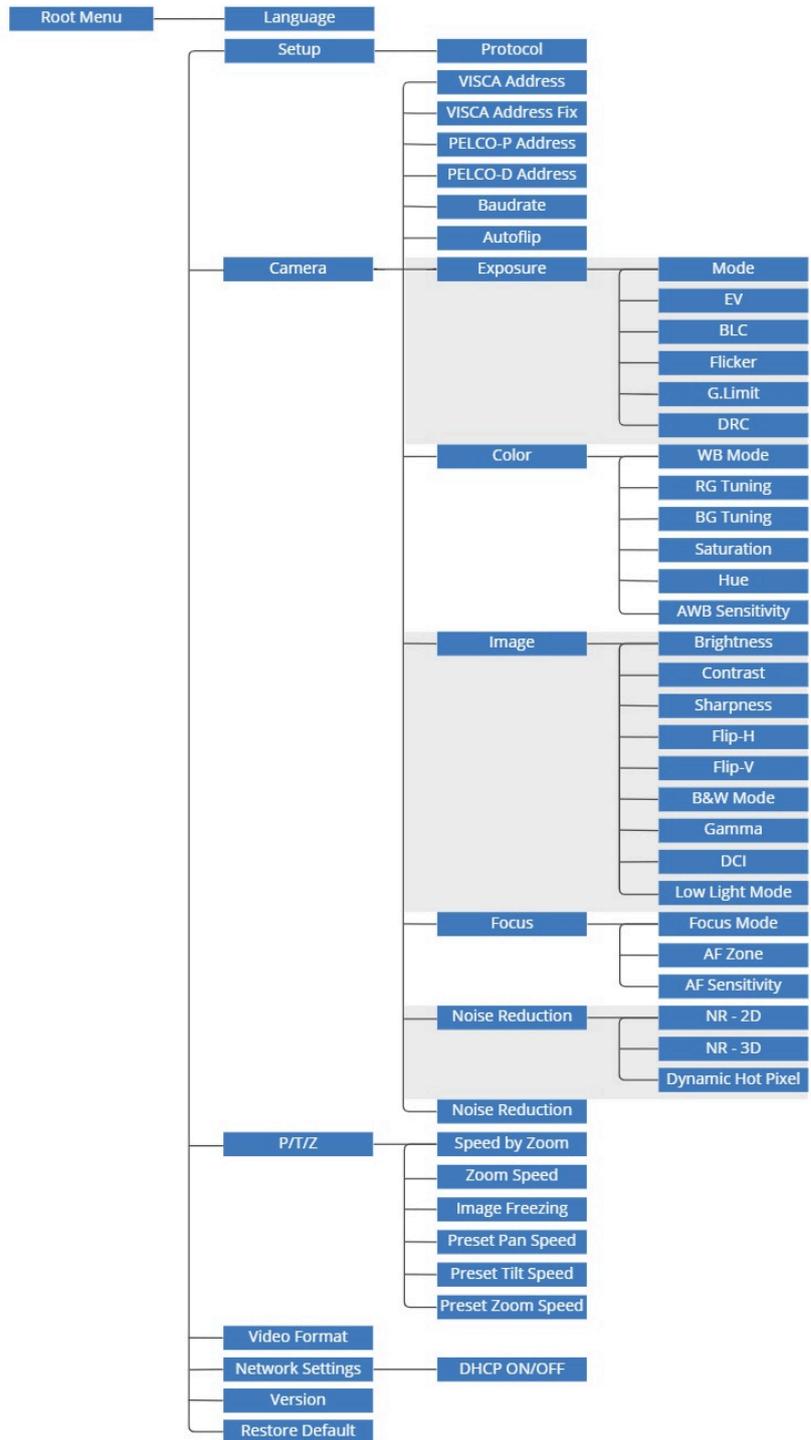


Figure 52: OSD menu structure

## 1. MENU

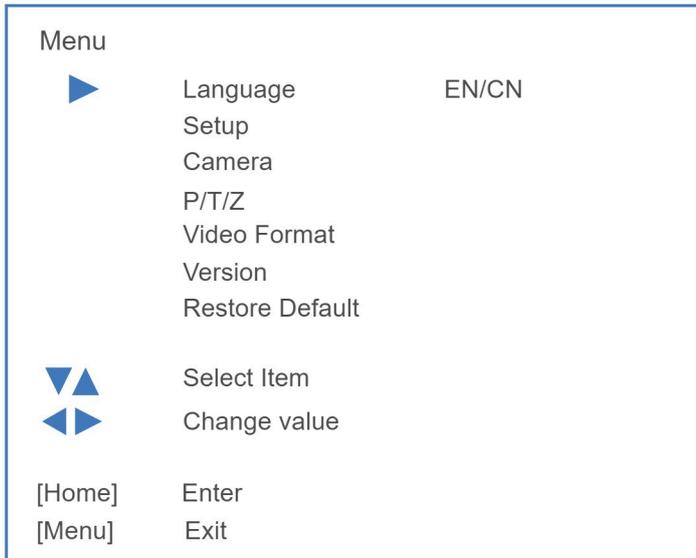


Figure 53: OSD - MENU



1. Press the **MENU** button to display the main menu on the screen.
2. Use the arrow buttons to move the cursor to the item to be set. Press the **HOME** button to enter the corresponding sub-menu.
3. Press [**◀▶**] to change settings. Press [**MENU**] again to go back.

## 2. SETUP



Figure 54: OSD - SETUP

## 3. CAMERA

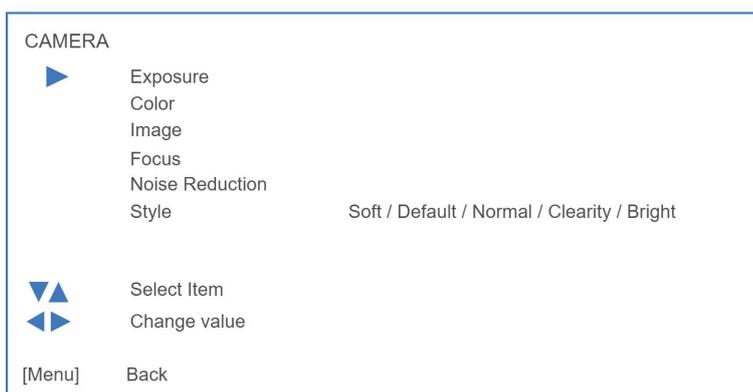


Figure 55: OSD - CAMERA

### 3.1 EXPOSURE

EXPOSURE		
▶	Mode	Auto / Manual / SAE / AAE / Bright
	Iris	F11 ~ F1.8 / Close
	Shutter	1/25 ~ 1/10000
	EV	ON / OFF
	EV Level	-7 ~ +7
	BLC	ON / OFF
	Flicker	50Hz / 60Hz / OFF
	G.Limit	0 ~ 15
	DRC	1 ~ 8 / CIOSE
⬇️⬆️	Select Item	
⬅️⬆️	Change value	
[Menu]	Back	

Figure 56: OSD - EXPOSURE

### 3.2 COLOR

COLOR		
▶	WB Mode	Auto / 2400 ~ 7100 100k increments / Manual / One Push
	RG Tuning	-10 ~ 10
	BG Tuning	-10 ~ 10
	RG	0 ~ 255
	BG	0 ~ 255
	Saturation	60% ~ 200%
	Hue	0 ~ 14
	AWB Sensitivity	Low / Middle / High
⬇️⬆️	Select Item	
⬅️⬆️	Change value	
[Menu]	Back	

Figure 57: OSD - COLOR

### 3.3 IMAGE

The Flip function can be set, although the camera has an automatically flip function.

IMAGE		
▶	Brightness	0 ~ 14
	Contrast	0 ~ 14
	Sharpness	0 ~ 15
	Flip-H	ON / OFF
	Flip-V	ON / OFF
	B&W Mode	Color / B&W
	Gamma	0.45 / 0.50 / 0.55 / 0.63 / Default
	DCI	1 ~ 8 / Close
	Low Light Mode	ON / OFF
⬇️⬆️	Select Item	
⬅️⬆️	Change value	
[Menu]	Back	

Figure 58: OSD - IMAGE

### 3.4 FOCUS

FOCUS		
▶	Focus Mode	Auto / Manual / OnePush
	AF-Zone	Front Focus / Back Focus / Meeting / Education Tracking / Moving Objects / Center Focus
	AF-Sensitivity	Low / Middle / High
▼▲	Select Item	
◀▶	Change value	
[Menu]	Back	

Figure 59: OSD - FOCUS

### 3.5 NOISE REDUCTION

NOISE REDUCTION		
▶	NR-2D	1 ~ 7 / Auto / OFF
	NR-3D	1 ~ 8 / Auto / OFF
	Dynamic Hot Pixel	1 ~ 5 / OFF
▼▲	Select Item	
◀▶	Change value	
[Menu]	Back	

Figure 60: OSD - NOISE REDUCTION

### 3.6 STYLE

STYLE		
▶	Style	Default / Normal / Clarity / Bright / Soft
▼▲	Select Item	
◀▶	Change value	
[Menu]	Back	

Figure 61: OSD - STYLE

## 4. PTZ

PTZ		
▶	Speed by Zoom	ON / OFF
	Zoom Speed	1 ~ 8
	Image Freezing	ON / OFF
	Preset Pan Speed	1 ~ 25
	Preset Tilt Speed	1 ~ 21
	Preset Zoom Speed	1 ~ 8
▼▲	Select Item	
◀▶	Change value	
[Menu]	Back	

Figure 62: OSD - PTZ

## 5. VIDEO FORMAT

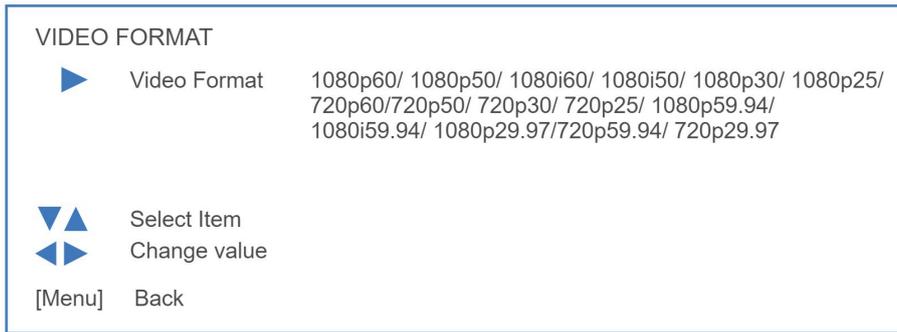


Figure 63: OSD - VIDEO FORMAT

## 6. NETWORK SETTINGS



Figure 64: OSD - NETWORK SETTINGS

Read for more [CM40 & CM70 series network setup guide](#) on the website.

## 7. VERSION



Figure 65: OSD - VERSION

## 8. RESTORE DEFAULT



Figure 66: OSD - RESTORE DEFAULT

## Using the System Select

The rear of the Product is provided with a System Select that can be used to manually select a video format.

This System Select is important for the video quality during video recording or streaming.

See the table below for a description of the possible settings and the associated video output quality.



0	1080p60	8	720p30
1	1080p50	9	720p25
2	1080i60	A	1080p59.94
3	1080i50	B	1080i59.94
4	720p60	C	720p59.94
5	720p50	D	1080p29.97
6	1080p30	E	720p29.97
7	1080p25	F	Default (via OSD)

Figure 67: System Select

A few notes on the System Select:

- The setting 'F' is the **default** setting. If you set the system select to 'F', you can set the video format via the [OSD Menu](#). If you change the system select to another setting than F, it is not possible to change it again using the OSD menu! Change it back (manually) to use the OSD video format setting again.
- The **highest** video output quality 1080p60 (setting '0').
- The **lowest** video output quality is 720p25 (setting '7').



It is recommended to set up the video output through the WebGUI or the OSD Menu, because this is much easier, than selecting the [video output](#) manually. If this is not possible, you can use the System Select.



### IMPORTANT

- After changing the System Select, you need to restart the camera to take effect.
- 720p30, 720p29.97 and 720p25 are not supported by the SDI output.
- There are five ways to select the video output of the camera (OSD / direct button combination on the remote control / WebGUI / System Select/ HTTP API "[VideoOUT](#)" command). The System Select takes priority after a reboot, except on setting F, where all the outputs are defined digitally.
- If you have made a change to the System Select, a "hard reboot" is needed. Click the Reboot button and when the reboot is finished, set the camera off and unplug all cables connected to the camera. Replug them again after you have unplugged all the cables. Start the camera again.

# MAINTENANCE

## Camera Maintenance



Take the following actions to maintain the camera:

- If you will not be using the camera for a long time, turn off the power switch and disconnect the AC powercord of the AC adaptor to the outlet.
- Use a soft cloth or tissue to clean the camera cover.
- Please use the soft dry cloth to clean the lens. If the camera is very dirty, clean it with diluted neutral detergent.



**Do not use any type of solvents, which may damage the surface.**

## Usage Precautions



Take the following precautions to ensure good image quality:

- Do not film extreme bright objects for a prolonged period of time, such as sunlight, light sources, etc.
- Do not operate in unstable lighting conditions, otherwise the produced image could be less than optimal.
- Do not operate close to powerful electromagnetic radiation, such as TV or radio transmitters, etc.

## TRANSPORT AND STORAGE

The camera must be transported in its original packaging box. Inside the box, it is recommended to wrap the camera in the original plastic bag and to place it in the protective foam.

Specific guidelines apply to the environmental temperature and humidity when operating and storing the camera.



See '**Operating humidity**' and '**Storage temperature**' in the provided **Datasheet** for the applicable values.

## DISPOSAL AND RECYCLING

In general, the term 'E-Waste' applies to items of all types of electrical and electronic equipment and its parts that have been discarded by the owner as waste without the intention of re-use.

Avonic outsources the disposal and recycling of its E-Waste camera materials to the **Stichting Open**.



See <https://stichting-open.org/> for more information about the disposal and recycling.

# TROUBLESHOOTING

## General

-  1. Turn the camera off and on again and check if the problem persists.
- 2. If it does, restore to the factory default.

## Power Issues

-  If the camera does NOT perform a self-test and / or if the power LED is OFF:
  1. Check the net power.
  2. Check the power supply.
  3. Check the physical power button on the back of the camera.

## Image

### No image

- 
  1. Check the power of the camera and monitor.
  2. Check the quality and length of the video cable.
  3. Check if the video specifications of monitor match the specifications of the camera.
  4. Check if the Iris under **Exposure settings** is set to 'closed'.

### Abnormal image

- 
  1. Check the quality and length of the video cable.
  2. Check the cable connections.
  3. Check if the Iris under **Exposure settings** is set to 'closed'.

### Dithering or flickering image

- 
  1. Check the camera fixation and nearby vibration sources.
  2. Check the [Anti-flickering](#) setting in the OSD.
  3. Check the [Noise Reduction](#) settings in the OSD.

### Color issues

-  Check the OSD settings for [exposure](#), white balance, color temp, Red and Bluetuning.

 When experiencing image problems, you may also check [Appendix D - CMOS Image Sensor Characteristics](#)

## Autofocus Issues



- Check the [autofocus](#) (position, speed etc.) before streaming
- Check [Video/Camera Settings](#) in de WebGUI or the OSD menu (for example: if the image is too bright, too dark, or too noisy, the camera will have difficulties to focus)



Check environmental conditions and the subject of focussing. The camera will have difficulties to focus in the following situations:

- Light: Strong light, low light/dark areas and backlight conditions
- Moving subjects
- Small objects before a plain or solid background
- Blurry or unsharp subjects: filming through wet glass or dirty objects
- Distance: filming two or more different subjects, some near and some far away
- Position in the image: subject positioned in the corners of the picture
- Faces: partly hidden faces, sideways filmed faces, diagonal or up side down
- When the camera itself moves, or when the iris is narrowed down



When you experience one or more of the above mentioned problems check also our [Appendix - CMOS characteristics](#)

## Control

### No self-test (PTZ cameras only) and no power LED



1. Check the net power
2. Check the power supply

### Remote Controller does not work



1. Check the power of the controller.
2. Check the RS-232 or RS-485 cable quality, length, polarity and network architecture.
3. Check the serial communication settings on the camera and controller.
4. Check the VISCA / PELCO address settings on the camera and controller.
5. Check the IP network settings on the camera and controller.

### Camera does not respond to commands send over IP



1. Check if the [Low Power Mode](#) is set to ON. If so disable it.

## WebGUI

### Cannot enter WebGUI



1. Check the network cable.
2. Check if the computer is connected to the same subnet as the camera.
3. Use an **incognito** window in your browser, sometimes cache issues arise when using multiple cameras that have the same default IP address
4. Reset the factory default IP settings by pressing **[\*] [#] [Manual]** and **Reboot**.

### Firmware update failed



1. Check firmware file integrity, download it again.
2. Make sure you are trying to flash the UVC file for the correct color camera (ARM is generic, UVC is color-dependent).

# APPENDIX A - VISCA SETTINGS AND COMMAND LIST

VISCA is a professional camera control protocol used with PTZ cameras. It works by sending commands to the camera either over a serial or over an IP connection, in return the camera sends ACK acknowledgment and COM completion answers to let the sender know the commands have been received and completed. The [list](#) below describes the commands, ranges and camera answers.

The VISCA Settings and Command list is available as an appendix in this manual and as an separate document that you can download on the [product website](#).

## VISCA over Serial Connection


VISCA is based on RS232 Serial communications at 9600 bit/s, 8N1, no flow control. VISCA uses a serial repeater network configuration to communicate between the controller (device #0) and up to 7 peripherals (#1 through #7). The daisy chain cable configuration means that a message walks the chain until it reaches the target device identified in the data packet. Responses then walk the rest of the way down the chain and back up again to reach the sender. Some packets are broadcast to all devices.

A command data packet consists of:

- Address byte (1) message header
- Information bytes (1..14)
- Terminating byte (1) 0xFF



You can use **Hercules SETUP Utility** application and a serial connection to make this work.

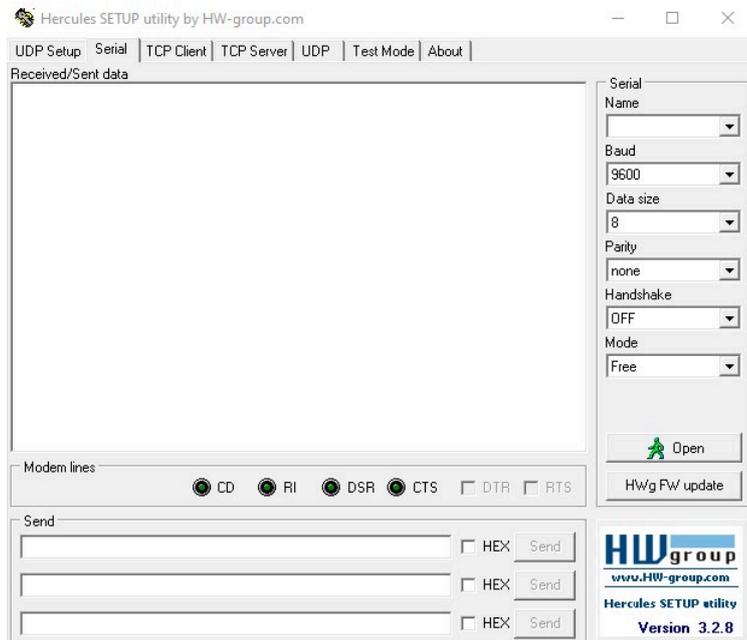

## VISCA over IP

Avonic IP cameras are implemented with a TCP and an UDP server. The TCP as well as the UDP port are by default set to port [1259](#).



The default VISCA address setting is **always 1** when using VISCA over IP. As all cameras are uniquely identified by their IP address, all VISCA addresses are set to 1, the serial addressing plays no part. For VISCA over IP, every command starts with **81 xx xx xx**.



To control the camera, you need an TCP or UDP supported application, like **Hercules SETUP utility** or **Packet Sender** for example. Follow the instructions below:

1. Open the TCP/ UDP supported application.
2. Fill in the camera's IP Address, TCP/UDP port number and connect the application to your camera.  
Once the connection between client and server is set up, the client will be able to send PTZ commands to the server. The server then parses and executes the PTZ command.
3. Fill in the command to be sent to the camera. The camera will send you the return commands.
4. If you see the returned commands (in exception with UDP), the camera has executed the command. You can check this in the WebGUI of the camera.



Default settings:

- TCP port 1259
- UDP port 1259 (same port as TCP; is correct)
- VISCA address 1

The pictures below are showing an example of a VISCA command (Focus near) with their return commands. The green RX commands in the picture "Receive message" is the ACK command (to let the sender know that the command is received and executed) and the COM command (to confirm that the command has been successfully executed and completed). You can find these commands in the [Camera Return Command](#) list and the [Inquiry Command](#) list.



Note that the pictures below are ONLY an example to show you how a TCP supported application works. The pictures could be different from the application you are using!

VISCA IP address and port

VISCA command example

## VISCA over IP using the full Sony VISCA protocol

All Avonic cameras are capable of being controlled using the UDP Sony version of VISCA consisting of long VISCA commands, including headers and message counters. The advantage of using this version of VISCA is the fact that the camera responds with the same header **counter** as was used in the command. This makes it possible to match each response to each command sent. This is especially helpful when programming automated camera control systems.



For the following example Hercules SETUP utility is used to recall preset 1 using VISCA. Follow the instructions below:

1. Set the local port and camera port. Both must be set to **52381**. Any other port won't work!

The camera will send its answers back to the port that was used to send the command (port 52381).



Make sure that you have your **send and receive** window set to display HEX data.

In the example below the camera is switched between:

- Preset 1: VISCA command 81 01 01 3F 02 01 FF and
- Preset 2: VISCA command 81 01 01 3F 02 02 FF




1. Type the command in the **Send** box. The command consists of the **(camera) address**, marked in blue and 7 bytes marked in red. This means that the complete VISCA command looks like this:
  - Preset 1: VISCA command 010000070000000181**0101F0201FF**
  - Preset 2: VISCA command 010000070000000581**01013F0202FF**

The Visca over IP header consists of the 3rd and 4th bytes of the complete header. They indicate length of the payload (VISCA command). At this point, the value can vary depending on what VISCA command is sent. Using the example of **Preset Recall 1** from above:

- 010000070000000181**01013F0201FF** the 4th byte is '7' meaning the payload of the VISCA command is 7 bytes. Another point in the header is the message counter possibility on the 8th byte, in this instance it's '1'. On the second command where **Preset 2** was recalled, the message counter was set to '5'.



1. Click on **Send**. If you have done this correct, you should get the same as on the picture below:

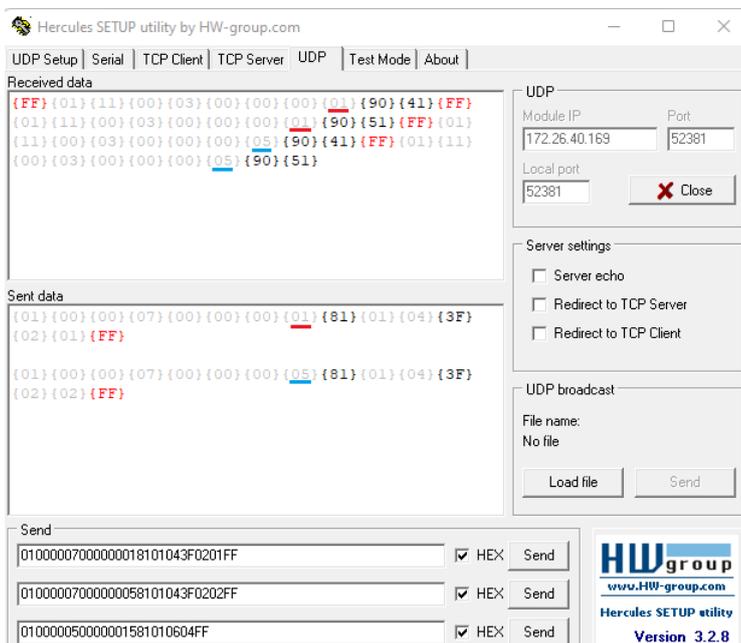

The screenshot shows the Hercules SETUP utility interface. The 'UDP data' section displays received data in hexadecimal format: `{FF}{01}{11}{00}{03}{00}{00}{00}{00}{01}{90}{41}{FF}{01}{11}{00}{03}{00}{00}{00}{01}{90}{51}{FF}{01}{11}{00}{03}{00}{00}{00}{05}{90}{41}{FF}{01}{11}{00}{03}{00}{00}{00}{05}{90}{51}`. The 'Sent data' section shows: `{01}{00}{00}{07}{00}{00}{00}{01}{81}{01}{04}{3F}{02}{01}{FF}` and `{01}{00}{00}{07}{00}{00}{00}{05}{81}{01}{04}{3F}{02}{02}{FF}`. The 'Send' section contains a list of commands with checkboxes for 'HEX' and 'Send' buttons: `01000007000000018101043F0201FF`, `01000007000000058101043F0202FF`, and `01000005000001581010604FF`. The right-hand side of the window shows UDP settings: Module IP (172.26.40.169), Port (52381), Local port (52381), and a 'Close' button. Server settings include checkboxes for 'Server echo', 'Redirect to TCP Server', and 'Redirect to TCP Client'. UDP broadcast settings include a 'File name' field (No file) and 'Load file' and 'Send' buttons. The HW group logo and version 3.2.8 are visible in the bottom right corner.

## Camera Return Commands

All parameter values are in HEX.

- x = Camera Address
- y = Socket Number
- z = Camera Address + 8



This is one list for all Avonic PTZ Cameras (CM40 series and CM70 series). Some features are CM70 series ONLY and will not work with a CM40 series camera.

Return/complete Command			
Command	Function	Command Packet	Comments
ACK/Completion Messages	ACK	90 4y FF (y: Socket No.)	Return when the command is accepted.
	Completion	90 5y FF (y: Socket No.)	Return when the command has been executed.

Error Command			
Command	Function	Command Packet	Comments
Error Messages	Syntax Error	90 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
	Command Buffer Full	90 60 03 FF	Indicates that two sockets are already being used (executing two commands) and the command could not be accepted when received.
	Command Canceled	90 6y 04 FF (y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
	No Socket	90 6y 05 FF (y: Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.
	Command Not Executable	90 6y 41 FF (y: Execution command Socket No. Inquiry command: 0)	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto-focus.

## Camera Control Commands

All parameter values are in HEX

- x = Camera Address
- y = Socket Number
- z = Camera Address + 8

Camera Control Commands			
Command	Function	Command Packet	Comments
Address Set	Broadcast	88 30 01 FF	Address setting
CAM_Power	On	8x 01 04 00 02 FF	Power ON
	Off	8x 01 04 00 03 FF	Power OFF
	Reboot	8x 0A 01 06 01 FF	Reboot
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele (Standard speed)	8x 01 04 07 02 FF	
	Wide (Standard speed)	8x 01 04 07 03 FF	
	Tele (Variable speed)	8x 01 04 07 2p FF	p = 0(low speed) -F(high speed)
	Wide (Variable speed)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs(0-F): Zoom Position
	Zoom Wide ~ Tele	00 00 00 00 ~ 04 00 00 00 (PQRS)	
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far (Standard speed)	8x 01 04 08 02 FF	
	Near (Standard speed)	8x 01 04 08 03 FF	
	Far (Variable speed)	8x 01 04 08 2p FF	p = 0(low) - F(high)
	Near (Variable speed)	8x 01 04 08 3p FF	
	Direct Focus Position	8x 01 04 48 0p 0q 0r 0s FF	min p = 0, q = 0, r = 0, s = 0 max p = 0, q = 6, r = E, s = A
	Auto Focus	8x 01 04 38 02 FF	AF On
	Manual Focus	8x 01 04 38 03 FF	AF Off
	Auto/Manual	8x 01 04 38 10 FF	AF Toggle On/Off
	OnePush mode	8x 01 04 38 04 FF	
	OnePush trigger	8x 01 04 18 01 FF	
Focus Near ~ Far	Variable ~ 00 00 00 00 (PQRS)	pqrs: Focus Position	
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor mode	8x 01 04 35 01 FF	Indoor mode
	Outdoor mode	8x 01 04 35 02 FF	Outdoor mode
	OnePush mode	8x 01 04 35 03 FF	One Push WB mode
	OnePush trigger	8x 01 04 10 05 FF	One Push WB Trigger
	Manual	8x 01 04 35 05 FF	Manual Control mode

Camera Control Commands			
Command	Function	Command Packet	Comments
CAM_Bgain	Reset	8x 01 04 04 00 FF	Manual Control of BGain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain
CAM_Rgain	Reset	8x 01 04 03 00 FF	Manual Control of RGain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode
	Bright	8x 01 04 39 0D FF	Bright Mode (Manual control)
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting (CAM_AE is set to Manual)
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct Iris Position	8x 01 04 4B 00 00 0p 0q FF	(Manual and Iris Priority) min p = 0 q = 0 max p = 0, q = C
CAM_Shutter	Direct	8x 01 04 4A 00 00 0p 0q FF	min p = 0 q = 0 max p = 1 q = 0
CAM_Gain	Reset	8x 01 04 0C 00 FF	Gain Setting
	Direct	8x 01 04 0C 00 00 0p 0q FF	pq: Gain Position 0 ~ 20 (0 = 00 HEX) Manual exposure
	Gain Limit	8x 01 04 2C 0p FF	p: Gain Position 0 ~ 15 (0 = 00 HEX) Auto exposure
CAM_Bright (only works with exposure mode Bright enabled)	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 0D 00 00 0p 0q FF	pq: Bright Position (0 ~ 23 max p = 1 and q = 7)
CAM_ExpComp(EV and EV Level)	On	8x 01 04 3E 02 FF	Exposure Compensation On/Off
	Off	8x 01 04 3E 03 FF	
	Reset	8x 01 04 0E 00 FF	Exposure Compensation Amount Setting
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	

Camera Control Commands			
Command	Function	Command Packet	Comments
CAM_BackLight	On	8x01 04 33 02 FF	Back Light Compensation On/Off
	Off	8x01 04 33 03 FF	
CAM_NR(2D)Level	-	8x01 04 53 0p FF	p: NR Setting (0: Off, level 1 to 7, 8 = AUTO)
CAM_NR(3D)Level	-	8x01 04 54 0p FF	p: NR Setting (0: Off, level 1 to 8)
CAM_Flicker	-	8x01 04 23 0p FF	p: Flicker Settings (0: Off, 1: 50Hz, 2: 60Hz)
CAM_DHotPixel	-	8x01 04 56 0p FF	p: Dynamic Hot Pixel Setting (0: Off, level 1 to 5)
CAM_Aperture (sharpness)	Reset	8x01 04 02 00 FF	Aperture Control
	Up	8x01 04 02 02 FF	
	Down	8x01 04 02 03 FF	
	Direct	8x01 04 42 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffect	Off	8x01 04 63 00 FF	Picture Effect Setting
	B&W	8x01 04 63 04 FF	
CAM_Memory(preset)	Reset	8x01 04 3F 00 pp FF	pp: Memory Number (=0 to 127)
	Set	8x01 04 3F 01 pp FF	
	Recall	8x01 04 3F 02 pp FF	
CAM_LR_Reverse	On	8x01 04 61 02 FF	Image Flip Horizontal On/Off
	Off	8x01 04 61 03 FF	
CAM_PictureFlip	On	8x01 04 66 02 FF	Image Flip Vertical On/Off
	Off	8x01 04 66 03 FF	
Freeze (CM70 series ONLY)	Freeze ON	8x04 04 62 02 FF	Freeze ON immediately
	Freeze OFF	8x04 04 62 03 FF	Freeze OFF immediately
	Preset Freeze ON	8x04 04 62 22 FF	Freeze ON when running preset
	Preset Freeze OFF	8x04 04 62 23 FF	Freeze OFF when running preset
SYS_Menu	Off	8x01 06 06 03 FF	Turns the OSD menu On/Off
	On	8x01 06 06 02 FF	
CAM_ColorGain	Direct	8x01 04 49 00 00 00 0P FF	p: Color Gain setting 0h (60%) to Eh (200%)

Camera Control Commands			
Command	Function	Command Packet	Comments
Pan_tiltDrive	Up	8x01 06 01 VV WW 03 01 FF	VV: Pan speed 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed 0x01 (low speed) to 0x14 (high speed) YYYY: Pan Position ZZZZ: Tilt Position
	Down	8x01 06 01 VV WW 03 02 FF	
	Left	8x01 06 01 VV WW 01 03 FF	
	Right	8x01 06 01 VV WW 02 03 FF	
	Upleft	8x01 06 01 VV WW 01 01 FF	
	Upright	8x01 06 01 VV WW 02 01 FF	
	DownLeft	8x01 06 01 VV WW 01 02 FF	
	DownRight	8x01 06 01 VV WW 02 02 FF	
	Stop	8x01 06 01 VV WW 03 03 FF	
	AbsolutePosition	8x01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition	8x01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Pan range: -170° ~ +170°	0F 06 07 00 ~ 50 00 09 09 (YYYY)	
	Tilt range: -30° ~ +90°	0F 0E 04 05 ~ 00 05 01 00 (ZZZZ)	
	Home	8x01 06 04 FF	
Reset	8x01 06 05 FF		
Pan_tiltLimitSet	LimitSet	8x01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 UpRight 0: Down-Left YYYY: Pan Limit Position ZZZZ: Tilt Position
	LimitClear	8x01 06 07 01 0W 07 0F 0F 0F 0F 0F 0F 0F FF	
CAM_AFsensitivity	High	8x01 04 58 01 FF	AF Sensitivity High/Normal/Low
	Normal	8x01 04 58 02 FF	
	Low	8x01 04 58 03 FF	
CAM_SettingReset	Reset	8x01 04 A0 10 FF	Reset Factory Setting
CAM_Brightness	Direct	8x01 04 A1 00 00 0p 0q FF	pq: Brightness Position
CAM_Contrast	Direct	8x01 04 A2 00 00 0p 0q FF	pq: Contrast Position
CAM_Flip	Off	8x01 04 A4 00 FF	Single Command For Video Flip
	Flip-H	8x01 04 A4 01 FF	
	Flip-V	8x01 04 A4 02 FF	
	Flip-HV	8x01 04 A4 03 FF	
CAM_Autoflip	Autoflip ON	8x01 02 70 02 FF	Autoflip ON
	Autoflip OFF	8x01 02 70 03 FF	Autoflip OFF
CAM_SettingSave	Save	8x01 04 A5 10 FF	Save Current Setting
CAM_Iridix	Direct	8x01 04 A7 00 00 0p 0q FF	pq: Iridix Position
CAM_AWBSensitivity	High	8x01 04 A9 00 FF	High
	Normal	8x01 04 A9 01 FF	Normal
	Low	8x01 04 A9 02 FF	Low

Camera Control Commands			
Command	Function	Command Packet	Comments
CAM_AFZone	Front Focus	8x 01 04 AA 00 FF	AF Zone select
	Back Focus	8x 01 04 AA 01 FF	
	Meeting	8x 01 04 AA 02 FF	
	Education Tracking	8x 01 04 AA 03 FF	
	Moving Objects	8x 01 04 AA 04 FF	
	Center Focus	8x 01 04 AA 05 FF	
CAM_ColorHue	Direct	8x 01 04 4F 00 00 00 0p FF	p: Color Hue setting 0h (-14 degrees) to Eh (+14 degrees)
Pan-tilt_MaxSpeed	High SpeedPan/Tilt ON	8x 0A 01 31 03 FF	High Speed PTON
	High SpeedPan/Tilt OFF	8x 0A 01 31 02 FF	High Speed PTOFF
ARM/MCU_Version	Inquiry ARM/MCU Version	8x 09 0A 01 03 FF	Returned version in HEX, for example: 02 05 00 (version 2.5.0)
CAM/UVC_Version	Inquiry Cam/UVC version	8x 09 00 02 FF	Returned version in HEX, for example: 02 05 09 (version 2.5.9)
CAM_TallyLight(Cm7x only with license active)	Red	8x 01 7E 01 0A 00 02 03 FF	Tally Light RedON
	Green	8x 01 7E 01 0A 00 03 02 FF	Tally Light GreenON
	Off	8x 01 7E 01 0A 00 03 03 FF	Tally Light OFF
Preset_H_Speed	Horizontal (Pan) speed between presets	81 01 03 01 qq FF	qq = speed setting 1 ~ 25 (1 = 00 HEX, 25 = 18 HEX)
Preset_V_Speed	Vertical (Tilt) speed between presets	81 01 03 02 qq FF	qq = speed setting 1 ~ 21 (1 = 00 HEX, 21 = 14 HEX)
Preset_Z_Speed	Zoom speed between presets	81 01 03 03 qq FF	qq = speed setting 1 ~ 8 (1 = 00 HEX, 8 = 07 HEX)
Blue_Tuning (autowhitebalance active)	more or less blue while maintaining auto white balance active	81 0A 01 13 pp FF	pp = setting -10 ~ +10(00~14 HEX)
Red_Tuning (autowhitebalance active)	more or less red while maintaining auto white balance active	81 0A 01 12 pp FF	pp = setting -10 ~ +10(00~14 HEX)

Camera Control Commands			
Command	Function	Command Packet	Comments
VideoSystem_Set  (CM40 series: It is possible to set the video format, but since the video format is dictated by the computer the camera is connected with, the picture will NOT change to that format.)		8x01 06 35 00 pp FF	pp: Video Format
			00: 1080p60
			01: 1080p50
			02: 1080i60
			03: 1080i50
			04: 720p60
			05: 720p50
			06: 1080p30
			07: 1080p25
			08: 720p30
			09: 720p25
			0A: 1080p59.94
			0B: 1080i59.94
			0C: 720p59.94
0D: 1080p29.97			
0E: 720p29.97			

## Inquiry Commands

all parameter values are in hex

- x = camera address
- y = socket number
- z = camera address + 8

Inquiry Commands			
Command	Function	Command Packet	Comments
CAM_ZoomPosInq	8x 09 04 47 FF	90 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusAFModelInq	8x 09 04 38 FF	90 50 02 FF	Auto Focus
		90 50 03 FF	Manual Focus
		90 50 04 FF	OnePush Focus
CAM_FocusPosInq	8x 09 04 48 FF	90 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_WBModelInq	8x 09 04 35 FF	90 50 00 FF	Auto
		90 50 01 FF	Indoor mode
		90 50 02 FF	Outdoor mode
		90 50 03 FF	OnePush mode
		90 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	90 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	90 50 00 00 0p 0q FF	pq: B Gain
CAM_GainInq (CM70 series ONLY)	8x 09 04 0C FF	90 50 00 FF	Manual Exposure Direct Gain
CAM_AEModelInq	8x 09 04 39 FF	90 50 00 FF	Full Auto
		90 50 03 FF	Manual
		90 50 0A FF	Shutter priority
		90 50 0B FF	Iris priority
		90 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	90 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	90 50 00 00 0p 0q FF	pq: Iris Position
CAM_BrightPosInq	8x 09 04 4D FF	90 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpComp-ModelInq	8x 09 04 3E FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	90 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_Backlight-ModelInq	8x 09 04 33 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_Noise2DLevel	8x 09 04 53 FF	90 50 0p FF	Noise Reduction (2D) p: 0 to 7, 8 = AUTO
CAM_Noise3DLevel	8x 09 04 54 FF	90 50 0p FF	Noise Reduction (3D) p: 0 to 8
CAM_FlickerModelInq	8x 09 04 55 FF	90 50 0p FF	p: Flicker Settings(0: OFF, 1: 50Hz, 2: 60Hz)

Inquiry Commands			
Command	Function	Command Packet	Comments
CAM_Aperture-ModelInq (Sharpness)	8x 09 04 05 FF	90 50 02 FF	Auto Sharpness
		90 50 03 FF	Manual Sharpness
CAM_ApertureInq(Sharpness)	8x 09 04 42 FF	90 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffectModelInq	8x 09 04 63 FF	90 50 00 FF	Color
		90 50 04 FF	B&W





Inquiry Commands			
Command	Function	Command Packet	Comments
CAM_MemoryInq	8x 09 04 3F FF	90 50 0p FF	p: Memory (Preset) number last operated.
SYS_MenuModelInq	8x 09 06 06 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_LR_ReverseInq	8x 09 04 61 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_PictureFlipInq	8x 09 04 66 FF	90 50 02 FF	On
		90 50 03 FF	Off
CAM_ColorGainInq	8x 09 04 49 FF	90 50 00 00 00 0p FF	p: Color Gain setting 0h (60%) to Eh (200%)
CAM_BTuningInq	81 09 0A 01 13 FF	90 50 pp FF	pp = setting -10 ~ +10 (00~14 HEX)
CAM_RTuningInq	81 09 0A 01 12 FF	90 50 pp FF	pp = setting -10 ~ +10 (00~14 HEX)
VideoSystemInq  ( <b>CM40 series:</b> It is possible to set the video format, but since the video format is dictated by the computer the camera is connected with, the picture will not change to that format.)	8x 09 06 23 FF	90 50 00 FF	1920x1080p60
		90 50 01 FF	1920x1080p50
		90 50 02 FF	1920x1080i60
		90 50 03 FF	1920x1080i50
		90 50 04 FF	1280x720p60
		90 50 05 FF	1280x720p50
		90 50 06 FF	1920x1080p30
		90 50 07 FF	1920x1080p25
		90 50 08 FF	1280x720p30
		90 50 09 FF	1280x720p25
		90 50 0A FF	1920x1080p59.94
		90 50 0B FF	1920x1080i59.94
		90 50 0C FF	1280x720p59.94
		90 50 0D FF	1920x1080p29.97
90 50 0E FF	1280x720p29.97		
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	90 50 ww zz FF	ww: Pan Max Speed zz: Tilt Max Speed

Inquiry Commands			
Command	Function	Command Packet	Comments
Pan-tiltPosInq	8x 09 06 12 FF	90 50 0w 0w 0w 0w 0z 0z 0z 0z FF	www: Pan Position zzz: Tilt Position
CAM_GainLimitInq	8x 09 04 2C FF	90 50 0q FF	p: Gain Limit
	8x 09 04 2C FF	90 50 07 FF	Auto exposure
CAM_DHotPixelInq	8x 09 04 56 FF	90 50 0q FF	p: Dynamic Hot Pixel Setting (0: Off, level 1 to 6)
CAM_AFSensitivityInq	8x 09 04 58 FF	90 50 01 FF	High
		90 50 02 FF	Normal
		90 50 03 FF	Low
CAM_BrightnessInq	8x 09 04 A1 FF	90 50 00 00 0p 0q FF	pq: Brightness Position
CAM_ContrastInq	8x 09 04 A2 FF	90 50 00 00 0p 0q FF	pq: Contrast Position

Inquiry Commands			
Command	Function	Command Packet	Comments
CAM_FlipInq	8x 09 04 A4 FF	90 50 00 FF	Off
		90 50 01 FF	Flip-H
		90 50 02 FF	Flip-V
		90 50 03 FF	Flip-HV
CAM_IridixInq	8x 09 04 A7 FF	90 50 00 00 0p 0q FF	pq: Iridix Position
CAM_AFZone	8x 09 04 AA FF	90 50 00 FF	Front Focus
		90 50 01 FF	Back Focus
		90 50 02 FF	Meeting
		90 50 03 FF	Education Tracking
		90 50 04 FF	Moving Objects
		90 50 05 FF	Center Focus
CAM_ColorHueInq	8x 09 04 4F FF	90 50 00 00 00 0p FF	p: Color Hue setting 0h (-14 degrees) to Eh (+14 degrees)
CAM_AWBSensitivityInq	81 09 04 A9 FF	90 50 00 FF	High
		90 50 01 FF	Normal
		90 50 02 FF	Low
CAM_ZoomPosInq	8x 09 04 47 FF	90 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusAFModelInq	8x 09 04 38 FF	90 50 02 FF	Auto Focus
		90 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	90 50 0p 0q 0r 0s FF	pqrs: Focus Position

Inquiry Commands			
Command	Function	Command Packet	Comments
CAM_WBModelInq	8x 09 04 35 FF	90 50 00 FF	Auto
		90 50 01 FF	Indoor mode
		90 50 02 FF	Outdoor mode
		90 50 03 FF	OnePush mode
		90 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	90 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	90 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModelInq	8x 09 04 39 FF	90 50 00 FF	Full Auto
		90 50 03 FF	Manual
		90 50 0A FF	Shutter priority
		90 50 0B FF	Iris priority
		90 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	90 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	90 50 00 00 0p 0q FF	pq: Iris Position
CAM_BrightPosInq	8x 09 04 4D FF	90 50 00 00 0p 0q FF	pq: Bright Position
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF Off	Off (Standby)

# APPENDIX B - DIMENSIONS

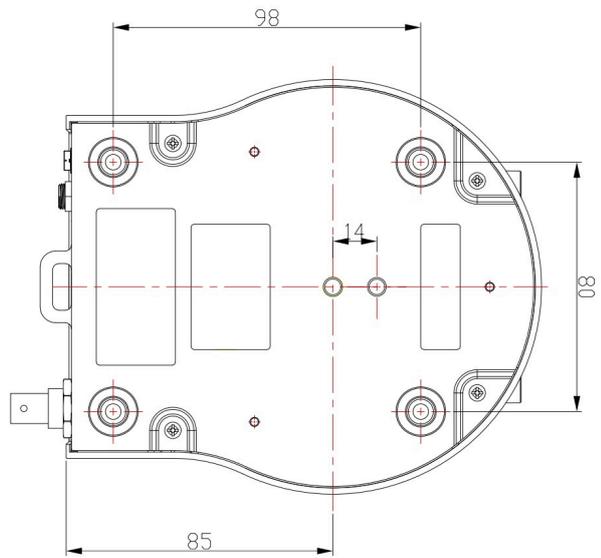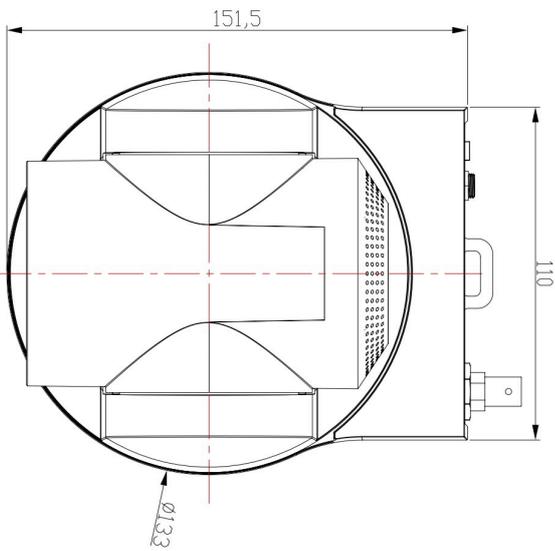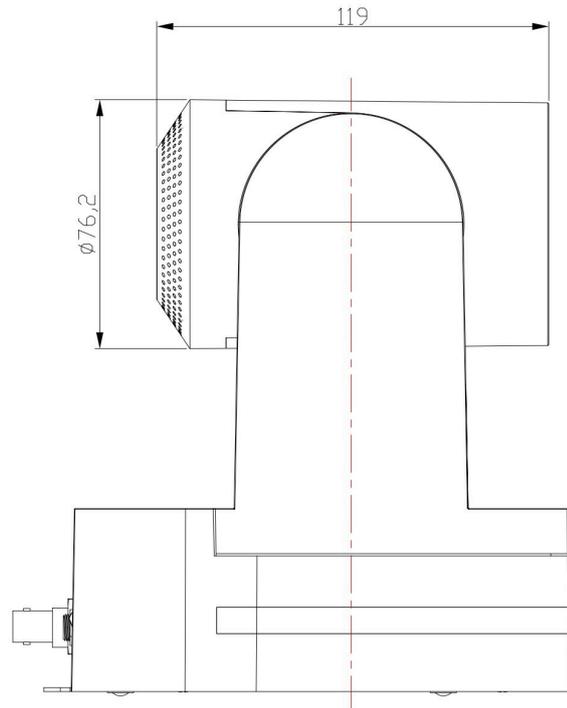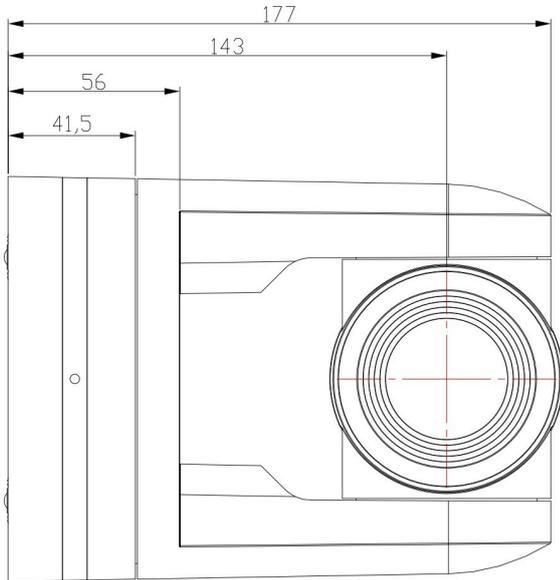

# APPENDIX C - HTTP API

With the HTTP API you can control the camera by using a web browser like Microsoft Edge or Google Chrome for example. It is possible to change multiple settings at once using this feature. This document is available as an Appendix in the CM7x manual and as a separate document that can be downloaded on the [product website](#).

## How to use HTTP API

To use the HTTP API you need the following link:

<http://192.168.5.126/ajaxcom?szCmd=>



Follow instructions below:

1. Click on the link above, or copy and paste it to your browser.
2. Note that the IP Address in this link is an **example of an IP address**. Change this IP Address to the one you use for your camera. See [Network > Ethernet > IP Address](#).
3. Copy the code from the list. Remember that some codes are documented over **multiple lines** and that you need to **copy this from the first to the last bracket!** See the example below:

Function	Code	Command	Setting
Enable	<code>{\"SetEnv\":{\"StreamPublish\":{\"stMaster\":{\"wHostPort\":1935,\"bEnable\":1,\"nProtoType\":3,\"nChannel\":0}}}</code>	bEnable	0: off 1: on
Protol Type		nProtoType	2: srt 3: rtmp
Host Address	<code>{\"SetEnv\":{\"StreamPublish\":{\"stMaster\":{\"wHostPort\":1935,\"nProtoType\":3,\"szHostUrl\":\"192.168.5.12\"},\"nChannel\":0}}}</code>	szHostUrl	user-defined
Host Port	<code>{\"SetEnv\":{\"StreamPublish\":{\"stMaster\":{\"wHostPort\":19355,\"nProtoType\":3,\"nChannel\":0}}}</code>	wHostPort	[0,65535]
Stream Name	<code>{\"SetEnv\":{\"StreamPublish\":{\"stMaster\":{\"wHostPort\":19355,\"nProtoType\":3,\"szStreamName\":\"live/1213\"},\"nChannel\":0}}}</code>	szStreamName	user-defined
User Name	<code>{\"SetEnv\":{\"StreamPublish\":{\"nProtoType\":3,\"szUserNa</code>	serName	user-defined
Password	<code>{\"SetEnv\":{\"StreamPublish\":{\"nProtoType\":3,\"szPasswo</code>	assword	user-defined
SrtKey (SRT Effectie)	<code>{\"SetEnv\":{\"StreamPublish\":{\"wHostPort\":19355,\"nProt</code> <code>\"0123456789\"},\"nChannel</code>	rtKey	user-defined
SrtKeyLen (SRTEffectie)	<code>{\"SetEnv\":{\"StreamPublish\":{\"nProtoType\":3,\"wSrtKeyL</code>	rtKeyLen	[0-32]

**RTP Multicast**

4. Paste the code at the end of HTTP link. It will look like this:

[192.163.5.126/ajaxcom?szCmd={\"SysCtrl\":{\"PtzCtrl\":{\"nChannel\":0,\"szPtzCmd\":\"left\\_start\",\"byValue\":50}}}}](http://192.163.5.126/ajaxcom?szCmd={\)

5. Change the settings in the link. In this case:

[192.163.5.126/ajaxcom?szCmd={\"SysCtrl\":{\"PtzCtrl\":{\"nChannel\":0,\"szPtzCmd\":\"left\\_start\",\"byValue\":50}}}}](http://192.163.5.126/ajaxcom?szCmd={\)

6. Press **ENTER**. If **correct**, you get in return:

[192.163.5.126/ajaxcom?szCmd={\"SysCtrl\":{\"PtzCtrl\":{\"nChannel\":0,\"szPtzCmd\":\"left\\_start\",\"byValue\":50}}}}](http://192.163.5.126/ajaxcom?szCmd={\)  
`{\"nRetVal\":0, \"szError\":\"\"}`

If **failed**, you get in return.

[192.163.5.126/ajaxcom?szCmd={\"SysCtrl\":{\"PtzCtrl\":{\"nChannel\":0,\"szPtzCmd\":\"left\\_start\",\"byValue\":50}}}}](http://192.163.5.126/ajaxcom?szCmd={\)  
`{\"nRetVal\":-1879048185, \"szError\":\"\"}`

7. In case of a failed return, check the following:
  - Brackets in the code. Have you copy and paste the first and the last bracket?
  - Syntax errors in the code/ correct numbers in the key values. Some camera settings are having a specific range. The SRT key for example has a range of 0 - 32. If you have typed 33 it would exceed the range of this key.
  - No long white spaces between the key values of the code. For example this " code " is error and this "code" is right.
  - If you have typed the correct IP address of the camera.
8. If you have done it correct, you can check the settings you have changed in the WebGUI of the camera.


## Curl

It is also possible to change the camera settings at once by using the **Command Prompt** from Windows.




Follow instructions below:

1. Click on **Start** in the left corner of your screen in Windows.
2. Type **Notepad** and open this application.
3. Copy and paste the following http link: <http://192.168.5.126/ajaxcom> and the **code** in the [HTTP API code list](#) in **Notepad**.
4. Type **curl**, change the default IP address in the IP Address of your camera, and surround it by quotation marks.
5. Add **--data-raw** between the http link and the code.
6. Type **szCmd** and surround it by quotation marks.
7. **Double** the quotation marks between the brackets! See the example below.

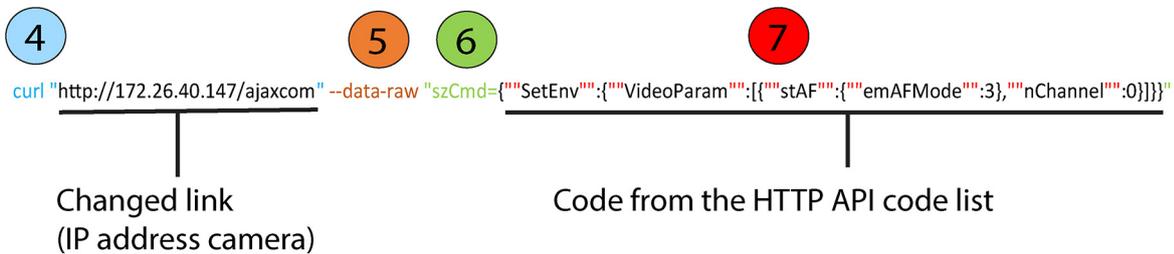

8. Modify the parameters in the code. In the example above **EmAFmode:3** and **nChannel:0** See the [HTTP API code list](#).
9. Click on **Start** in Windows again, type **CMD** and press **Enter**.
10. Copy and paste the link/ code from notepad in **Command Prompt** and press **Enter**.
11. If correct it returns: `{'nRetVal':0, 'szError':''}`

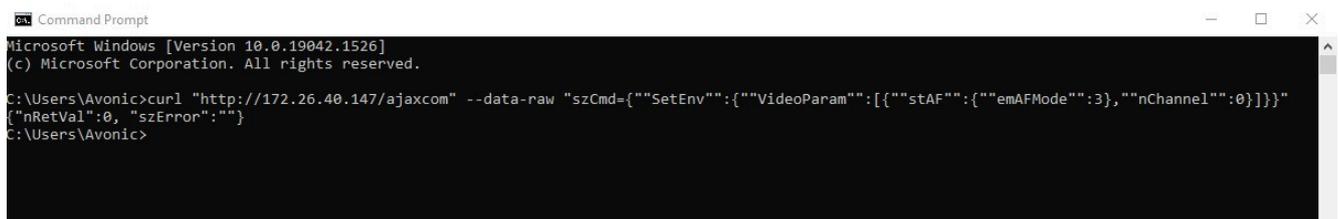


```

Microsoft Windows [Version 10.0.19042.1526]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Avonic>curl "http://172.26.40.147/ajaxcom" --data-raw "szCmd={""SetEnv"";{""VideoParam"":[{""stAF"";{""emAFMode"":3, ""nChannel"":0}]}"
{"nRetVal":0, "szError":""}
C:\Users\Avonic>
  
```

## {'GetEnv'}

You can also use the HTTP API to **display the current settings** of the camera in your browser or in the **Command Prompt** application. To do this, you need the {'GetEnv'} codes from the HTTP API code list. If correct you get the following result:

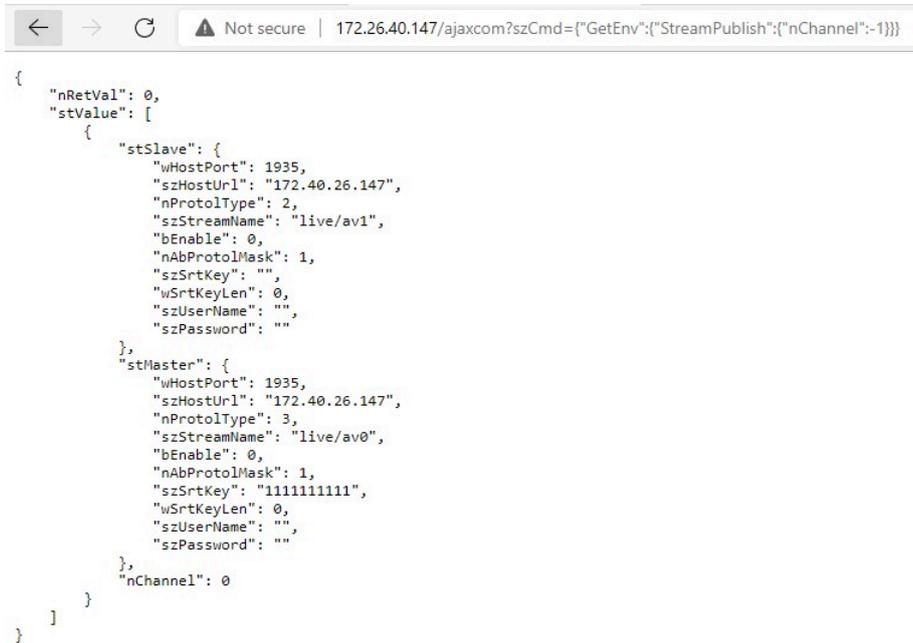


```

{
  "nRetVal": 0,
  "stValue": [
    {
      "stSlave": {
        "wHostPort": 1935,
        "szHostUrl": "172.40.26.147",
        "nProtolType": 2,
        "szStreamName": "live/av1",
        "bEnable": 0,
        "nAbProtolMask": 1,
        "szSrtKey": "",
        "wSrtKeyLen": 0,
        "szUserName": "",
        "szPassword": ""
      },
      "stMaster": {
        "wHostPort": 1935,
        "szHostUrl": "172.40.26.147",
        "nProtolType": 3,
        "szStreamName": "live/av0",
        "bEnable": 0,
        "nAbProtolMask": 1,
        "szSrtKey": "1111111111",
        "wSrtKeyLen": 0,
        "szUserName": "",
        "szPassword": ""
      },
      "nChannel": 0
    }
  ]
}

```

## Web browser

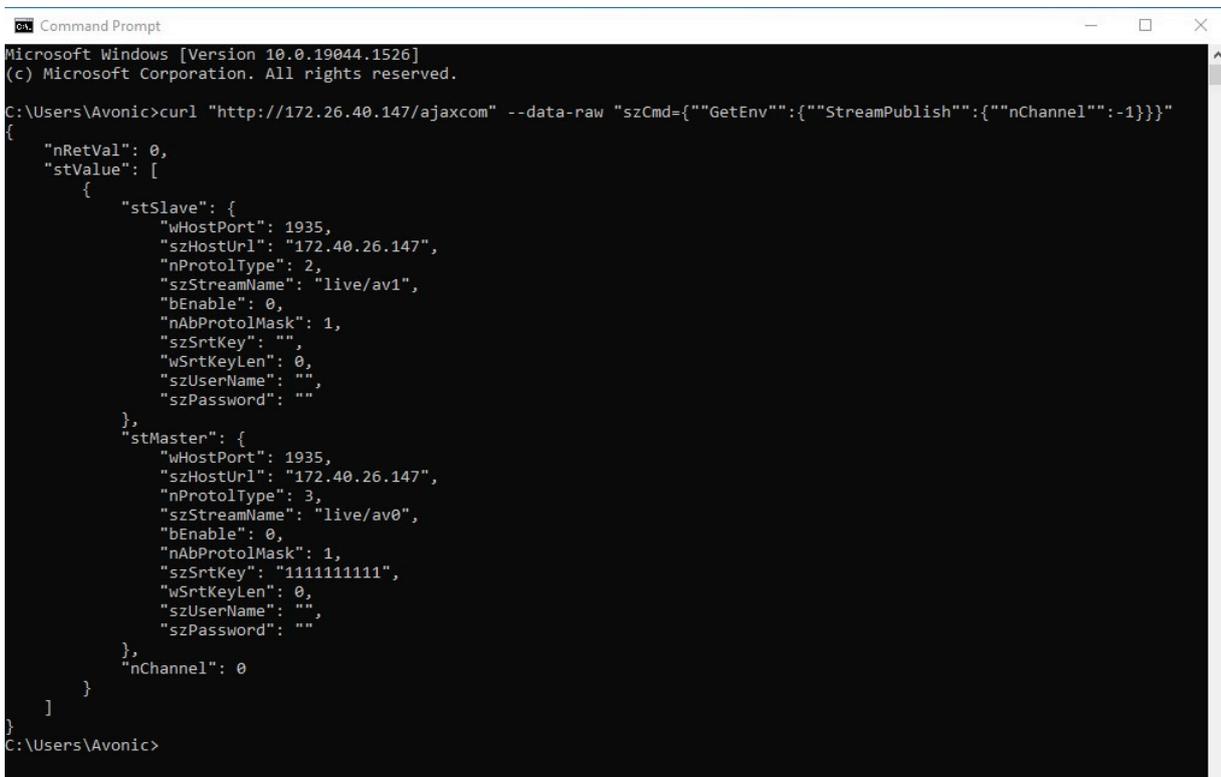

```

C:\Users\Avonic>curl "http://172.26.40.147/ajaxcom" --data-raw "szCmd={'"GetEnv"'":{"StreamPublish":{"nChannel":-1}}}"
{
  "nRetVal": 0,
  "stValue": [
    {
      "stSlave": {
        "wHostPort": 1935,
        "szHostUrl": "172.40.26.147",
        "nProtolType": 2,
        "szStreamName": "live/av1",
        "bEnable": 0,
        "nAbProtolMask": 1,
        "szSrtKey": "",
        "wSrtKeyLen": 0,
        "szUserName": "",
        "szPassword": ""
      },
      "stMaster": {
        "wHostPort": 1935,
        "szHostUrl": "172.40.26.147",
        "nProtolType": 3,
        "szStreamName": "live/av0",
        "bEnable": 0,
        "nAbProtolMask": 1,
        "szSrtKey": "1111111111",
        "wSrtKeyLen": 0,
        "szUserName": "",
        "szPassword": ""
      },
      "nChannel": 0
    }
  ]
}
C:\Users\Avonic>

```

## Command Prompt

## PTZ

PTZControl			
Code: <code>http://192.168.5.126/ajaxcom?szCmd={"SysCtrl":{"PtzCtrl":{"nChanel":0,"szPtzCmd":"left_start","byValue":50}}</code>			
Command	Setting	Function	Command
nChanel	0		
byValue	0,100 used to control the speed of ptz		
szPtzCmd			
		left start	left_start
		left stop	left_stop
		leftup start	leftup_start
		leftup stop	leftup_stop
		leftdown start	leftdown_start
		leftdown stop	leftdown_stop
		rightstart	right_start
		rightstop	right_stop
		rightup start	rightup_start
		rightdown start	rightdown_start
		rightdown stop	rightdown_stop
		upstart	up_start
		upstop	up_stop
		downstart	down_start
		downstop	down_stop

## PTZ speed

Set PTZ Speed			
Command	Code	Command	Setting
szCmd	{"SetEnv":{"PTZSpeed": {"nPTZSpeed":1}}}	nPTZSpeed	0: Slow
			1: High

## Speed by Zoom

Set Speed By Zoom			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'bSpeedByZoom':0}}}	bSpeedByZoom	1: on 0: off

## Image Freezing

Set Image Freezing			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'bImageFreezing':0}}}	bImageFreezing	1: on 0: off

## Low power mode

Set Low Power Mode			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'emLowPowerMode':0}}}	emLowPowerMode	2: on 3: off

## Zoom Speed

Set Zoom Speed			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'nZoomSpeed':0}}}	nZoomSpeed	0 - 7

## Preset Pan Speed

Set Preset Pan Speed			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'nPresetPanSpeed':0}}}	nPresetPanSpeed	0 - 24

## Preset Tilt Speed

Set Preset Tilt Speed			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'nPresetTiltSpeed':0}}}	nPresetTiltSpeed	0 - 20

## Preset Zoom Speed

Set Preset Zoom Speed			
Command	Code	Command	Setting
szCmd	{'SetEnv':{'ArmPtz':{'nPresetZoomSpeed':0}}}	nPresetZoomSpeed	0 - 7

## Focus Mode

Focus Mode Commands	
<b>Focus Mode</b>	
Code	{'SetEnv':{'VideoParam':{'stAF':{'emAFMode':3},'nChannel':0}}}
<b>Command</b>	<b>Setting</b>
nChanel	0

Focus Mode Commands			
emAFMode	2: Auto		
	3: Manual		
	4 OnePush		
Zoom and focus			
Code	{\"SysCtrl\":{\"PtzCtrl\":{\"nChanel\":0,\"szPtzCmd\":\"zoomdec_start\",\"byValue\":0}}}		
Command	Setting	Function	Command
nChanel	0		
byValue	0		
szPtzCmd			
		Zoom add start	zoomadd_start
		Zoom add stop	zoomadd_stop
		Zoom decrease start	zoomdec_start
		Zoom decrease stop	zoomdec_stop
		Focus add start	focusadd_start
		Focus add stop	focusadd_stop
		Focus decrease start	focusdec_start
		Focus decrease stop	focusdec_stop

## Preset

Preset Commands			
Code	{\"SysCtrl\":{\"PtzCtrl\":{\"nChanel\":0,\"szPtzCmd\":\"preset_set\",\"byValue\":0}}}		
Command	Setting	Function	Command
nChanel	0s		
ByValue	0, 254		
szPtzCmd			
		Set preset	preset_set
		Call preset	preset_call
		Clean preset	preset_clean

## Audio

Audio Configure				
<b>Get audio configure</b>				
Code	{\"GetEnv\":{\"Audio\":{}}}			
<b>Set audio configure</b>				
Code	{\"SetEnv\":{\"Audio\":{\"nSampleBits\":16,\"nAudioSmstMask\":[33554888,33554888,33554433],\"bEnable\":0,\"nInpVolume\":4,\"nBitRate\":64,\"nEncType\":7,\"byAudioCodecList\":[6,7,2],\"nSampleRate\":44100,\"nChannel\":1}}}			
Function	Code	Command	Setting	
Enable	{\"SetEnv\":{\"Audio\":{\"bEnable\":1}}}	bEnable	0: off 1: on	
Encode Type	{\"SetEnv\":{\"Audio\":{\"nEncType\":7}}}	nEncType	6: Mp3AAC 7: G.711A 2:	
Sample Rate	{\"SetEnv\":{\"Audio\":{\"nSampleRate\":32000}}}	nSampleRate (Only supporting these sample rates and gyl1a can only be 8000.)	16000 32000 44100 48000	
Sample Bits	{\"SetEnv\":{\"Audio\":{\"nSampleBits\":16}}}	nSampleBits	16	
Bit Rate	{\"SetEnv\":{\"Audio\":{\"nBitRate\":96}}}	nBitRate	32 48	64 96 128
Channel	{\"SetEnv\":{\"Audio\":{\"nChannel\":2}}}	nChannel	1: Mono 2: Stereo	
Input Volume	{\"SetEnv\":{\"Audio\":{\"nInpVolume\":5}}}	nInpVolume (range 1 to 10)	Exp:[1, 10]	

## Video

### Video encoder

Video Encode	
<b>Get video encode parameters</b>	
Code	{\"GetEnv\":{\"VideoEncode\":{\"nChannel\":-1}}}
<b>Set video encode parameters</b>	
Code	{\"SetEnv\":{\"VideoEncode\":{\"stSlave\":{\"bylFrameMinQP\":20,\"bylImageQuality\":1,\"szStreamName\":\"live/av1\",\"dwVideoCodecMask\":160,\"emBitRateCtrl\":0,\"bylImageSizeList\":[26,7,9,27,4,5],\"dwMaxBitRate\":40960,\"nFrameRate\":25,\"nMaxFrameRate\":30,\"emVideoCodec\":5,\"nlFrameInterval\":75,\"emlImageSize\":27,\"nBitRate\":512,\"byProfile\":2},\"stMaster\":{\"bylFrameMinQP\":20,\"bylImageQuality\":0,\"szStreamName\":\"live/av0\",\"dwVideoCodecMask\":160,\"emBitRateCtrl\":0,\"bylImageSizeList\":[5,4,9],\"dwMaxBitRate\":40960,\"nFrameRate\":25,\"nMaxFrameRate\":60,\"emVideoCodec\":5,\"nlFrameInterval\":75,\"emlImageSize\":5,\"nBitRate\":4096,\"byProfile\":2,\"nChannel\":0}}}}

## Video encode settings

Video Encode Settings			
Function	Code	Command	Setting
Compressed Format	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'emVideoCodec':5,'nChannel':0}}}}</code>	emVideoCodec	5: H.264 7: H.265 (BP profile only)
Profile	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'byProfile':0,'nChannel':0}}}}</code>	byProfile	0: BP 1: MP 2: HP
	<code>{'GetEnv':{'VideoEncode':{'nChannel':-1}}}</code> and receive its returning value. Compared to webpage and this, you can know the different value meaning different image size.	byImageSizeList (Lists all imagesize, different products have different image size)	
Image Size	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'emImageSize':4,'nChannel':0}}}}</code>	emImageSize	5: 1920*1080 4: 1280*720 9: 640*480 27: 320*180 26: 640*360
Rate Control	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'emBitRateCtrl':1,'nChannel':0}}}}</code>	emBitRateCtrl	0: CBR 1: VBR

Video Encode Settings			
Function	Code	Command	Setting
Image Quality	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'byImageQuality':5,'nChannel':0}}}}</code>	byImageQuality	0: worst quality 1: between 2: between 3: between 4: between 5: Best quality
Bit Rate (kb/s)	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'dwMaxBitRate':200,'nChannel':0}}}}</code>	dwMaxBitRate	[64, 40960]
Frame Rate (F/S)	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'nFrameRate':25,'nChannel':0}}}}</code>	nFrameRate	[5, 60]
Frame Interval	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'nlFrameInterval':70,'nChannel':0}}}}</code>	nlFrameInterval	[1, 300]
Frame Min QP	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'bylFrameMinQP':70,'nChannel':0}}}}</code>	bylFrameMinQP	[10, 51]
Stream Name	<code>{'SetEnv':{'VideoEncode':{'stMaster': {'szStreamName':"live/av01",'nChannel':0}}}}</code>	szStreamName	user-defined

## Video Streaming

Stream Publish	
Get stream publish parameters	
Code	<code>{'GetEnv':{'StreamPublish':{'nChannel':-1}}}</code>

Stream Publish			
<b>Set stream publish parameters</b>			
Code	<pre>{'SetEnv':{'StreamPublish':{'stSlave':{'wHostPort':1935,'szHostUrl':'192.168.5.11','nProtoType':2,'szStreamName':'live/av1','bEnable':0,'nAbProtolMask':1,'szSrtKey':'','wSrtKeyLen':0,'szUserName':'','szPassword':'','stMaster':{'wHostPort':1935,'szHostUrl':'192.168.5.11','nProtoType':3,'szStreamName':'live/av0','bEnable':0,'nAbProtolMask':1,'szSrtKey':'1111111111','wSrtKeyLen':0,'szUserName':'','szPassword':'','nChannel':0}}}}</pre>		
<b>NOTE: When modifying one param, you should take along wHostPort. Otherwise, the host port will be zero.</b>			
Function	Code	Command	Setting
Enable	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':1935,'bEnable':1,'nProtoType':3,'nChannel':0}}}}</pre>	bEnable	0: off 1: on
Protol Type		nProtoType	2: srt 3: rtmp
Host Address	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':1935,'nProtoType':3,'szHostUrl':'192.168.5.12','nChannel':0}}}}</pre>	szHostUrl	user-defined
Host Port	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':19355,'nProtoType':3,'nChannel':0}}}}</pre>	wHostPort	[0,65535]
Stream Name	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':19355,'nProtoType':3,'szStreamName':'live/1213','nChannel':0}}}}</pre>	szStreamName	user-defined
User Name	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':19355,'nProtoType':3,'szUserName':'123','nChannel':0}}}}</pre>	szUserName	user-defined
Password	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':19355,'nProtoType':3,'szPassword':'123','nChannel':0}}}}</pre>	szPassword	user-defined
SrtKey (SRT Effectie)	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':19355,'nProtoType':3,'szSrtKey':'0123456789','nChannel':0}}}}</pre>	szSrtKey	user-defined
SrtKeyLen (SRTEffectie)	<pre>{'SetEnv':{'StreamPublish':{'stMaster':{'wHostPort':19355,'nProtoType':3,'wSrtKeyLen':0,'nChannel':0}}}}</pre>	wSrtKeyLen	[0-32]

## (RTP) Multicast Streaming

RTP Multicast	
<b>Get rtp multicast parameters</b>	
Code	{'GetEnv':{'StreamRTPMulticast':{'nChannel':-1}}}
<b>Set rtp multicast parameters</b>	
Code	<pre>{'SetEnv':{'StreamRTPMulticast':{'stSlave':{'nProtoType':0,'bEnable':0,'wMultiCastPort':4002,'szMultiCastUrl':'224.1.2.3','stMaster':{'nProtoType':1,'bEnable':0,'wMultiCastPort':4000,'szMultiCastUrl':'224.1.2.3','nChannel':0}}}}</pre>
<b>NOTE: When modifying one param you should take along bEnable and awMultiCastPort. Otherwise, it will be set to 0. Suggesting that when setting env, you can distinguish the stMaster and stSlave.</b>	

## RTP Multicast Settings

RTP Multicast Settings			
Function	Code	Command	Setting
Enable	<pre>{'SetEnv':{'StreamRTPMulticast':{'stMaster':{'bEnable':1,'wMultiCastPort':4004,'nChannel':0}}}}</pre>	bEnable	0: off 1: on
Protol Type	<pre>{'SetEnv':{'StreamRTPMulticast':{'stMaster':{'bEnable':1,'nProtoType':1,'wMultiCastPort':4004,'nChannel':0}}}}</pre>	nProtoType	0: RTP 1: TS

RTP Multicast Settings			
Multicast Address	{"SetEnv":{"StreamRTPMulticast":[{"stMaster":{"bEnable":0,"szMultiCastUrl":"224.1.2.23","wMultiCastPort":4004},"nChannel":0}]}}	SzMultiCastUrl	224.0.0.0~255.255.255.0
Multicast Port	{"SetEnv":{"StreamRTPMulticast":[{"stMaster":{"bEnable":1,"wMultiCastPort":4004},"nChannel":0}]}}	wMultiCastPort	Even [0, 65535]

## Camera Settings

Video Parameters			
<b>Get video parameters</b>			
Code	{"GetEnv":{"VideoParam":{"nChannel":-1}}}		
<b>Set video parameters</b>			
<b>Focus</b>			
Function	Code	Command	Setting
Focus Mode	{"SetEnv":{"VideoParam":{"stAF":{"emAFMode":2},"nChannel":0}}}	emAFMode	2: Auto 3: Manual 4: OnePush
AF-Zone	{"SetEnv":{"VideoParam":{"stAF":{"emAFZone":1},"nChannel":0}}}	emAFZone	0: Front Focus 1: Back Focus 2: Meeting 3: Education Tracking 4: Moving Objects 5: Center Focus
AF-Sensitivity	{"SetEnv":{"VideoParam":{"stAF":{"nSensitivity":1},"nChannel":0}}}	nSensitivity	1: High 2: Middle 3: Low

## Exposure

Camera Settings				
<b>Exposure</b>				
Mode	{"SetEnv":{"VideoParam":{"stExp":{"stExpMode":{"emExpMode":0},"nChannel":0}}}	emExpMode	0: 3: 10: 11: 13:	Auto Manual SAE AAE Bright
<b>Exposure: Auto</b>				
EV	{"SetEnv":{"VideoParam":{"stExp":{"expcomp_mode":2},"nChannel":0}}}	expcomp_mode	2: 3:	ON OFF
EV Level	{"SetEnv":{"VideoParam":{"stExp":{"expcomp":8},"nChannel":0}}}	expcomp	[0, 14]	
BLC	{"SetEnv":{"VideoParam":{"stExp":{"backlight":2},"nChannel":0}}}	backlight	2: 3:	ON OFF

Camera Settings				
Exposure: Auto				
Function	Code	Command	Setting	
Flicker	{'SetEnv':{'VideoParam':{'stExp':{'antiflicker':0},'nChannel':0}}}	antiflicker	0: 1: 2:	OFF 50HZ 60HZ
G.Limit	{'SetEnv':{'VideoParam':{'stExp':{'gainLimit':5},'nChannel':0}}}	gainLimit	[0, 15]	
DRC	{'SetEnv':{'VideoParam':{'stExp':{'drc':6},'nChannel':0}}}	drc	[0, 8]	
Exposure: Manual				
shutter	{'SetEnv':{'VideoParam':{'stExp':{'stShutter':{'nShutter':16},'nChannel':0}}}	nShutter	[0, 16]	
Iris	{'SetEnv':{'VideoParam':{'stExp':{'stIris':{'nIris':12},'nChannel':0}}}	nIris	[0, 12]	
DRC	{'SetEnv':{'VideoParam':{'stExp':{'drc':8},'nChannel':0}}}	drc	[0, 8]	
Exposure: SAE				
shutter	{'SetEnv':{'VideoParam':{'stExp':{'stShutter':{'nShutter':16},'nChannel':0}}}	nShutter	[0, 16]	
DRC	{'SetEnv':{'VideoParam':{'stExp':{'drc':7},'nChannel':0}}}	drc	[0, 8]	

Camera Settings				
Exposure: AEE				
Flicker	{'SetEnv':{'VideoParam':{'stExp':{'antiflicker':0},'nChannel':0}}}	Antiflicker	0: 1: 2:	OFF 50HZ 60HZ
G.Limit	{'SetEnv':{'VideoParam':{'stExp':{'gainLimit':5},'nChannel':0}}}	gainLimit	[0, 15]	
Iris	{'SetEnv':{'VideoParam':{'stExp':{'stIris':{'nIris':12},'nChannel':0}}}	nIris	[0, 12]	
DRC	{'SetEnv':{'VideoParam':{'stExp':{'drc':6},'nChannel':0}}}	drc	[0, 8]	
Exposure: Bright				
Bright	{'SetEnv':{'VideoParam':{'stExp':{'bright':0},'nChannel':0}}}	bright	[0, 23]	
Flicker, G.Limit, DRC	You can find the same configure at AAE			

## Color and Image

Camera Settings			
Color			
Function	Code	Command	Setting
WB Mode	{'SetEnv':{'VideoParam': [{'stColor':{'stWbMode': {'emWbMode':0}},'nChannel':0}}]}	emWbMode	0: Auto 1: 3000K 7: 3500K 2: 4000K 8: 4500K 4: 5000K 9: 5500K 10: 6000K 6: 6500K 11: 7000K 5: Manual 3: OnePush
RG Tuning	{'SetEnv':{'VideoParam':{'stColor': {'rgaintuning':0},'nChannel':0}}]}	rgaintuning	[0, 20]
BG Tuning	{'SetEnv':{'VideoParam':{'stColor': {'bgaintuning':20},'nChannel':0}}]}	bgaintuning	[0, 20]
Saturation	{'SetEnv':{'VideoParam':{'stColor': {'saturation':0},'nChannel':0}}]}	saturation	[0, 14]
Hue	{'SetEnv':{'VideoParam':{'stColor': {'hue':14},'nChannel':0}}]}	hue	[0, 14]
AWB Sensitivity	{'SetEnv':{'VideoParam':{'stColor': {'awbsens':0},'nChannel':0}}]}	awbsens	0: Low 1: Middle 2: High

Camera Settings			
Image			
Function	Code	Command	Setting
Bright	{'SetEnv':{'VideoParam':{'stImg': {'luminance':0},'nChannel':0}}]}	luminance	[0, 4]
Contrast	{'SetEnv':{'VideoParam':{'stImg': {'contrast':0},'nChannel':0}}]}	contrast	[0, 14]
Sharpness	{'SetEnv':{'VideoParam':{'stImg': {'sharpness':1},'nChannel':0}}]}	sharpness	[0, 15]
Gamma	{'SetEnv':{'VideoParam':{'stImg': {'gamma':0},'nChannel':0}}]}	gamma	[0, 4]      0: Default      3: 0.55 1: 0.45      4: 0.63 2: 0.50
DCI	{'SetEnv':{'VideoParam':{'stImg': {'dci':0},'nChannel':0}}]}	dci	[0, 8]      OFF 0:

Camera Settings				
Image				
Function	Code	Command	Setting	
B&W Mode	{'SetEnv':{'VideoParam':{'stImg': {'nBWMode':0,'nChannel':0}}}}	nBWMode	0: 4:	Color B & W
Flip-H	{'SetEnv':{'VideoParam':{'stImg': {'nFlipH':3,'nChannel':0}}}}	nFlipH	2: 3:	ON OFF
Flip-V	{'SetEnv':{'VideoParam':{'stImg': {'nFlipV':2,'nChannel':0}}}}	nFlipV	2: 3:	ON OFF
AutoFlip	{'SetEnv':{'VideoParam':{'stImg': {'nAutoFlipV':2,'nChannel':0}}}}	nAutoFlipV		ON OFF
DZoom	{'SetEnv':{'VideoParam': {'stImg': {'nEZoom':3,'nChannel':0}}}}	nEZoom	2: 3:	ON OFF

## Noise Reduction

Camera Settings				
Function	Code	Command	Setting	
NR-2D	{'SetEnv':{'VideoParam':{'stNR': {'noise2D':0,'nChannel':0}}}}	noise2D	[0, 8]	
NR-3D	{'SetEnv':{'VideoParam':{'stNR': {'noise3D':0,'nChannel':0}}}}	noise3D	[0, 8]	0: OFF 8: Auto
Dynamic Hot Pixel	{'SetEnv':{'VideoParam':{'stNR': {'dhotpixel':3,'nChannel':0}}}}	dhotpixel	[0, 5]	0: OFF
Style	{'SetEnv':{'VideoParam':{'stColor': {'nStyleInx':0,'nChannel':0}}}}	nStyleInx	[0, 4]	0: Default 1: Normal 2: Clarity 3: Bright 4: Soft

## Video OSD

Video OSD	
<b>Get video parameters</b>	
Code	{'GetEnv':{'VideoOsd':{'nChannel':-1}}}
<b>Set set video parameters</b>	
Code	{'SetEnv':{'VideoOsd': [{'stTime': {'bEnable':1,'nIndex':0,'nXPos':0,'szText':"", 'nYPos':10000, 'stFtColor': {'byAlpha':128,'byRed':255,'byGreen':255,'byBlue':255}, 'stBkColor': {'byAlpha':0, 'byRed':0,'byGreen':0,'byBlue':0}}, 'stTitle': {'bEnable':0,'nIndex':0,'nXPos':0,'szText':"", 'nYPos':0, 'stFtColor': {'byAlpha':128,'byRed':255,'byGreen':255,'byBlue':255}, 'stBkColor': {'byAlpha':0,'byRed':0,'byGreen':0,'byBlue':0}}, 'nChannel':0}}]}
<b>NOTE: All params can be saved by this command and also you can set one param alone.</b>	

Function	Code	Command	Setting
Show Time	{'SetEnv':{'VideoOsd': [{'stTime': {'bEnable':1,'nChannel':0}}]}	bEnable	0: Not show 1: Show
Show Title	{'SetEnv':{'VideoOsd': [{'stTitle': {'bEnable':1,'nChannel':0}}]}	bEnable	0: Not Show 1: Show

Video OSD			
Set video parameters			
Function	Code	Command	Setting
Time FontColor	{"SetEnv":{"VideoOsd":{"stTime":{"stFtColor":{"byAlpha":128,"byRed":255,"byGreen":255,"byBlue":0},"nChannel":0}}}}	byAlpha	128
		white	rgb (255,255,255)
		black	rgb (0,0,0)
		yellow	rgb (255,255,0)
		red	rgb (255,0,0)
		blue	rgb (0,0,255)
Title FontColor	{"SetEnv":{"VideoOsd":{"stTitle":{"stFtColor":{"byAlpha":128,"byRed":255,"byGreen":255,"byBlue":0},"nChannel":0}}}}	byAlpha	128
		white	rgb (255,255,255)
		black	rgb (0,0,0)
		yellow	rgb (255,255,0)
		red	rgb (255,0,0)
		blue	rgb (0,0,255)
OSD Offsetx pos	Time: {"SetEnv":{"VideoOsd":{"stTime":{"nXPos":9200,"nChannel":0}}}}	nXPos	[0, 10000]
OSD Offsetx pos	Title: {"SetEnv":{"VideoOsd":{"stTitle":{"nXPos":9200,"nChannel":0}}}}	nXPos	[0, 10000]
OSD Offsety pos	Time: {"SetEnv":{"VideoOsd":{"stTime":{"nYPos":1200,"nChannel":0}}}}	nYPos	[0, 10000]
	Title: {"SetEnv":{"VideoOsd":{"stTitle":{"nYPos":1200,"nChannel":0}}}}		

OSD Font Size			
Get OSD font size parameters			
Code	{"GetEnv":{"TTFFontSize":{"nChannel":-1}}}		
Set video parameters			
Code	{"SetEnv":{"TTFFontSize":{"nFontSize":[48,48],"bAutoSize":1}}}		
Function	Code	Command	Setting
		bAutoSize	0: off, 1: on
		nFontSize	[8,200]

## Output Format

(Video) Output Format			
Get video out parameters			
Code	{"GetEnv":{"VideoOut":{"nChannel":-1}}}		
Set video out parameters			
Code	{"SetEnv":{"VideoOut":{"nNetMode":2,"emVoutFormat":9,"byFormatList":[10,9,4,3,8,7,6,5,26,25,20,21,22,23,24]}}}		
Function	Code	Command	Setting

(Video) Output Format				
		nNetMode: default value 2, do not modify it	– HD output – HD output + SD network – SD output + HD network	
		emVoutFormat: Setting the current video out format.	10:	1080P60
			9:	1080P50
			4:	1080P30
			3:	1080P25
			8:	1080I60
			7:	1080I50
			6:	720P60
			5:	720P50
			26:	720P30
			25:	720P25
			20:	1080P59.94
			21:	1080I59.94
			22:	1080P29.97
			23:	720P59.94
			24:	720P29.97

## SRT

SRT	
Get network SRT parameters	
Code	{'GetEnv':{'NetWork':{'hChannel':-1}}}
Set network SRT parameters	

SRT			
Code	{'SetEnv':{'NetWork':{'stSrt':{'wSrtLen':0,'wSrtPort':9000,'szSrtPin':'xxxxxxxx'}}}}		
Function	Code	Command	Setting
crypto key length in bytes		wSrtLen	[0-32]
Port SRT		wSrtPort	Default 9000
Password stream encryption		szSrtPin	user-defined

## Network

### Network configure and port settings

Network Configure	
Get network port parameters	
Code	{'GetEnv':{'NetWork':{'hChannel':-1}}}

Network Configure			
Set network port parameters			
Code	<pre>{'SetEnv':{'NetWork':{'stNetPort': {'wPortSoap':1936,'wPortData':3000,'wPortWeb':80,'wPortRtsp':554,'wPortVisca': 1259,'wPortOnvif':2000,'wPortRtmp':1935}}}}</pre>		
	You can also set one of these parameters like this: <pre>{'SetEnv':{'NetWork':{'stNetPort':{'wPortSoap':1936}}}}</pre>		
Port Settings			
Function	Code	Command	Setting
Port Data		wPortData	[0, 65535]
Port Web		wPortWeb	[0, 65535]
Port Onvif		wPortOnvif	[0, 65535]
Port Soap		wPortSoap	[0, 65535]
Port Rtmp		wPortRtmp	[0, 65535]
Port Rtsp		wPortRtsp	[0, 65535]
Port Visca		wPortVisca	[0, 65535]

## Ethernet

Ethernet			
Get Ethernet parameters			
Code	<pre>{'GetEnv':{'NetWork':{'nChannel':-1}}}</pre>		
Set Ethernet parameters			
Code	<pre>"SetEnv":{"NetWork":{"stEth": [{"byValid":5,"szIPAddr":"192.168.5.126","szSubMask":"255.255.255.0","szMacAddr":"E4:77:D4:01:8A:49", "szGateway":"192.168.5.1","bDefault":1}]}}}</pre>		
Function	Code	Command	Setting
DHCP	<pre>{'SetEnv':{'NetWork':{'stEth':[{"byValid":5}]}}}</pre>	byValid	5:off 7:on
IP Address	<pre>{'SetEnv':{'NetWork':{'stEth':[{"szIPAddr":"192.168.5.127"}]}}}</pre>		
Subnet Mask	<pre>{'SetEnv':{'NetWork':{'stEth':[{"szSubMask":"255.255.255.0"}]}}}</pre>		
Default Gateway	<pre>{'SetEnv':{'NetWork':{'stEth':[{"szGateway":"192.168.5.1"}]}}}</pre>		

## DNS

DNS			
Get dns parameters			
Code	<pre>{'GetEnv':{'NetWork':{'nChannel':-1}}}</pre>		
Set dns parameters			
Code	<pre>{'SetEnv':{'NetWork':{'stDns':{'szDns1':"8.8.8.8","szDns2':"0.0.0.0"}}}}</pre>		
Function	Code	Command	Setting
Preferred DNS Server	<pre>{'SetEnv':{'NetWork':{'stDns': {'szDns1':"8.8.8.8"}}}}</pre>		

DNS			
Alternative DNS Server	<code>{"SetEnv":{"NetWork":{"stDns":{"szDns2":"8.8.8.8"}}}}</code>		

## NDI

NDI			
<b>Get NDI parameters</b>			
Code	<code>"GetEnv":{"NetWork":{"nChannel":1}}</code>		
<b>Set NDI parameters</b>			
Code	<code>{"SetEnv":{"NetWork":{"stNdi":{"szNdiName":"Avonic-82342","bNdiControlEnable":1,"bNdiEnable":1,"szNdiGroup":"public"}}</code>		
Function	code	command	setting
Ndi Enable	<code>{"SetEnv":{"NetWork":{"stNdi":{"bNdiEnable":1}}}}</code>	bNdiEnable	0: off
			1: on
Ndi Control	<code>{"SetEnv":{"NetWork":{"stNdi":{"bNdiControlEnable":1}}}}</code>	bNdiControlEnable	0: off
			1: on
Ndi Name	<code>{"SetEnv":{"NetWork":{"stNdi":{"szNdiName":"Avonic-82342"}}</code>	szNdiName	user-defined
Ndi Group	<code>{"SetEnv":{"NetWork":{"stNdi":{"szNdiGroup":"public"}}</code>	szNdiGroup	user-defined

## System

System Configure			
<b>Get sysattr parameters</b>			
Code	<code>{"GetEnv":{"SysAttr":{"nChannel":1}}</code>		
<b>Set sysattr parameters</b>			
Code	<code>{"SetEnv":{"SysAttr":{"nLanguage":0,"szDeviceID":"1","emVideoStandard":1,"szDevName":"testname"}}</code>		
Function	Code	Command	Setting
Device Name		szDevName	user-defined, cannot use white space
Device ID		szDeviceID	cannot modify
Language		nLanguage	0: Simplified Chinese 2: English

## License

License	
<b>Get License parameters</b>	
Code	<code>:"QueryState":{"QueryLicenseState":{}}</code>
<b>Set License parameters</b>	
Code	<code>{"SetEnv":{"LicenseKey":{"bLicenseEnable":0,"szKeyText":"483B4EB1D0"}}</code>

## Time

SysTime			
<b>Get system time parameters</b>			
Code	{"QueryState":{"QuerySysTime":{}}}		
<b>Set system time parameters</b>			
Code	{"SetEnv":{"SysTime":{"nDateSprtr":2,"nDateFormat":0,"nZone":1,"nHourType":0,"stNtp":{"bEnable":1,"nHostPort":123,"nUpdateInterval":2,"szHostUrl":"http4.aliyun.com"}}}}		
Function	Code	Command	Setting
Date Format	{"SetEnv":{"SysTime":{"nDateFormat":0}}}	nDateFormat	0: YYYY-MM-DD 1: MM-DD-YYYY 2: DD-MM-YYYY
Date Sprtr	{"SetEnv":{"SysTime":{"nDateSprtr":0}}}	nDateSprtr	0: . 1: - 2: /
Zone	{"SetEnv":{"SysTime":{"nZone":0}}}	nZone [0-32]	0: GMT 1: GMT+01:00 2: GMT+02:00 3: GMT+03:00 4: GMT+03:30 5: GMT+04:00 6: GMT+04:30 7: GMT+05:00 ..... 13: GMT+08:00 ..... 20: GMT-01:00 ..... 31: GMT-11:00 32: GMT-12:00
Hour Type	{"SetEnv":{"SysTime":{"nHourType":0}}}	nHourType	0: 24 Hours 1: 12 Hours
NTP Enable	{"SetEnv":{"SysTime":{"stNtp":{"bEnable":1}}}}	bEnable	0: off, 1: on
Update Interval	{"SetEnv":{"SysTime":{"stNtp":{"nUpdateInterval":2}}}}	nUpdateInterval	[1, 10]
Host URL	{"SetEnv":{"SysTime":{"stNtp":{"szHostUrl":"time.nist.gov"}}}}	szHostUrl	user-defined, ntp server address
Host Port	{"SetEnv":{"SysTime":{"stNtp":{"nHostPort":123}}}}	nHostPort	user-defined: [0, 65535]
Time Settings	Synchronize with computer time or set manual: {"SysCtrl":{"SetTime":{"bTimeType":1,"nZone":19,"stDateTime":{"dwYear":2018,"byHour":15,"byMinute":38,"byDay":1,"byMonth":11,"bySecond":2}}}}		
Synchronize NTP Server	{"SysCtrl":{"SyncNtp":{}}}		

## User

SysUser			
<b>Get sysuser parameters</b>			
Code	{!GetEnv:{"SysUser":{}}}		
<b>Set sysuser parameters</b>			
Code	{!SetEnv:{"SysUser":{"stUsers":{"nUserType":0,"szUserName":"admin","szPassword":"admin"}, {"nUserType":1,"szUserName":"user1","szPassword":"user1"}, {"nUserType":1,"szUserName":"user2","szPassword":"user2"}}}}		
Function	Code	Command	Setting
Authority		nUserType	0: admin 1: user1 or user 2
User Name		szUserName	user-defined: no white space
Password		szPassword	user-defined, no white space. This command must set three users at the same time.

## Update

Update	
<b>Get update parameters</b>	
Code	{!QueryState:{"QueryVersion":{}}}
Code	Get the return value and split it like this: szText.Format("%d.%d.%d-%d-%d", (stVersion.dwCamVersion >> 16) & 0xFF, (stVersion.dwCamVersion >> 8) & 0xFF, (stVersion.dwCamVersion & 0xFF), (stVersion.dwCamDate >> 16) & 0xFFFF, (stVersion.dwCamDate >> 8) & 0xFF, (stVersion.dwCamDate & 0xFF));
<b>Set update parameters</b>	Not supported update with API, you can do this through webpage.

## Default and Reboot

Default	
Code	{!SysCtrl:{"Default":{}}}

Reboot	
Code	{!SysCtrl:{"Reboot":{}}}



The URL supports to set all params at one time and also can set one of them through split URL into one other command. Different commands can be found at different settings.

## APPENDIX D - CMOS SENSOR CHARACTERISTICS

The following occurrences that may appear in images are specific to CMOS (Complementary Metal Oxide Semiconductor) image sensors. They do not indicate malfunctions.

### White Flecks

Although the CMOS image sensors are produced with high-precision technologies, fine white flecks may be generated on the screen in rare cases. These flecks are caused by natural and / or artificial radiation, which causes a “false exposure” on the image sensor. The shape of these spots may vary from dots to lines or other —sometimes irregular— shapes. These spots occur in random locations of the image, occur only in a single frame and are more visible in dark images. This is a principle issue of all image sensors and **is not a malfunction**.

The white flecks especially tend to be seen in the following cases:


- When operating at a high ambient temperature
- When you have raised the gain (sensitivity)

The white flecks may be reduced by turning the camera off, then on again.

### Aliasing

When fine patterns, stripes, or lines are shot, they may appear jagged or flickering. **Aliasing** refers to the effect that is produced when a signal is imperfectly reconstructed from the original signal. It occurs when a signal is not sampled at a high enough frequency to create an accurate representation.

This effect is shown in the following example of a **sinusoidal function**:

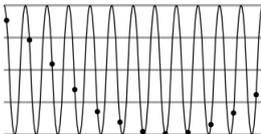

In this example, the dots represent the sampled data and the curve represents the original signal. Because there are not enough sampled data points, the resulting pattern produced by the sampled data is a poor representation of the original.

### Focal Plane

Owing to the characteristics of the pickup elements (CMOS image sensors) for reading video signals, subjects that quickly move across the screen may appear slightly skewed (i.e., tilted to the left or right, depending on the direction of camera or subject movement). Since a CMOS sensor typically captures one row at a time within approximately 1/60th or 1/50th of a second (depending on the refresh rate), it may result in a “rolling shutter” effect. In such cases, the image is skewed.

### Flash Band

If you film a strobe or quick-flashing light, brightness may differ between the upper and lower halves of the picture. See the Focal Plane explanation above for a clarification of this occurrence.

### Flicker

If you are recording under lighting that is produced by discharge tubes (such as fluorescent, sodium or mercury-vapor lamps), the screen may flicker, colors may vary, or horizontal stripes may appear distorted. In such cases, set the anti-flicker setting to 'on'. Depending on lighting types, such occurrences may not be improved with the anti-flicker setting.



It is recommended to set the shutter speed to 1/100s in areas of 50 Hz power supply frequency, and to 1/60s in areas of 60 Hz power supply frequency.

# APPENDIX E - DATASHEET (SPECIFICATIONS)

## SPECIFICATIONS CM70-NDI

### Camera

<b>Video Systems</b>	1920x1080/ 1280x720 p60/ 50/ 30/ 25/ 59.94/ 29.97
<b>Sensor</b>	1/3" CMOS, 2.12mp, 16:9
<b>Shutter</b>	Auto, Manual, 1/25 ~ 1/10000
<b>Scanning mode</b>	Progressive, Interlaced (not over IP)
<b>Zoom/Aperture/Focal length</b>	20x optical/ F1.8-F11/ 4.4-88.8 mm
<b>Minimal Illumination</b>	0.05 LUX
<b>White Balance</b>	Auto, Manual, OnePush, 2400K-7100K in steps of 100K
<b>Backlight Compensation</b>	supported
<b>Digital Noise Reduction</b>	2D & 3D DNR
<b>Signal Noise Ratio</b>	>55 dB
<b>Horizontal FOV wide ~ tele</b>	60.38° ~ 3.72°
<b>Vertical FOV wide ~tele</b>	35.80° ~ 2.14°
<b>Horizontal rotation</b>	-170° ~ +170°
<b>Vertical rotation</b>	-30° ~ +90°
<b>Pan speed range</b>	1.7 ~ 120°/s
<b>Tilt speed range</b>	1.7 ~ 70°/s
<b>H&amp;V image flip</b>	supported
<b>Number of presets</b>	255
<b>Presel accuracy</b>	0.1

### IP features

<b>Video coding standard</b>	H.265 / H.264 / MJPEG
<b>H.265 Profiles</b>	main
<b>H.264 Profiles</b>	main, base high
<b>Main stream resolution</b>	1920x1080 / 1280x720
<b>Main stream max frame rate</b>	60fps
<b>Main stream bitrate</b>	64 ~ 40960 Kbps
<b>Sub stream resolution</b>	320x180 / 320x240 / 640x360 / 1280x720 / 1920x1080
<b>Sub stream max frame rate</b>	30fps
<b>Sub stream bitrate</b>	64 ~ 40960 Kbps
<b>Video bitrate type</b>	Variable, Fixed
<b>Support protocols</b>	RTSP, RTMP, ONVIF, SRT, Multicast, Unicast
<b>Audio standard</b>	AAC / mp3 / G.711A
<b>Audio bitrate</b>	32, 64, 96, 128 Kbps
<b>Audio sample rate</b>	16, 32, 44.1, 48 Khz
<b>Audio line in</b>	balanced audio line in via 5-way Phoenix connector.

### Input / Output Interface

<b>HDMI output</b>	1.4
<b>SDI output</b>	3G-SDI, SMPTE 425M level A, 10-bit YCbCr 4:2:2
<b>USB Output</b>	USB 2.0 (max. 1080p30)
<b>Network interface</b>	RJ45 100 Mbit
<b>NDI® Standard</b>	NDI®   HX
<b>Serial communication</b>	RS232 mini DIN-8, RS485 2pin Phoenix
<b>Serial control protocol</b>	VISCA, PELCO-P, PELCO-D
<b>IP control protocol</b>	VISCA OVER IP, Onvif

### General Specifications

<b>Input voltage</b>	12V
<b>PoE</b>	PoE 12W (802.3af)
<b>Power consumption</b>	12W
<b>Power supply</b>	12V2A
<b>Power connector</b>	EIAJ-4 - Philmore 255 plug
<b>Operating temperature</b>	-5°C ~ 40°C
<b>Storage temperature</b>	-20°C ~ 60°C
<b>Operating humidity</b>	20% ~ 95% non-condensing
<b>Bottom fastening screw thread</b>	1/4" 20 UNC
<b>Color</b>	Black, White
<b>Dimensions product wtxhxd</b>	133 x 180 x 149 mm. excl.
<b>Weight product</b>	1.5 kg
<b>Dimensions box</b>	26 x 24 x 24 cm
<b>Weight box</b>	2.4 kg
<b>Included</b>	power adapter, remote control, RS232 cable, RS485 2-way Phoenix connector, Balanced Audio, Line-In 5-way Phoenix connector

### Versions

<b>Black</b>	CM70-NDI-B
<b>White</b>	CM70-NDI-W

# APPENDIX F - LIST OF SUPPORT ARTICLES

## Settings

- Anti flickering
- CM40 & CM70 series network setup guide
- CM7x IP main and sub streams
- Do I need an additional license to enable NDI on my CM70 series camera?
- How to set, call and clear presets in the camera web GUI
- How can I open the OSD menu of my camera?
- How to use the Select Switch / Rotary dial?
- How to give a DHCP IP address to a CM4x/CM7x camera?
- How to give a static IP Address to a CM4x/CM7x camera?
- Live Preview solutions
- MJPEG Snapshot
- Quick CM7x onsite setup for a local IP stream

## Maintenance

- How to update a CM40 or CM70 series camera
- How can I reset my CM4x/CM7x camera from the web GUI?
- How to register a license in a CM7x series
- How can I reset my CM4x/CM7x camera with an IR remote control?
- How to reset the IP configuration in a CM4x/CM7x camera?
- HTTP Basic Authentication (BA)
- Where to find the correct firmware for my camera?

## Troubleshooting

- AUTOFLIP, FLIP-H, FLIP-V functions
- How do I change the HDMI or SDI output resolution of my camera?
- How do I know the IP address assigned to my camera?
- Latency introduction
- Why doesn't my CM70 series camera respond to the power on command over IP?
- Why is my camera out-of-focus?

## Audio

- Audio support in Avonic cameras
- Balanced Audio Connection in CM7x
- Embedded audio and CM7x USB video output
- How to set the audio delay in a CM7x?

## Control

- Camera control solutions
- Good practice externally controlling Avonic cameras using conference software
- How to use the CM70 series HTTP API
- How to control the Tally light on a CM70-series camera?
- How to open the camera's web GUI?
- Is it possible to control the PTZ speed when recalling a preset?
- What settings are stored in Avonic camera presets?
- What ONVIF version and profile are used by Avonic?

## Streaming

- CM40 or CM70 series Streaming to YouTube
- SRT Streaming with CM70 series camera
- Which Protocol should I use to stream my video?

## Quick Start Guides

- Are all the camera outputs simultaneous?
- CM4x/CM70 series IR remote Shortcuts
- CM4x/CM7x IR remote control buttons
- CM40 & CM70 series Camera Quick-start Guide
- Camera mount solutions
- Quick CM7x onsite setup with an IR Remote Control

## Technical Background

- CCM - Customizable Color Matrix
- General camera recommendations and settings
- HDMI - High-Definition Multimedia Interface
- MJPEG, H.264 or H.265 codec?
- Output framerate vs. sensor exposure time
- SRT - Secure, Reliable Transport
- SDI - Serial digital interface
- Unicast, Multicast and Broadcast
- USB - Universal Serial Bus

## Support articles NDI

### NDI Settings

- [NDI settings in CM70-NDI](#)
- [NDI - Network Device Interface](#)
- [Do I need an additional license to enable NDI on my CM70 series camera?](#)
- [What is the difference between NDI® and NDI® | HX ?](#)

### NDI Studio Tools

- [NDI tools overview](#)
- [NDI KVM feature with NDI Screen Capture](#)
- [How to stream on the NDI Studio monitor with the CM70-NDI?](#)
- [NDI Remote: How to stream from a smartphone to a NDI device](#)
- [How to transform a VLC feed in a NDI stream](#)
- [NDI Studio Monitor shortcuts](#)

# Index

## A

AAE Mode (Aperture Auto Exposure) 32  
AF Sensitivity 54, 69, 86  
AF Version 43, 55, 95  
AF Zone 29, 54, 70, 86  
Audio 25, 83  
Auto Exposure Mode 30  
AWB Mode 53  
AWB Sensitivity 33, 53, 69

## B

Balanced Audio 16  
Baudrate 18, 44, 52  
BG Tuning 33, 53, 60, 67, 70  
BLC (Back Light Compensation) 30, 48, 53, 68  
Bright 34, 67  
Bright (Exposure) Mode 33  
BW (Black and White) Mode 34, 53

## C

Camera Version 43, 55, 95  
CAT 16  
CBR 26  
CCM (Customizable Color Matrix) 35  
Ceiling Mount (AV-MT250) 15  
CMOS 96  
Color 22, 23, 33, 53, 60  
COM port 18  
Contrast 34, 69  
Controller 17, 18, 19, 51

## D

DC12V 16  
DCI (Dynamic Contrast) 34, 53  
Device ID 42, 93  
Device Name 42, 93  
DHCP 20, 55  
DNS Server 41, 92  
DRC (Dynamic Range Compression) 30, 31, 53  
Dynamic Hot Pixel 34, 54, 68, 89

## E

Ethernet 40  
EV (Exposure Value) 30, 53  
EV (level) 67  
Export Configuration 44  
Exposure 21, 23, 30, 53, 60, 67

## F

Factory Reset 43, 55, 69, 95  
Firmware 43, 55, 61, 70, 95  
Flicker 30, 60, 68, 96  
Flip-H, Flip-V, Autoflip 34, 53, 68, 69  
Focus 21, 23, 29, 29, 47, 54, 61, 66, 81, 86

## G

G.Limit (Gain Limit) 30, 53, 67  
Gamma 34, 53

## H

H264 24, 26, 28, 38  
H265 26  
HDMI 16, 17, 39, 48, 51  
HTTP API 77  
HTTP Basic Authentication 43  
Hue 53, 70

## I

Image 22, 23, 34  
Image Freezing 45, 54, 68, 81  
Import Configuration 44  
IP Address 19, 20, 55, 77  
IR Remote Control 17, 46, 49, 51, 61  
IR Remote Control Keys 46, 49  
Iris 31, 53, 60, 67

## K

Kensington Lock 16

## L

LAN 19, 42, 42  
Language 42, 52, 93  
License 41  
Login 20  
Low Light Mode 34, 53  
Low Power Mode 45, 81

## M

Manual Exposure Mode 31  
MCU Version 43, 55, 70, 95  
Mini DIN-8 18  
MJPEG 45  
Multicast 27, 85

## N

NDI 19, 41, 93  
Network 40, 55, 61, 91  
Noise Reduction 22, 23, 34, 54, 60, 89  
NR-2D 34, 54, 68, 89  
NR-3D 34, 54, 68, 89

## O

OSD (On Screen Display) 38, 48, 51, 89

## P

Password 19, 20, 43, 85, 95  
PELCO-D 44, 52

PELCO-P [44, 52](#)  
PoE [16, 19](#)  
Port [40](#)  
Power [66](#)  
Preset [45, 48, 54, 70, 81, 82](#)  
PTZ [24, 45, 48, 54, 69, 80](#)

## R

Reboot [44, 95](#)  
Reboot Schedule [44](#)  
Reset IP configuration (IP Address, Gateway, DNS server) [43](#)  
RG Tuning [33, 53, 60, 67, 70](#)  
RJ45 [16](#)  
RS-232 [16, 18, 61, 62](#)  
RS-485 [16, 18, 19, 61](#)  
RTMP [27](#)  
RTP [26, 27, 85](#)  
RTSP [26](#)

## S

SAE Mode (Shutter Auto Exposure) [32](#)  
Saturation [53](#)  
SDI [16, 17, 39, 48, 51, 56](#)  
Serial [44](#)  
Sharpness [34, 53, 68](#)  
Shutter [31, 53, 67](#)  
Speed by Zoom [45, 54, 81](#)  
SRT [27, 39, 77, 85](#)  
Style [35, 54, 89](#)  
System Select [16, 56](#)

## T

Tally Light [49, 70](#)  
TCP [19, 62](#)  
Time and Date [42, 89](#)

## U

UDP [19, 62](#)  
Unicast [27](#)  
USB [16, 17](#)  
Username [19, 20, 43, 85, 95](#)  
UVC Version [70](#)

## V

VBR [26](#)  
Video Encoder [26, 83](#)  
Video Format [56, 71, 90](#)  
Video Output Format [39](#)  
Video Streaming [27, 84](#)  
VISCA [44, 52, 61, 62](#)  
VISCA over IP [62](#)

## W

Wall Mount (AV-MT200) [15](#)  
WB (White Balance) Mode [33, 53, 60, 66](#)  
WebGUI [20, 61](#)

## X

XLR [16, 25](#)

## Z

Zoom [47, 66](#)  
Zoom Speed [45, 54, 81](#)



Avonic PTZ Camera 20x zoom  
CM70-NDI

© October 2022 • Version 1.4