



**RADA**



**FOCUS ON  
WHAT MATTERS**

# **AI TRACKING CAMERA**

**QUICK INSTALLATION GUIDE**

## CONNECTION DIAGRAM



1. USB 3.0 Out (Panorama Lens)
2. HDMI Out (Panorama Lens)
3. LAN Port (Panorama Lens)
4. USB 3.0 (Close-Up Lens)
5. HDMI Out (Close-Up Lens)
6. RS-232 Control Port
7. Audio In
8. LAN Port (Close-Up Lens)
9. Power Supply (DC12V)

## SETUP STEPS

1. Camera's default IP address is: 192.168.5.191 (Tracking) / 192.168.5.192 (Wide-angle).

To change it, access the camera's IP address via a web browser.

2. Camera's video parameters can be changed via its web interface.

3. Tracking settings are changed via IVESmart tool. It can be downloaded from our website in FIRMWARE & APPLICATIONS or scan the code to access the page directly.



To configure, follow the steps below:

1. Press "Stop" to stop tracking.
2. Press "Config", set "Panoramic" and "Platform" presets.
3. Define "Platform", "Tracking" and "Mask" areas.
4. Adjust tracking parameters.
5. Press "Save Param." and start tracking.

To download User Manual please visit [www.a-dena.com](http://www.a-dena.com) and go to TECHNICAL INFORMATION under RESOURCES.

## **PACKAGE CONTENT**

A-TC01 AI Tracking Camera

Remote Controller

Power Adapter

USB Type A to Type A 3.0 Cable

RS-232 DB9 Female to 8 Pin Din Cable

Quick Installation Guide

