



CI-403 / CI-333 Network Camera

User's Manual | English

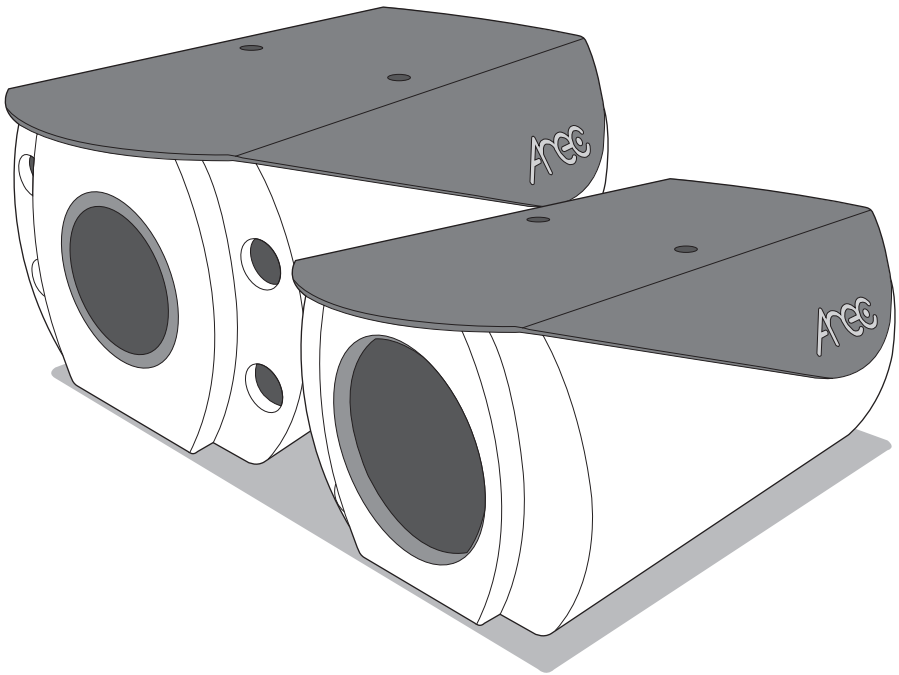


Table of Contents

1. Overview	03
1.1 Features	03
1.2 Package Contents	04
1.3 Dimensions	04
1.4 Connectors	05
2. Camera Cabling	07
2.1 Power Connection	07
2.2 Ethernet Cable Connection	07
2.3 Alarm I/O Connection	08
2.4 RS-485 Connection	08
3. System Requirements	09
4. Access Camera	10
5. Setup Video Resolution	13
6. Configuration Files Export / Import	14

1. Overview

CI-403 / CI-333 Network Camera is capable of performing fast, reliable auto focus in 3x and 33x zoom ratio and can adapt to different scenes through its unique algorithm. As auto focus can be done by camera itself, no on-site focus adjustment is required.


CI-403 / CI-333 utilizes the state of the art image processing technology, providing up to 4 megapixel, high quality HDR video. Its HDR capability captures more image detail under challenging light conditions, such as entrance area, warehouse loading bay, and parking lot.

1.1 Features


- Multiple Progressive Scan CMOS Sensor support up to 4M Resolution
- Multi Exposure HDR
- Multi Codec Support (H.265 / H.264 / MJPEG)
- Low Latency Streaming
- Quad Streams Support
- True Day/Night Function (ICR)
- IR LED (optional, 3x model only)
- BNC Analog Output for Installation Support
- RS-485 Support
- 3D Motion Compensated Noise Reduction (MCTF)
- Smart Event Function - External Input/ Motion Detection/ Network Failure Detection/ Tampering Alarm/ Periodical Event/ Manual Trigger/ Audio Detection
- Text Overlay and Privacy Masks
- Micro SD/DimensionsSDHC/SDXC Card Support
- ONVIF Profile S/G/Q Support
- Smart Low Bitrate Control

1.2 Package Contents


Please check the package containing the following items listed below.

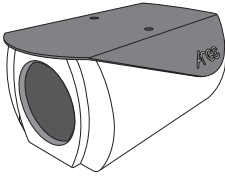


Network Camera

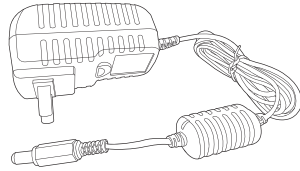

Power adapter

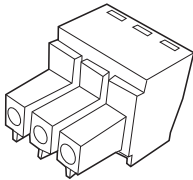

Power Terminal Block

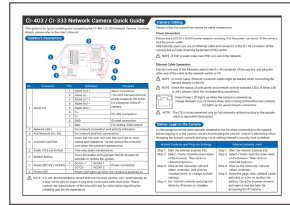


Quick Guide


1.3 Dimensions

The dimensions of the camera are shown below.

CI-403

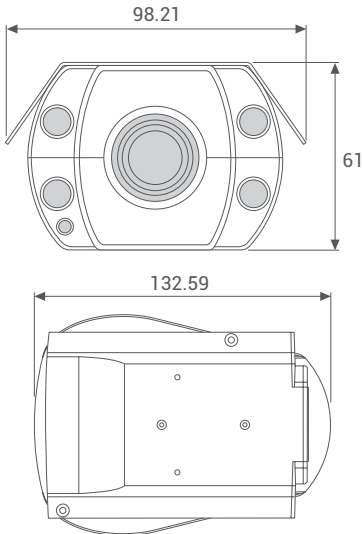

CI-333

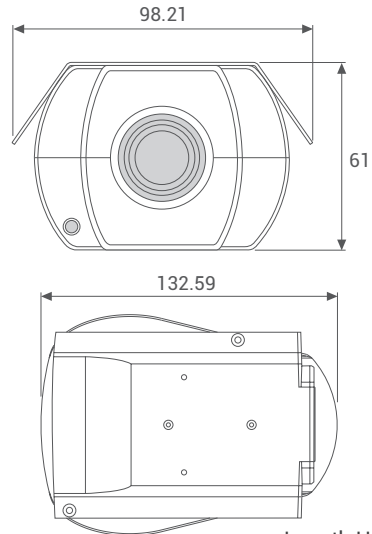


Length Units:mm

1.4 Connectors


The diagram below shows the various connectors of the camera. Definition for each connector is given as follows.

Camera's Connectors

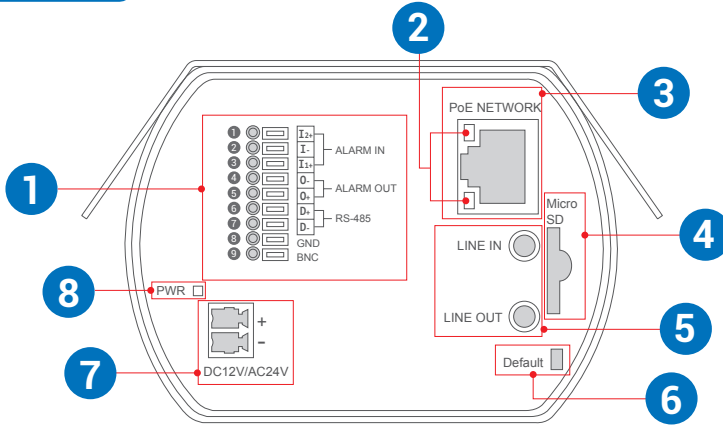

No.	Connector	Pin	Definition	Remarks
1	Audio I/O	1	Alarm In 2 +	Alarm connection * Do NOT connect external power supply to the alarm I/O connector of the IP camera.
		2	Alarm In -	
		3	Alarm In 1 +	
		4	Alarm Out -	
		5	Alarm Out +	
		6	D +	RS-485 connection
		7	D -	
		8	GND	Ground connection
		9	BNC	For analog video output
2	Network LEDs	-	For network connection and activity indication	
3	PoE Network (RJ-45)	-	For network and PoE connections	
4	microSD Card Slot	-	Insert the microSD card into the card slot to store videos and snapshots. Do not remove the microSD card when the camera is powered on.	
5	Audio I/O (Line In/Out)	-	Two-way audio transmission	
6	Default Button	-	Press the button with a proper tool for at least 20 seconds to restore the system.	

7	BNC Connector	+	DC12V +	AC24V 1	Power connection
		-	DC12V -	AC24V 2	
8	Power LED	-	Power LED lights up when the camera is powered on.		


NOTE : It is not recommended to record with the microSD card for 24/7 continuously, as it may not be able to support long term continuous data read/write. Please contact the manufacturer of the microSD card for information regarding the reliability and the life expectancy.

2. Camera Cabling

Please follow the instructions below to complete the camera connection.

2.1 Power Connection

Please refer to section Connectors. Alternatively, users can power up the camera by PoE if a Power Sourcing Equipment (PSE) switch is available. Refer to the section below for Ethernet cable connection.

⚠ NOTE: If PoE is used, make sure PSE is in use in the network.

2.2 Ethernet Cable Connection

Camera Cabling

Please follow the instructions below for cable connections.

Power Connection

Please use a DC12V / AC24V power adaptor and plug it to the power connector of the camera and the power outlet.


Alternatively, users can use an Ethernet cable and connect it to the RJ-45 connector of the camera and a Power Sourcing Equipment (PSE) switch.

⚠ NOTE : If PoE is used, make sure PSE is in use in the network.

Ethernet Cable Connection

Connect one end of the Ethernet cable to the RJ-45 connector of the camera, and plug the other end of the cable to the network switch or PC.

- ⚠ NOTE : In some cases, Ethernet crossover cable might be needed when connecting the camera directly to the PC.
- ⚠ NOTE : Check the status of both power and network activity indicator LEDs. If either LED is unlit, please check the corresponding connection.

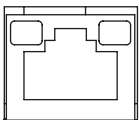


Green Power LED lights up when the camera is powered up.

Orange Network LED (1) flashes when data is being transmitted over network,
(2) lights up for good network connection.

- ⚠ NOTE : The ITE is to be connected only to PoE networks without routing to the outside plant or equivalent description.


2.3 Alarm I/O Connection

The camera supports one alarm input and one relay output for alarm application. Refer to alarm pin definition below to connect alarm devices to the IP camera.

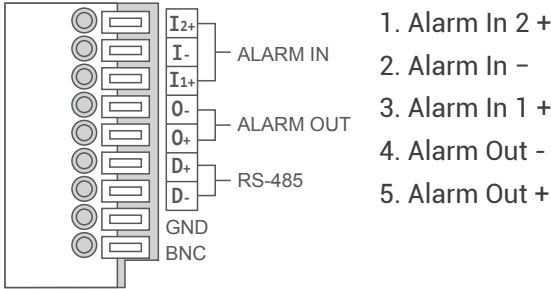

⚠ NOTE : Do NOT connect external power supply to the alarm I/O connector of the IP camera.


2.4 RS-485 Connection

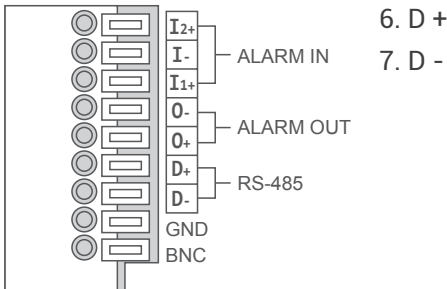

3. System Requirements


To perform the IP camera via web browser, please ensure the PC is in good network connection, and meet system requirements as described below.


Items	System Requirement
Personal Computer	Minimum : 1. Intel® Core™ i5-2430M @ 2.4 GHz 2. 4 GB RAM Recommended : 1. Intel® Core™ i7-3770 CPU@ 2.93 GHz 2. 8 GB RAM
Operating System	Windows VISTA / Windows XP / Windows 7 / Windows 10
Web Browser	Microsoft Internet Explorer 11.0 (recommended) Chrome Firefox Safari
Network Card	10Base-T (10 Mbps), 100Base-TX (100 Mbps) or 1000Base-T operation
Viewer	ActiveX control plug-in for Microsoft IE

 NOTE: The ITE is to be connected only to PoE networks without routing to the outside plant or equivalent description.

4. Access Camera

The default network setting of the camera is DHCP, which means IP is assigned by a router or any DHCP server. To log in to the administration web, please connect the camera and your PC / Notebook or a DHCP server. Follow below steps to access the camera for the first time.

- Run the “Device Search Tool” utility, and click  button.
- The tool should find the network camera and show detailed information. Double click on the founded CI-403/ CI-333.
- An access window will pop-up and ask for user name and password.
- Enter the default user name and password admin/ admin in the dialogue. Note that user name is case sensitive.

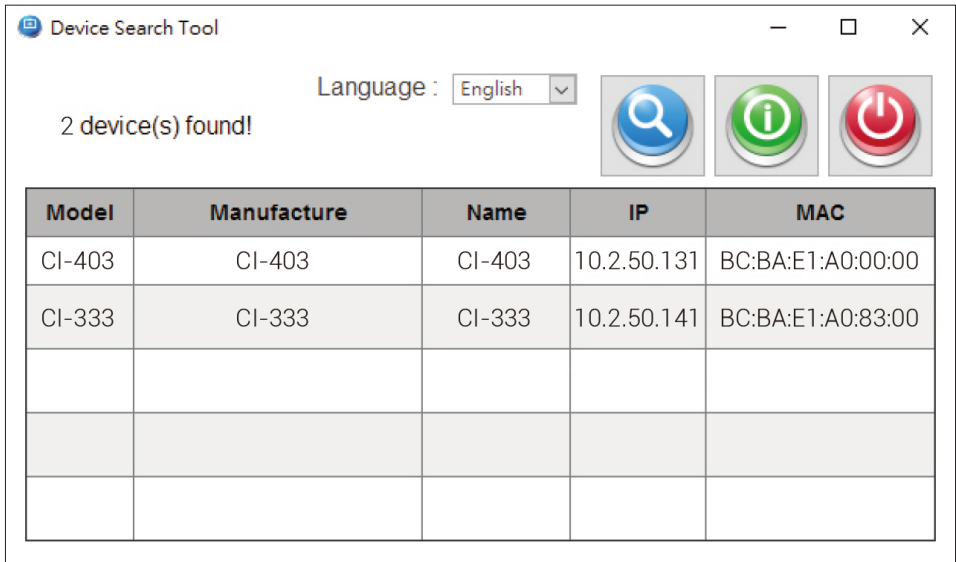

The screenshot shows the 'Device Search Tool' window with the following details:

- Language: English
- 2 device(s) found!
- Three icons: Search, Information, and Power.

Model	Manufacture	Name	IP	MAC
CI-403	CI-403	CI-403	10.2.50.131	BC:BA:E1:A0:00:00
CI-333	CI-333	CI-333	10.2.50.141	BC:BA:E1:A0:83:00

In the case where the DHCP server is unavailable

If no IP is assigned due to a DHCP server failure, or simply because the camera is not connected to a DHCP server, the Network Camera provides an alternate IP address: 192.168.11.202

Therefore, to access the camera for the first time, please set the IP address of the PC as: 192.168.11.XXX; for example:

IP Address: 192.168.11.100

Subnet Mask: 255.255.255.0

Key in the camera's IP address in the URL bar of the web browser window and hit on "Enter". An access window will pop-up and ask for user name and password.

Login ID and Password

Enter the default user name and password in the dialogue. Note that user name is case sensitive

Login ID	Password
admin	admin

⚠ NOTE: ID and password are case sensitive.

⚠ NOTE: It is strongly advised that administrator's password be altered for the security concerns.

Installing DCViewer Software Online

For the initial access to the camera, a client program, DCViewer, will be automatically installed to the PC when connecting to the camera.

If the web browser doesn't allow DCViewer installation, please check the Internet security settings or ActiveX controls and plug-ins settings (refer to section 7.2 Setup Internet Security) to continue the process.

The download procedure of DCViewer software is specified as follows.

- In the DCViewer installation window, click on <Next> to start installation.
- The status bar will show the installation progress. After the installation is completed, click on <Finish> to exit the installation process.

Once the Viewer is successfully installed, the Home page of the IP camera will be shown as the figure below.

Viewer Window

Main Tabs

Language Selection

Stream 1 **Video Format Selection** **Time Display** 2010/05/29 03:41

Live Video Pane

ZOOM WIDE TELE 1x zoom

FOCUS NEAR FAR

AF Mode MANUAL ZM TRIG PUSH AF

Auto Focus Adjustment

Manual Focus Adjustment

Zoom Adjustment

Video Quality Info Button

Full Screen Button

Talk Button

Listen Button

Snapshot Button

Live View Pause Button

Video Record Button

Manual Trigger Button

Image and Focus Adjustment

The live image will be displayed on the Home page when the camera is successfully accessed. If zoom or focus is not at the desired position, please use the function buttons on the Home page for adjustment.

5. Setup Video Resolution

Users can setup video resolution on Video Format page of the user-friendly browser-based configuration interface.

Video Format can be found under : Streaming > Video Configuration.

The screenshot shows the 'Video Configuration' page of a network camera. The interface includes a top navigation bar with 'Home', 'System', 'Streaming', 'Camera', 'Pan Tilt', and 'Logout'. A left sidebar lists various configuration options, with 'Video Configuration' selected. The main content area is titled 'Video Configuration' and contains settings for four streams:

- stream 1:** Encoding: Yes; Encode Type: H.264; Resolution: 1920 x 1080; Rate Control: VBR; Profile: High profile; Framerate: 25; Bitrate: 4096; GOV Length: 25.
- stream 2:** Encoding: Yes; Encode Type: H.264; Resolution: 720 x 576; Rate Control: VBR; Profile: High profile; Framerate: 25; Bitrate: 800; GOV Length: 25.
- stream 3:** Encoding: No.
- stream 4:** Encoding: No.


At the bottom right of the configuration area, there are 'Save' and 'Reset' buttons.

The default value of video resolution is as below.

stream 1	H.264 - 1920 x 1080 (30/25 fps) +
stream 2	H.264 - 720 x 576 (25 fps) / H.264 - 720 x 480 (30 fps)

6. Configuration Files Export / Import

To export / import configuration files, users can access the Maintenance page on the user-friendly browser-based configuration interface.

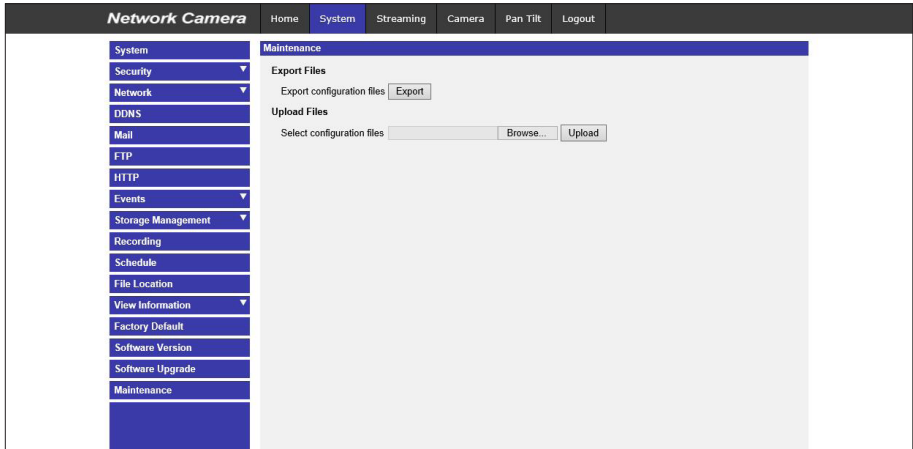

Users can export configuration files to a specified location and retrieve data by uploading an existing configuration file to the camera. It is especially convenient to make multiple cameras having the same configuration.

Export

Users can save the system settings by exporting the configuration file (.bin) to a specified location for future use. Click on the <Export> button, and the popup File Download window will come out. Click on <Save> and specify a desired location for saving the configuration file.

Upload

To upload a configuration file to the camera, please first click on <Browse> to select the configuration file, and then click on the <Upload> button for uploading.

7. Tech Support Information

This chapter will introduce how to delete previously-installed DCViewer in the PC and how to setup the Internet security.

7.1 Delete the Existing DCViewer

For users who have installed DCViewer in the PC previously, please remove the existing DCViewer from the PC before accessing to the camera.

Deleting the DCViewer

In the Windows <Start Menu>, activate <Settings>, and then double click on <Apps>. In the <Apps & features> list, select <DCViewer> and click on the button <Uninstall> to uninstall the existing DCViewer.

Deleting Temporary Internet Files

To improve browser performance, it is suggested to clean up all the files in the <Temporary Internet Files>. The procedure is as follows.

Step 1: Click on the <Tools> tab on the menu bar and select <Internet Options>.

Step 2: Click on the <Delete> button under <Browsing History> section.

Step 3: In the appeared window, tick the box beside the <Temporary Internet files> and click on <Delete> to start deleting the files.

7.2 Setup Internet Security


If ActiveX control installation is blocked, please either set Internet security level to default or change ActiveX controls and plug-ins settings.

Internet Security Level: Default


Step 1: Start the Internet Explorer (IE).

Step 2: Click on the <Tools> tab on the menu bar and select <Internet Options>.

Step 3: Click on the <Security> tab, and select <Trusted sites> zone. Click <Sites> and <Add> the CI-403/ CI-333 to the Websites list.

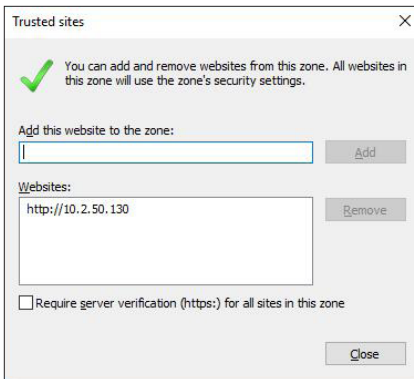

Step 4: Down the page, click on the <Low Level> button and click on <OK> to confirm the setting. Close the browser window, and restart a new one later to access the camera.

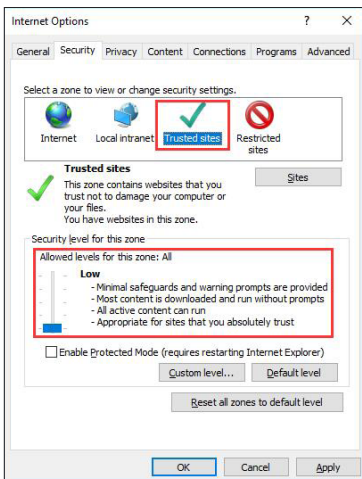



AREC Inc.© All Rights Reserved 2019. | www.arec.com
All information contained in this document is Proprietary



Made in Taiwan
Date : 2019.02.01
Version: 1.0

AREC have the right to change or improve product specifications, without obligation to notify any user.
Go to www.arec.com get the latest information related to the product or additional information.