


EPSON®

**EB-810E
EB-815E
ELPMB75**

Installation Guide

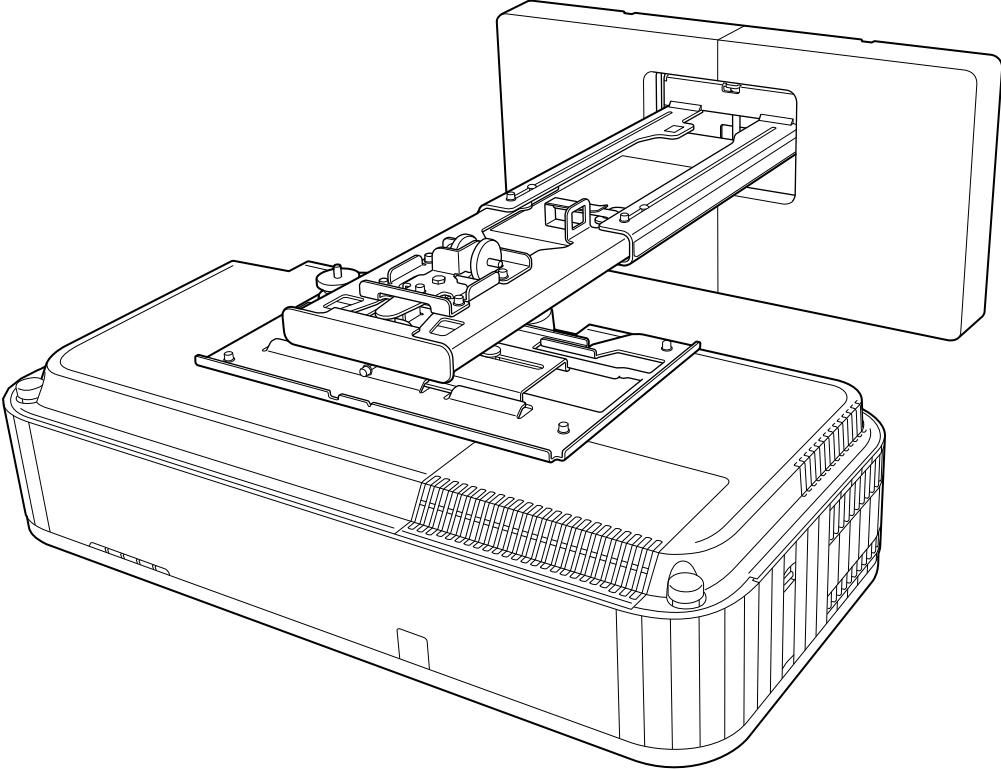

Contents of this Guide

This guide explains how to install an ultra-short throw projector (EB-810E/EB-815E) using the setting plate (ELPMB75).

Tightening Torques for Screws

The following provides the tightening torque for each screw.

Screw Size	Recommended Tightening Torque N/m
M4	1.1 ± 0.1
M5	2.2 ± 0.2
M6	3.8 ± 0.3
M8	9.3 ± 0.8
M10	18.4 ± 1.7

About This Installation Guide

Contents of this Guide 1

Tightening Torques for Screws 1

Introduction

Using the Product Safely 3

Safety Indications 3

Explanation of Symbols 3

Package Contents 4

Setting Plate 4

 Main Mount 4

 Accessories 5

Necessary Items 6

Figures of Installation Dimensions 7

Connection Figure 9

Connecting Multiple Projectors 9

Installing the Setting Plate

Notes on Installing the Setting Plate 10

Cautions on the Installation Location of the Setting Plate 14

Setting Plate Specifications 16

External Dimensions 17

Adjustment Range 19

 Vertical slide 19

 Horizontal slide 20

 Forward/backward slide 20

Mini PC Installation Plate 21

Installing the Setting Plate 22

Attaching the Mount 23

 Determining the installation position
 (projection distance tables) 23

 Attaching the adjustment unit to the
 projector 37

 Install the wall plate on the wall 38

 Install the arm unit on the wall plate 40

 Attach the adjustment unit to the arm unit
 45

 Attaching peripheral devices 46

Adjusting the Position of the Projected Image
..... 48

 Preparations before adjusting 50

 Performing mechanical adjustment using
 the Setting Plate Installation Guide 50

 Adjusting using the projector menus 54

Attaching the Covers 59

Attaching a Security Cable 61

Attaching the Safety Wire 62

Setting the Projector

Batch Setup Function 64

Setup Using a USB flash drive 64

 Saving settings to the USB flash drive 64

 Copying saved settings to other projectors
 65

Setup by Connecting the Computer and
Projector with a USB Cable 66

 Saving settings to a computer 66

 Copying saved settings to other projectors
 67

When Setup Fails 68

Installing Multiple Projectors Side-by-Side (Multi-Projection) 69

Setting the Projector ID 69

Multi-Projection Connection Settings 71

HDMI Link Settings 72

Multi-Projection Image Adjustment 73

Appendix

List of Safety Symbols 75

General Notice 78

Using the Product Safely



For your safety, read all the instructions in this guide before using this product. Incorrect handling that ignores instructions in this guide could damage this product or could result in personal injury or property damage. Keep this installation guide at hand for future reference.

Read the *User's Guide* and *Safety Instructions* for your projector and follow the instructions in these documents.




Safety Indications

The documentation and this product use graphical symbols to show how to use this product safely.

The indications and their meaning are as follows. Make sure you understand them properly before reading the guide.

Symbol	Explanation
 Warning	This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.
 Caution	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

Explanation of Symbols


Symbols	Explanation
	Symbol indicating an action that must not be done
	Symbol indicating an action that should be done
	Symbol indicating related or useful information

Package Contents

Confirm that you have all necessary items before beginning installation.








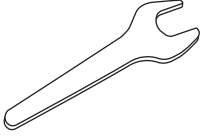


Setting Plate

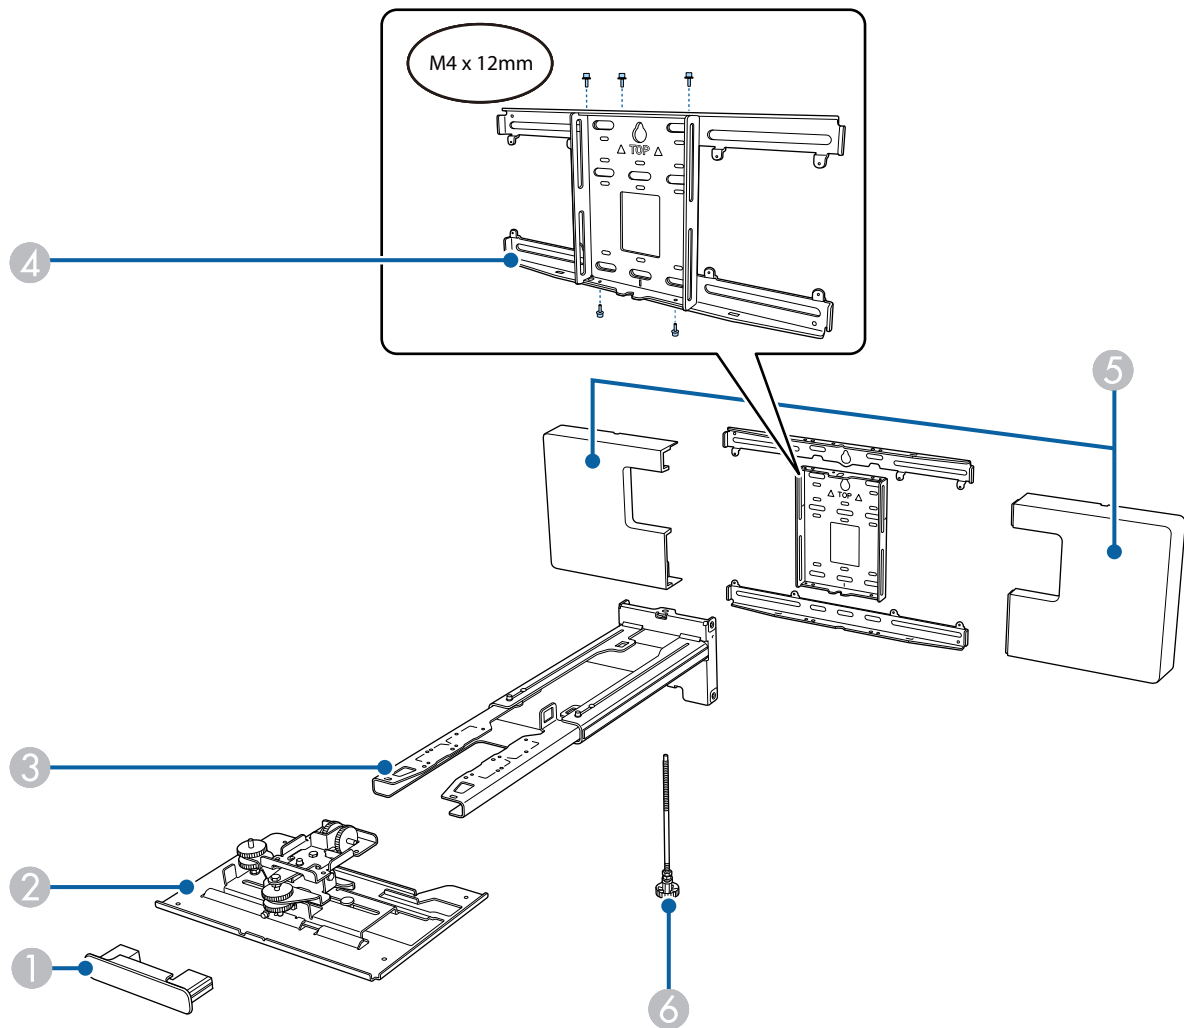


Main Mount

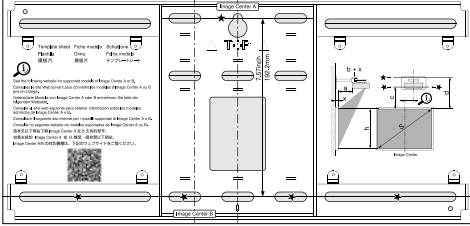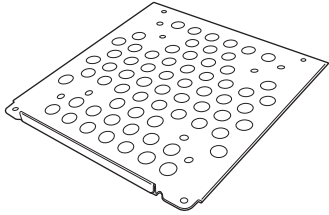

No.	Part name
①	End cap
②	Adjustment unit
③	Arm unit
④	Wall plate
⑤	Wall plate cover
⑥	Hexagonal axis

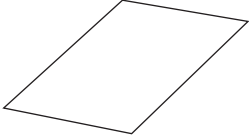
Accessories

Part	Name	Application
	Template sheet	Attach this to the wall before attaching the wall plate, and use it to drill necessary holes.
	Mini PC plate	Attach this to the wall plate when installing a mini PC or stick PC.
	Mini PC belt	Secure the PC to the plate when attaching a mini PC or a stick PC that cannot be attached using screws.
	Cable binding belt	Secure excess cables after performing wiring.
	Masking sticker	Stick this over the groove in the arm unit to cover it up after installing.
	Safety wire set	Connect to the setting plate and the projector to prevent the projector from falling.
	Hexagon wrench (for M4)	-
	Spanner (No. 13 for M6)	-
	M4 x 12 mm hexagon socket head cap bolt with washer/spring washer (x13)	<ul style="list-style-type: none"> Assemble the wall plate as shown in the figure on p.4 (x5) Secure the adjustment unit to the projector (x4) Secure the adjustment unit to the arm unit (x4)
	Rubber caps	Attach to the brackets in the foot section.


Part	Name	Application
	M6 x 20 mm hexagon shoulder head bolt with washer/spring washer (x1)	Secure the arm unit to the wall plate.
	M6 x 20 mm cross recessed head shoulder screws with plastic washers (x3)	
	M3 x 6 mm cross recessed head shoulder screws (x4)	Secure the mini PC plate to the wall plate.

Necessary Items

As well as the items supplied, you also need to prepare the following screws and tools.

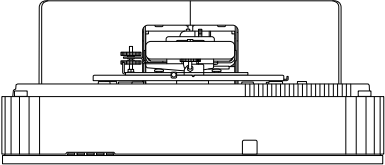Applicable parts	Necessary items
	<p>For the setting plate</p> <ul style="list-style-type: none"> • M10 or 3/8 inch x 60 mm anchor bolts (for securing the wall plate: at least x4) • M10 screw (for securing the wall plate temporarily: x1) • 17 mm ratchet wrench (for adjusting hexagonal axis) • Cables to connect to the projector • Devices such as mini PCs

Figures of Installation Dimensions

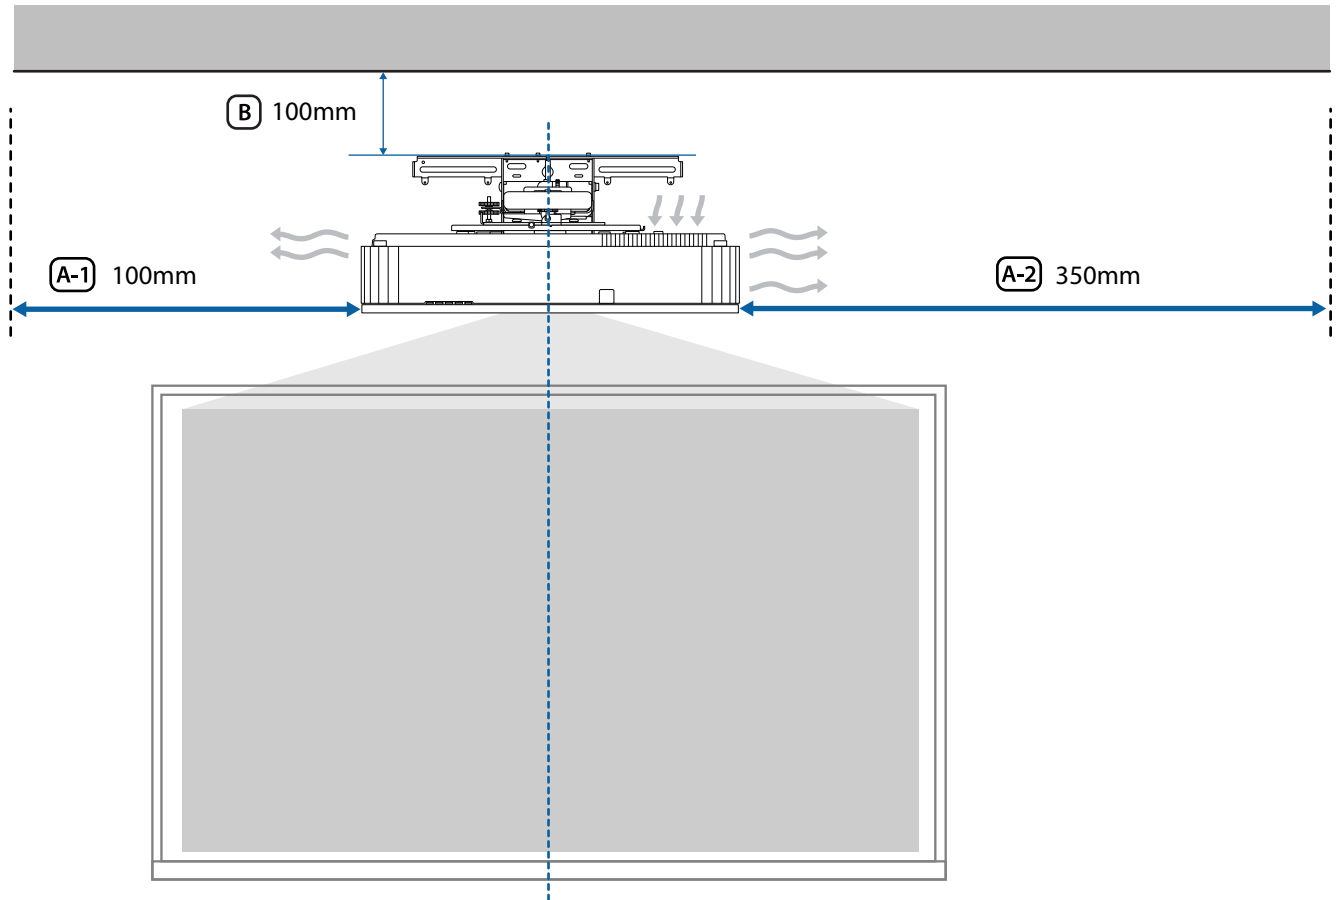


Caution

When installing the projector, make sure there is a gap between the wall and the projector's air exhaust and intake vents. (See figure **A-1** and **A-2** above)



Leaving a gap of approximately 100 mm from the ceiling to the top of the wall plate makes it easier to install and remove the projector. (See figure **B** above)

When projecting a long, horizontal image by placing multiple projectors side-by-side, use the Edge Blending function to make the edges of the images less noticeable. When projecting a screen with an aspect ratio of 3:1, set the **Blend Range** for **Edge Blending** to **600**.

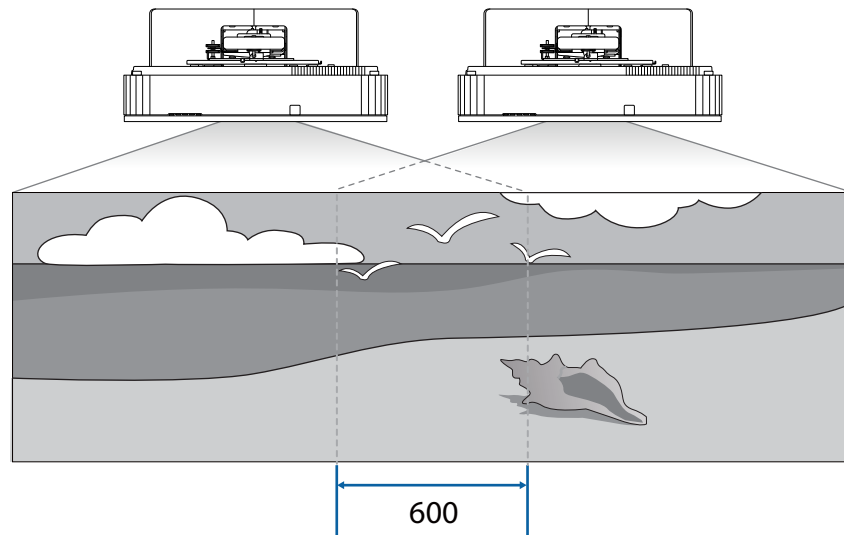

If you cannot set the Blend Range to 600, you can set it to less than 600.

If it is set to less than 600, black bars may appear on the left and right sides of the image.

Connection Figure


Connecting Multiple Projectors

You need the following cables when installing multiple projectors.







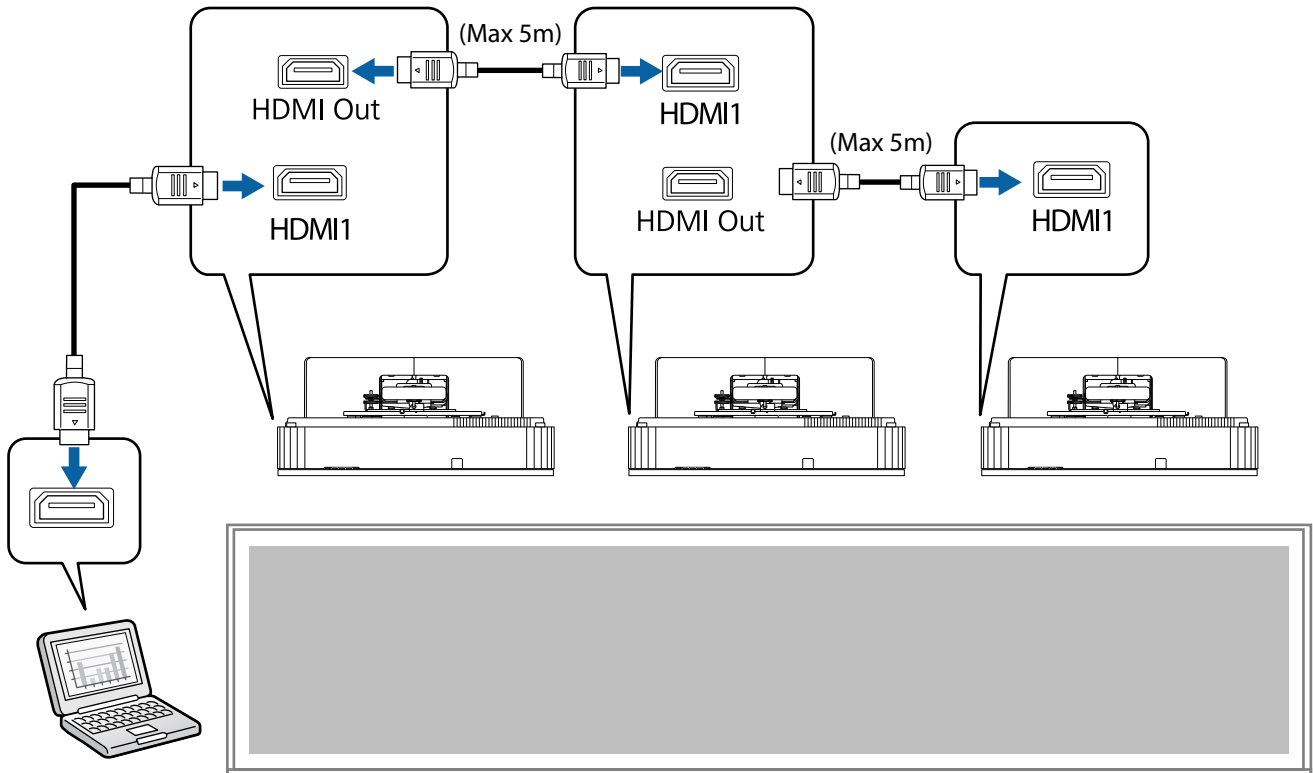



If you need to use other cables, check the *User's Guide*.













You can install two to four projectors side-by-side.

The following image is an example of connecting three projectors.



Notes on Installing the Setting Plate

 Warning	
<p>The setting plate is exclusively for mounting the projector on a wall. If anything other than a projector is mounted, the weight may result in damage.</p> <p>If this product falls, it could cause death or personal injury.</p>	
<p>The installation work (wall mounting) should be performed by specialists who have technical knowledge and ability. Incomplete or incorrect installation could cause the product to fall and cause personal injury or property damage.</p>	
<p>Follow the steps in this guide to install the Wall mount, and be sure to use the bolts and screws specified in this guide.</p> <p>If the instructions are not followed, this product may fall, resulting in personal injury or an accident.</p>	
<p>Handle the power cord carefully.</p> <p>Incorrect handling may cause fire or electric shock. Observe the following precautions when handling:</p> <ul style="list-style-type: none"> • Do not handle the power plug with wet hands. • Do not use a power cord that is damaged or modified. • Do not pull the power cord with too much force when routing the cable through the arm unit. 	
<p>Do not install the setting plate in a place where it might be subjected to vibration or shock.</p> <p>This could cause damage to the projector or mounting surface. If this product falls, it could cause death or personal injury.</p>	
<p>When installing on a wall, install so that it can sufficiently support the mass of the projector and the setting plate and resist any horizontal vibration. Use M10 or 3/8 inch x 60 mm nuts and bolts.</p> <p>Nuts and bolts smaller than M10 or 3/8 inch x 60 mm could cause the setting plate to fall. Epson accepts no responsibility for any damage or injury caused by lack of wall strength or inadequate installation.</p>	
<p>The installation work should be performed by at least two qualified service personnel. If you need to loosen any screws during installation, be careful not to drop this product.</p> <p>If this product falls, it could cause death or personal injury.</p>	
<p>When installing this product on a wall, the wall must be strong enough to hold the projector and the setting plate.</p> <p>This product should be installed on a concrete wall.</p> <p>The maximum combined weight of the projector and the setting plate is approximately 22.0 kg (not including cables).</p> <p>Ensure the strength of the wall before mounting this product on the wall. If the wall is not strong enough, reinforce the wall before installation.</p>	
<p>Inspect the setting plate on a regular basis to ensure there are no broken parts or loose screws.</p> <p>If any parts are damaged, stop using the setting plate immediately. If this product falls, it could cause death or personal injury.</p>	

 Warning	
<p>Do not disassemble or remodel this product.</p> <p>There are numerous high-voltage sections inside the product that could cause a fire, electric shock, or an accident.</p>	
<p>Do not hang on this product. Do not hang heavy objects on this product.</p> <p>If this product falls, it could cause death or personal injury.</p>	
<p>Do not use adhesives, lubricants, or oils to install or adjust the setting plate.</p> <p>If you use adhesives to prevent the screws from loosening or things such as lubricants or oils on the slide plate fixing part of the projector, the case may crack and cause the projector to fall, resulting in personal injury or property damage.</p>	
<p>Tighten all screws firmly after adjustment.</p> <p>Otherwise, the product may fall and cause personal injury or property damage.</p>	
<p>Never loosen the bolts and nuts after installation.</p> <p>Confirm that the screws have not become loose on a regular basis. If you find any loose screws, tighten them firmly. Otherwise, the product may fall and cause personal injury or property damage.</p>	
<p>Route the cables so that they are not interfered with the nuts and bolts.</p> <p>Incorrect handling of the cables may cause fire or electric shock.</p>	
<p>When turning on the projector, do not look into the projection lens.</p> <p>This could cause damage to eyesight due to the powerful light emitted. Take particular care when there are children present. When turning on the projector at a distance using the remote control, make sure there is no one looking into the projection lens.</p>	
<p>When using the projector, do not place any objects or put your hand near the projection lens.</p> <p>This area is dangerous as it reaches a high temperature due to the concentrated projection light.</p>	
<p>Do not use the projector in a location subject to combustible or explosive gas.</p> <p>High temperatures within the projector may cause ignition and a fire to occur.</p>	
<p>Only a specialist should remove or reinstall the projector, including for maintenance and repairs.</p> <p>See the projector's <i>User's Guide</i> for instructions on maintenance and repairs.</p>	
<p>If any abnormalities occur with this product, immediately disconnect the cables from the product, and then contact your local dealer or the nearest Epson service call center.</p> <p>Continuing to use the product in an abnormal condition could cause a fire, electric shock, or visual impairment.</p>	

 Warning

Laser warning labels have been attached to the inside and outside of the projector.





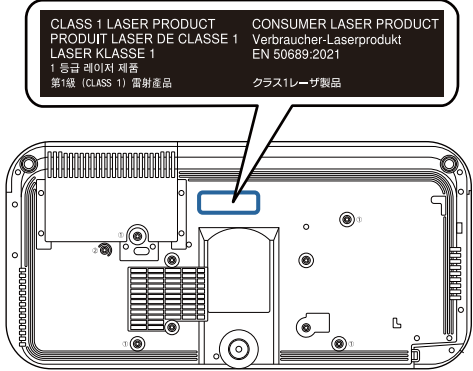






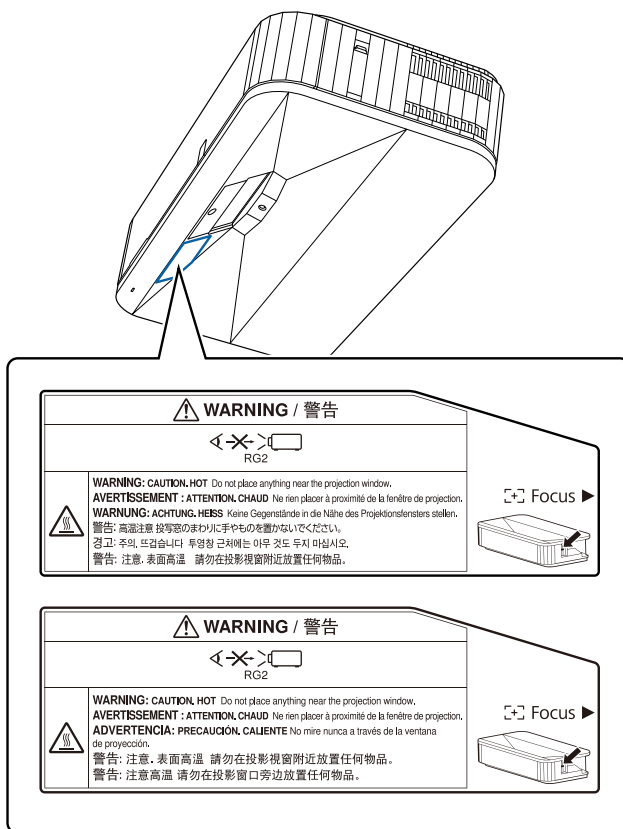


Internal












External

Do not look into the laser beam emitted from the projection lens while projecting. (Based on IEC/EN60825-1:2014)




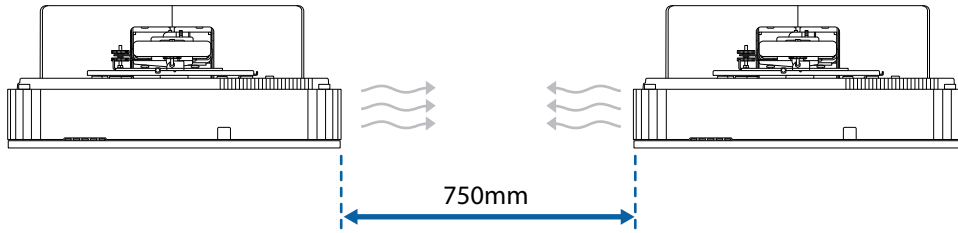
 Warning	
	
<p>Never open any cases on the projector.</p> <p>Electrical voltages inside the projector can cause severe injury.</p>	
<p>Do not look directly into the projector's light source.</p> <p>Possibly hazardous optical radiation emitted from this product. Eye injury may result.</p>	
 Caution	
<p>Do not install this product in a location where the operating temperature for your projector model may be exceeded.</p> <p>Such an environment may damage the projector.</p>	
<p>Install this product in a place free from excessive dust and humidity to prevent the lens or optical components from becoming dirty.</p>	
<p>Do not use excessive force when adjusting this product.</p> <p>This product may break, resulting in personal injury.</p>	
<p>This projector is a Class 1 laser product that complies with the IEC/EN60825-1: 2014 international standard for lasers.</p>	
<p>Do not disassemble the projector when disposing of it.</p> <p>Dispose according to your local or national laws and regulations.</p>	

Cautions on the Installation Location of the Setting Plate

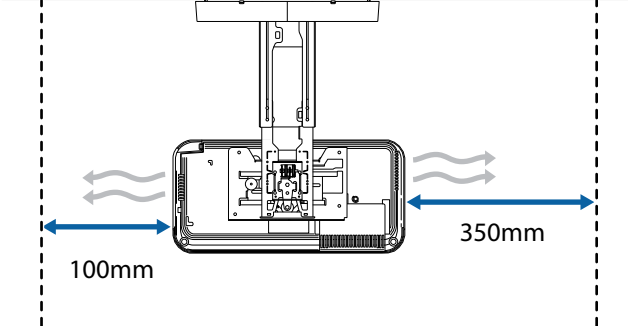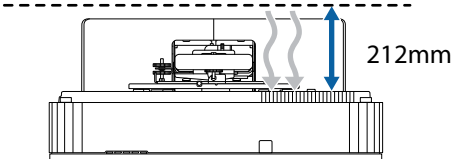 Warning	
<p>Do not install in a location subject to oily smoke or smoke for events.</p> <p>If oils and so on stick to the slide plate fixing part of the projector, the case may crack and cause the projector to fall, resulting in personal injury or property damage.</p>	
 Caution	
<p>Carry out power supply wiring work at the installation location of the projector in advance.</p>	
<p>Install the projector away from other electric devices such as fluorescent lights or air conditioners.</p> <p>Some types of fluorescent lights could interfere with the remote control or the pen.</p>	
<p>When installing the projector, make sure there is a gap between the wall and the projector's air exhaust and intake vents as shown in the following image.</p>	
<div style="display: flex; justify-content: space-around; align-items: center;">   </div>	
<p>When installing two or more projectors in parallel, make sure the temperature of the surrounding environment is less than 35°C.</p> <p>If the environment is too hot, the projector may overheat and the power may turn off without warning.</p>	


 Caution


When installing two or more projectors in parallel, leave a gap of at least 750mm between the projectors. 




If you cannot secure a gap of approx. 750mm, install a partition to block the heat vented from the projector's air exhaust vent.

Ensure the following space when installing partitions.

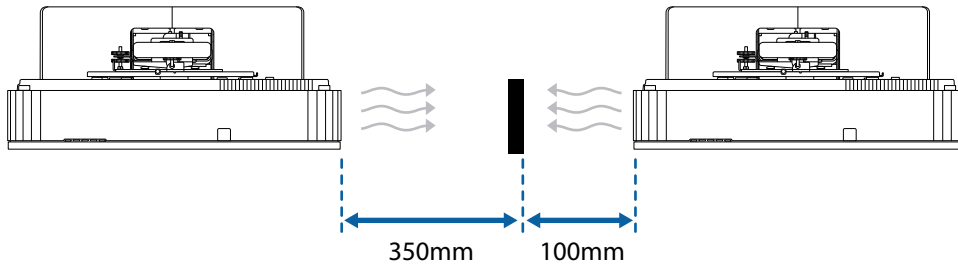

Install and adjust the projector at a room temperature that is close to the actual intended usage environment. 

If the temperature changes, the position of the image may shift.


Install the projector so that it is tilted at an angle of no more than +3 degrees or -3 degrees vertically and horizontally in relation to the screen. 

We recommend using stick-on screens or board screens. 


Setting Plate Specifications


Item	Specification
Setting plate mass (arm unit, hexagonal axis, adjustment unit, wall plate, wall plate cover, end cap)	Approx. 9.5 kg
Maximum load capacity	15.0 kg

External Dimensions

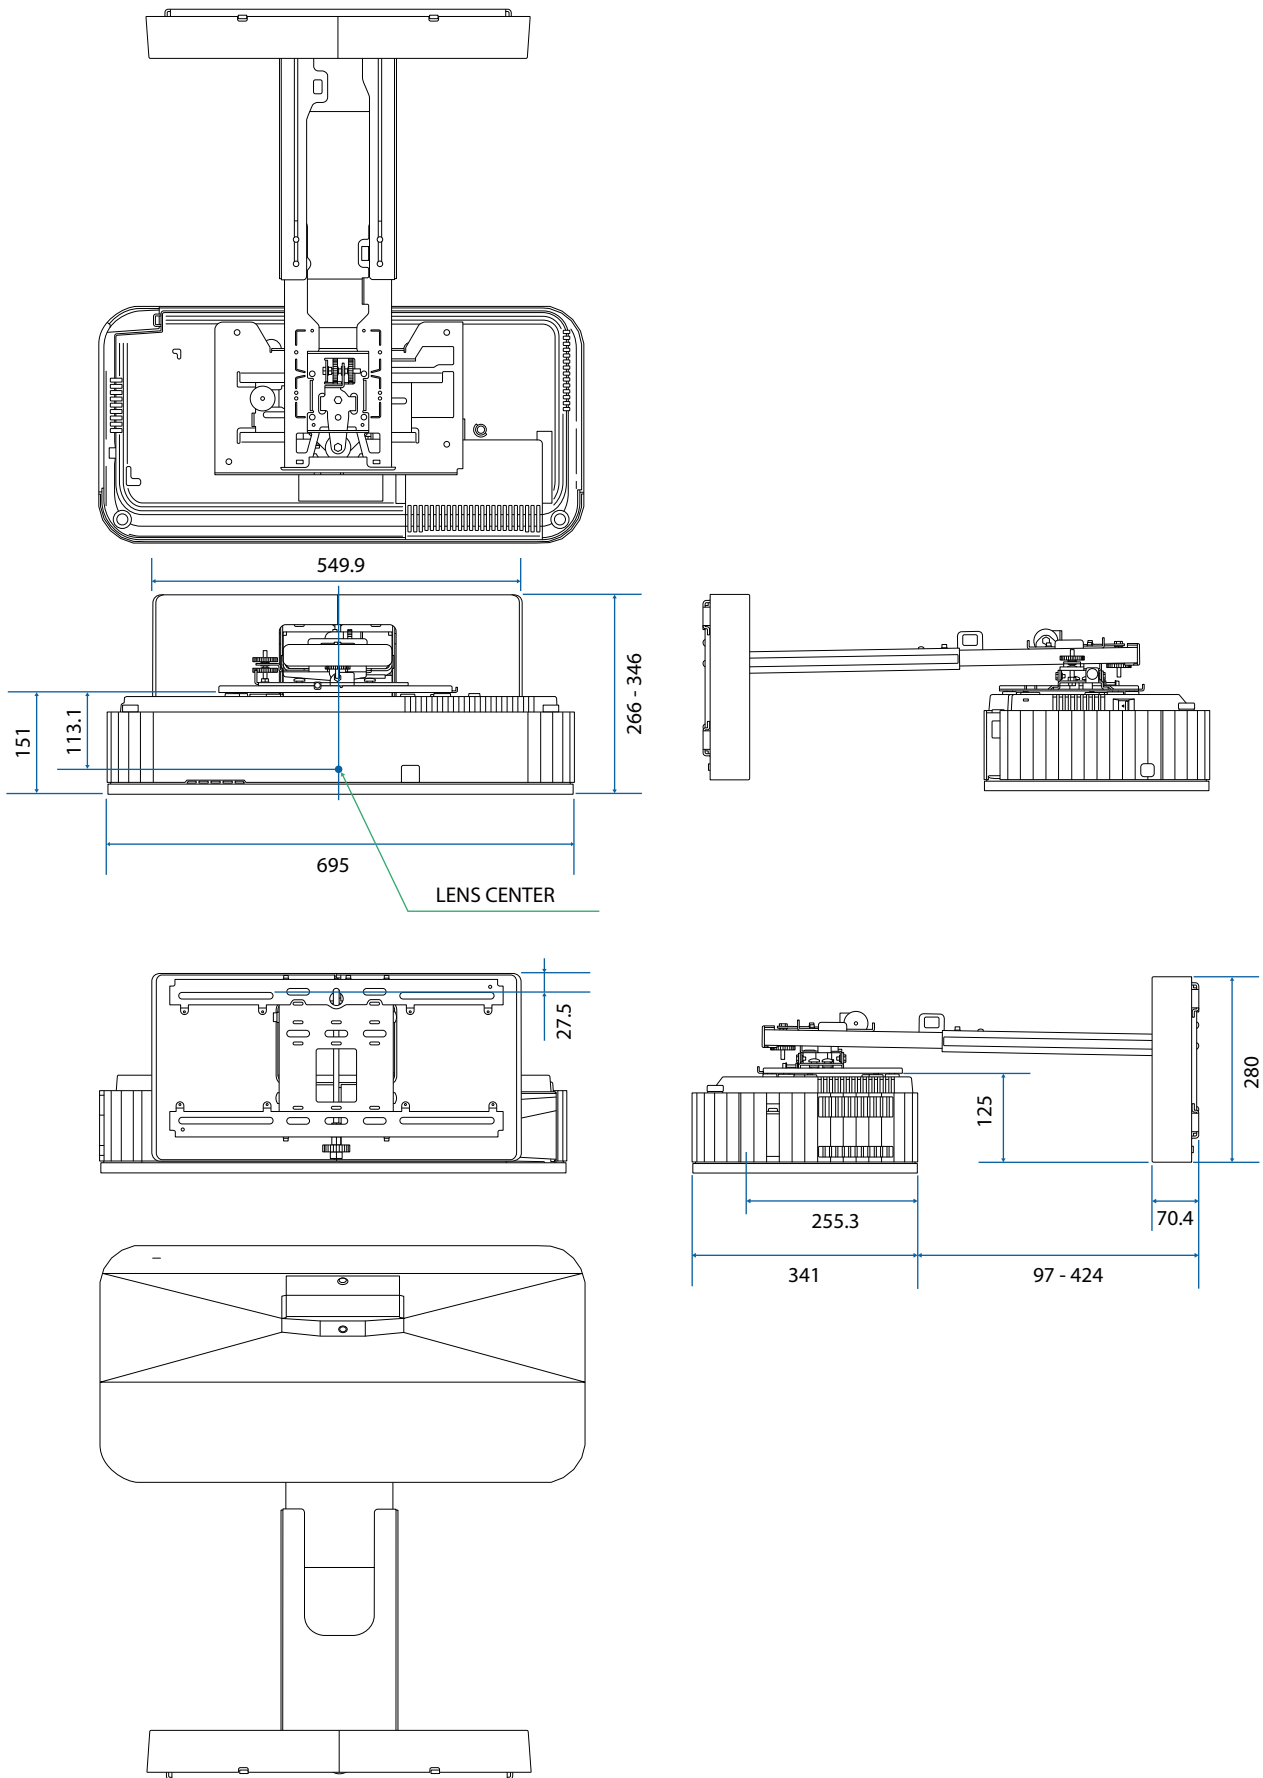


Installing the Setting Plate

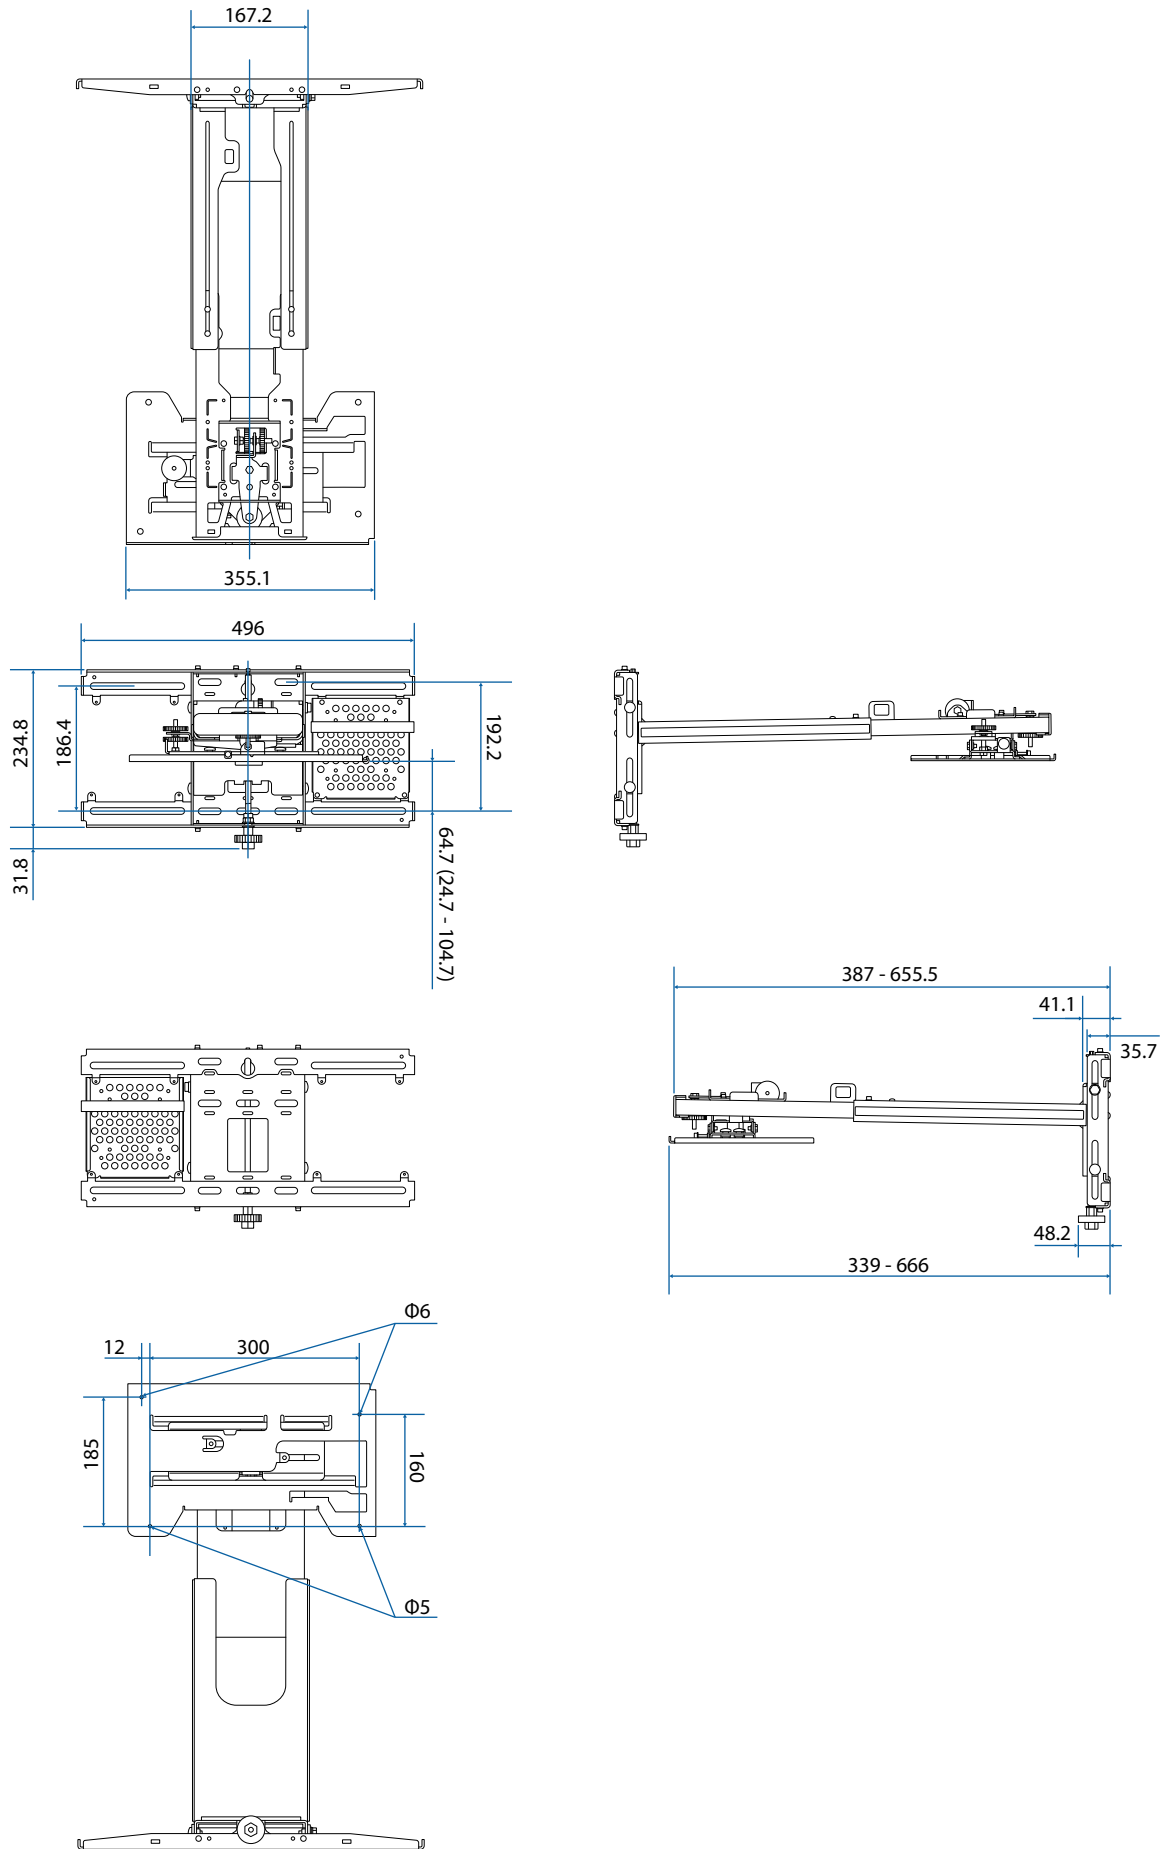

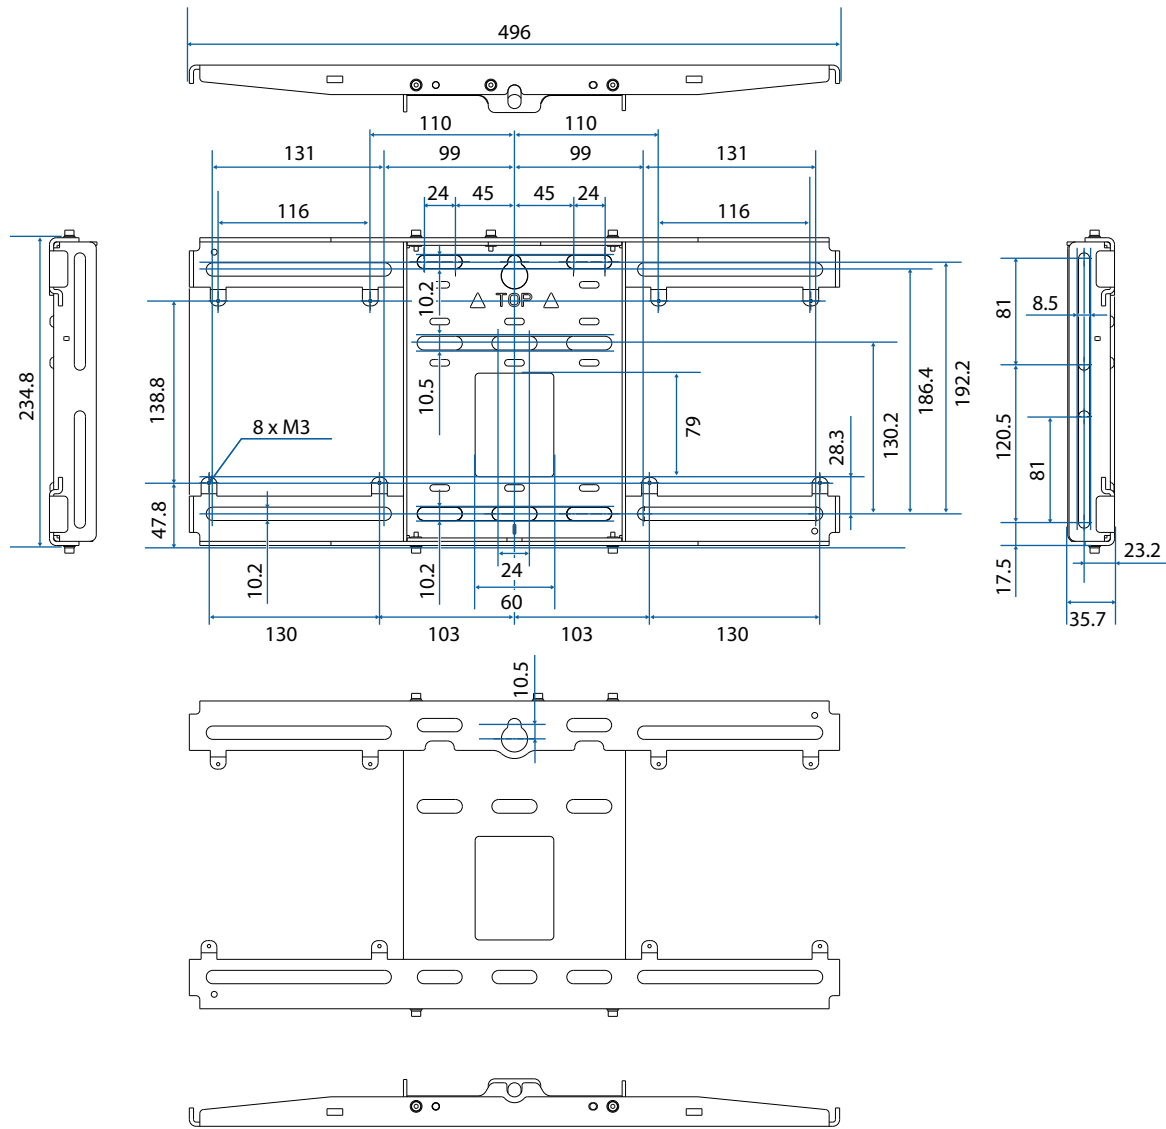


Adjustment Range


■ Vertical slide

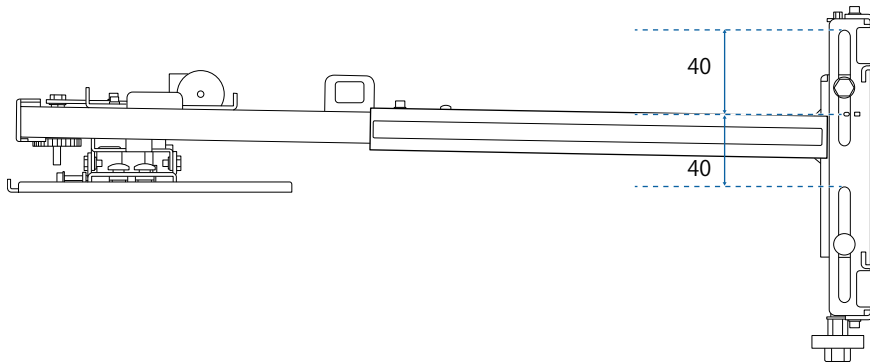


■ Horizontal slide

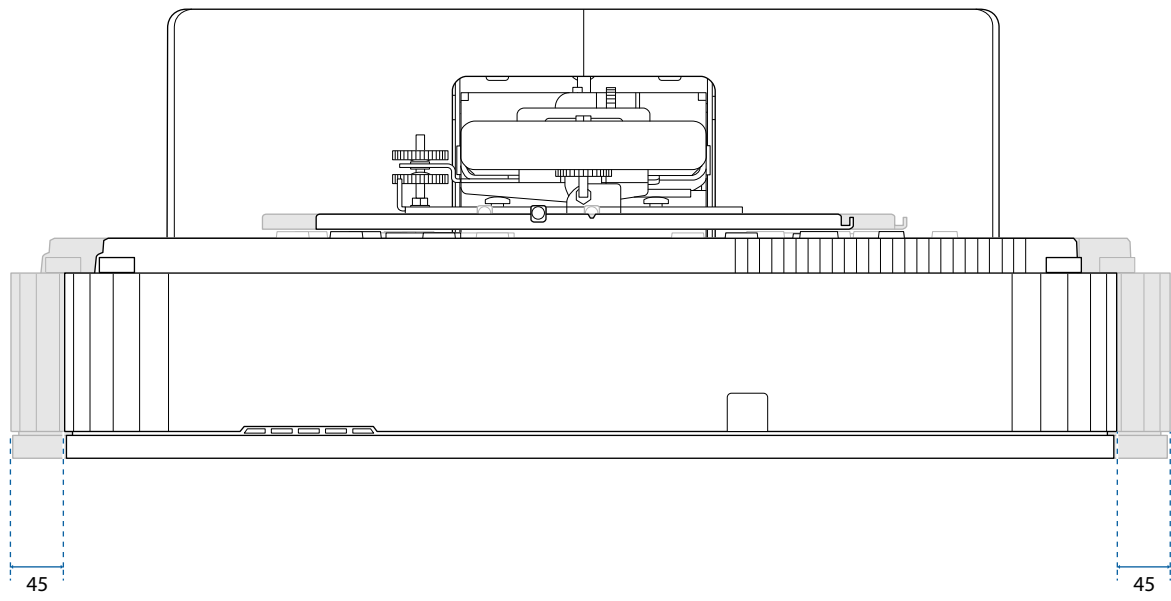

■ Forward/backward slide

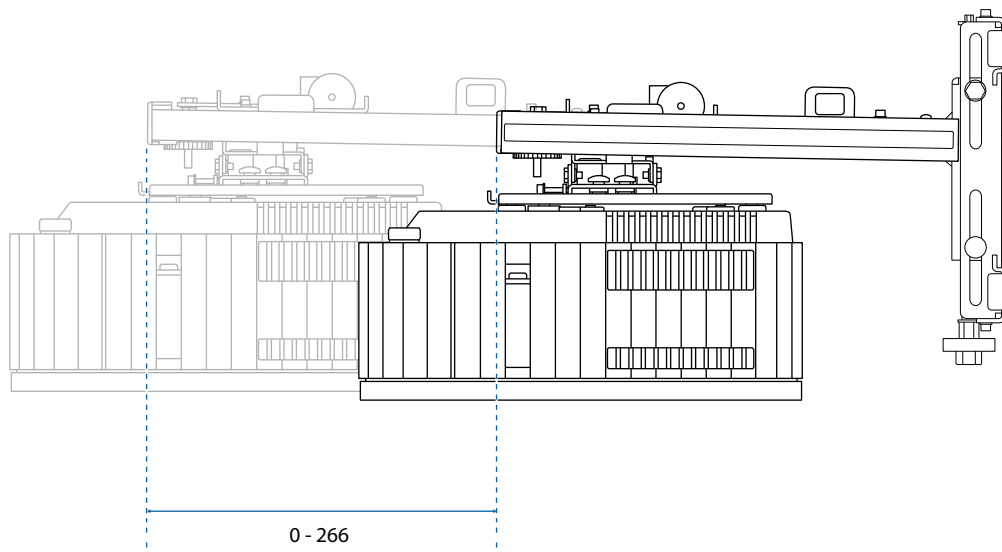

Mini PC Installation Plate

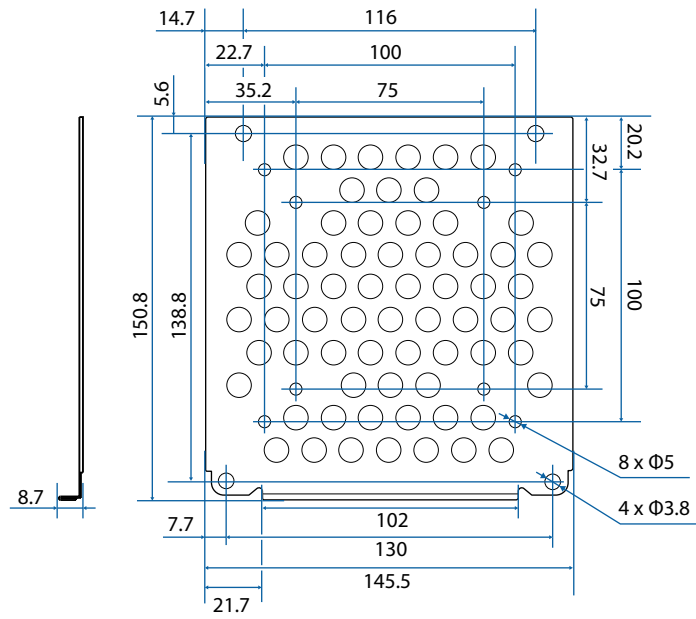









Item	Specification
Screw holes for installing PC (VESA compliant)	75 mm x 75 mm 100 mm x 100 mm
Supported PC sizes	Within 150 mm x 150 mm x 44 mm
Supported PC weight	0.7 kg or less

Installing the Setting Plate

Follow the work flow below to install the setting plate.

Route the cables before installing the wall mount according to your installation environment.


- 1 Remove the feet from the projector (3 places in total), and then attach the rubber caps to the front foot section.
- 2 Check the projection distance tables to determine the installation position (☞ p.23)
- 3 Attach the adjustment unit to the projector (☞ p.37)
- 4 Install the wall plate on the wall (☞ p.38)
- 5 Adjust the arm length of the arm unit, and then attach it to the wall plate (☞ p.40)
- 6 Attach the adjustment unit to the arm unit, and then connect the cables and peripheral devices (☞ p.45)
- 7 Adjust the position of the image (☞ p.48)
- 8 Attach the covers (☞ p.59)

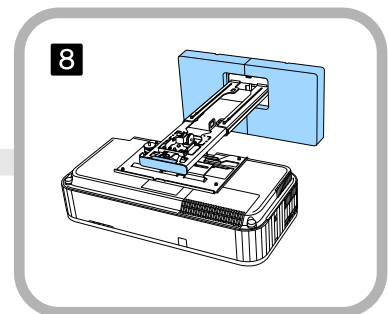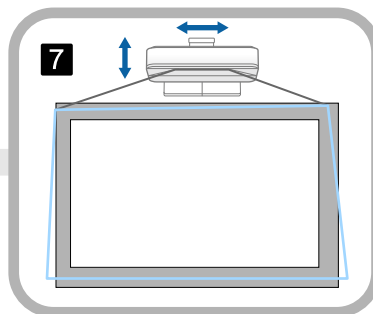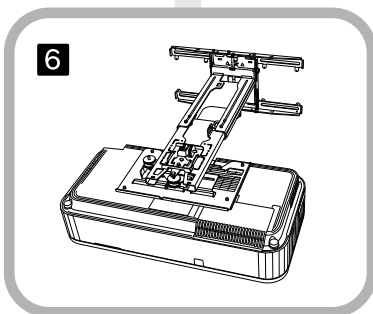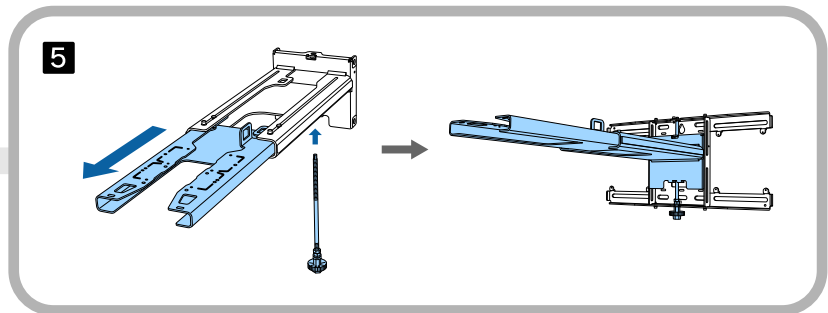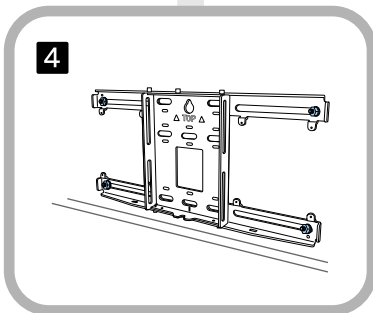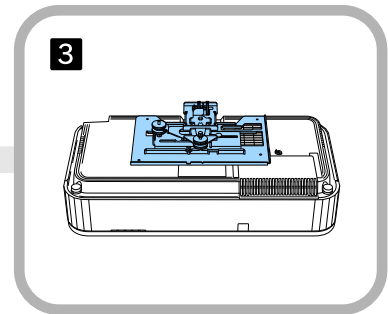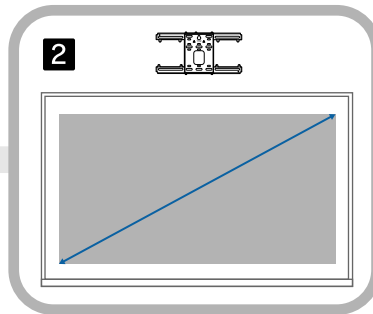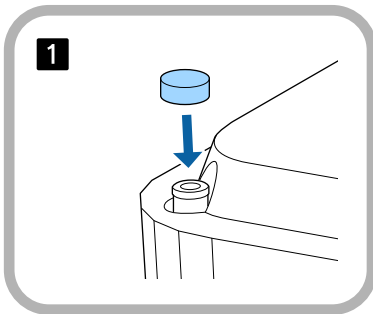

Attaching the Mount

■ Determining the installation position (projection distance tables)


Determine the installation position of the wall plate according to the size of the screen (S) you want to project on to. See the following figure to check the values from a to d. This is the value when the arm unit is in the middle of the wall plate (see ☆ in the following illustration).

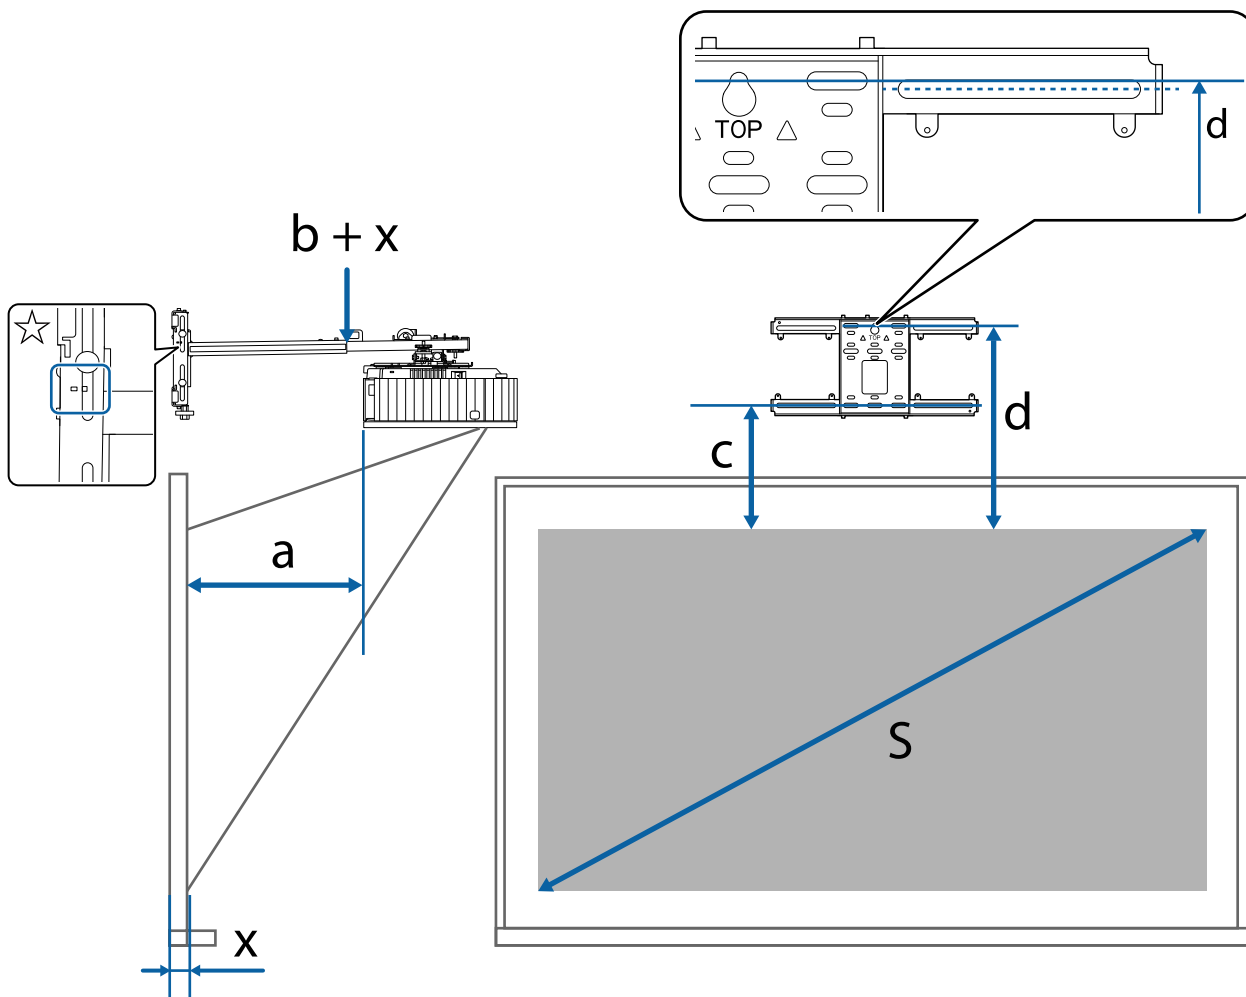

- | | | | |
|--------|--|----|---|
| a: | Minimum projection distance (Wide) | c: | Distance from the top edge of the image to the installation screw hole for the wall plate at the bottom |
| b + x: | Number on the arm slide scale on the arm unit (maximum 266 mm) | d: | Distance from the top edge of the image to the temporary screw hole for the wall plate |
| x: | Distance from the wall to the projection surface | S: | Projected image size |

See the following for the values for c and d when projecting at an aspect ratio of 16:6 or 21:9.

- c1/d1: When the **Screen Position** is in the center
- c2/d2: When the **Screen Position** is at the top

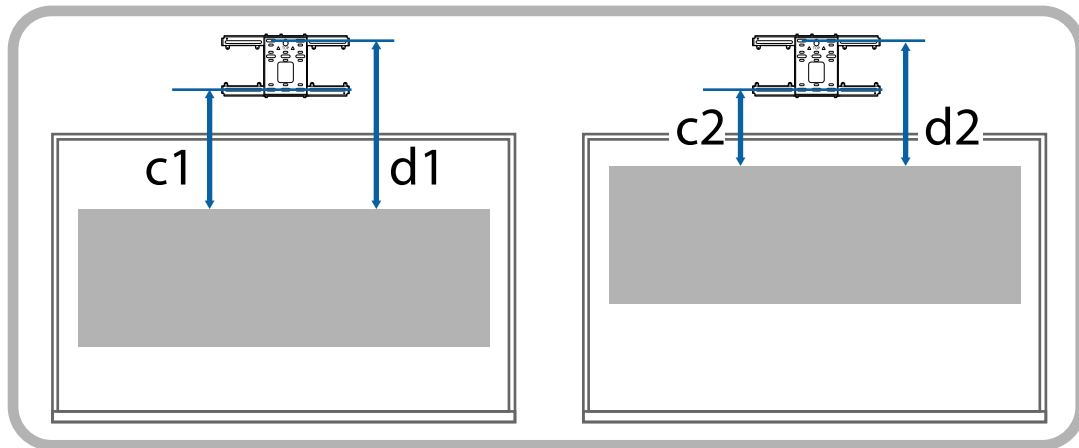

16:9 projected image

116 inches or less

[Unit: mm]

	S	a	b	c	d
100"	221 × 125	97	1	234	426
101"	224 × 126	101	5	236	428
102"	226 × 127	105	9	238	430
103"	228 × 128	109	13	240	432
104"	230 × 130	112	16	242	434
105"	232 × 131	116	20	244	436
106"	235 × 132	120	24	246	438
107"	237 × 133	124	28	248	440
108"	239 × 134	127	31	250	442
109"	241 × 136	131	35	252	444
110"	244 × 137	135	39	254	446
111"	246 × 138	139	43	256	448
112"	248 × 139	142	46	258	450
113"	250 × 141	146	50	260	452
114"	252 × 142	150	54	263	455
115"	255 × 143	154	58	265	457
116"	257 × 144	157	61	267	459

117 inches or more

[Unit: mm]

	S	a	b	c	d
117"	259 × 146	161	3	269	461
118"	261 × 147	165	7	271	463
119"	263 × 148	169	11	273	465
120"	266 × 149	172	14	275	467
121"	268 × 151	176	18	277	469
122"	270 × 152	180	22	279	471
123"	272 × 153	184	26	281	473
124"	275 × 154	187	29	283	475
125"	277 × 156	191	33	285	477
126"	279 × 157	195	37	287	479
127"	281 × 158	199	41	289	481
128"	283 × 159	202	44	291	483
129"	286 × 161	206	48	293	485
130"	288 × 162	210	52	295	487
131"	290 × 163	214	56	297	489
132"	292 × 164	217	59	299	491
133"	294 × 166	221	63	301	493
134"	297 × 167	225	67	303	495
135"	299 × 168	229	71	305	497
136"	301 × 169	232	74	307	499
137"	303 × 171	236	78	309	501
138"	306 × 172	240	82	311	503
139"	308 × 173	243	85	314	506
140"	310 × 174	247	89	316	508
141"	312 × 176	251	93	318	510
142"	314 × 177	255	97	320	512
143"	317 × 178	258	100	322	514
144"	319 × 179	262	104	324	516
145"	321 × 181	266	108	326	518
146"	323 × 182	270	112	328	520
147"	325 × 183	273	115	330	522

	S	a	b	c	d
148"	328 × 184	277	119	332	524
149"	330 × 186	281	123	334	526
150"	332 × 187	285	127	336	528
151"	334 × 188	288	130	338	530
152"	336 × 189	292	134	340	532
153"	339 × 191	296	138	342	534
154"	341 × 192	300	142	344	536
155"	343 × 193	303	145	346	538
156"	345 × 194	307	149	348	540
157"	348 × 196	311	153	350	542
158"	350 × 197	315	157	352	544
159"	352 × 198	318	160	354	546
160"	354 × 199	322	164	356	548

16:10 projected image

116 inches or less

[Unit: mm]

	S	a	b	c	d
93"	200 × 125	100	4	235	427
94"	202 × 127	104	8	237	429
95"	205 × 128	108	12	239	431
96"	207 × 129	112	16	242	434
97"	209 × 131	116	20	244	436
98"	211 × 132	120	24	246	438
99"	213 × 133	124	28	248	440
100"	215 × 135	128	32	251	443
101"	218 × 136	132	36	253	445
102"	220 × 137	136	40	255	447
103"	222 × 139	140	44	257	449
104"	224 × 140	144	48	259	451
105"	226 × 141	148	52	262	454
106"	228 × 143	152	56	264	456
107"	230 × 144	156	60	266	458
108"	233 × 145	160	64	268	460
109"	235 × 147	164	68	270	462
110"	237 × 148	168	72	273	465
111"	239 × 149	172	76	275	467
112"	241 × 151	176	80	277	469
113"	243 × 152	180	84	279	471
114"	246 × 153	184	88	281	473
115"	248 × 155	189	93	284	476
116"	250 × 156	193	97	286	478

117 inches or more

[Unit: mm]

	S	a	b	c	d
117"	252 × 158	197	39	288	480
118"	254 × 159	201	43	290	482
119"	256 × 160	205	47	292	484
120"	258 × 162	209	51	295	487
121"	261 × 163	213	55	297	489
122"	263 × 164	217	59	299	491
123"	265 × 166	221	63	301	493
124"	267 × 167	225	67	303	495
125"	269 × 168	229	71	306	498
126"	271 × 170	233	75	308	500
127"	274 × 171	237	79	310	502
128"	276 × 172	241	83	312	504
129"	278 × 174	245	87	314	506
130"	280 × 175	249	91	317	509
131"	282 × 176	253	95	319	511
132"	284 × 178	257	99	321	513
133"	286 × 179	261	103	323	515
134"	289 × 180	265	107	325	517
135"	291 × 182	269	111	328	520
136"	293 × 183	274	116	330	522
137"	295 × 184	278	120	332	524
138"	297 × 186	282	124	334	526
139"	299 × 187	286	128	337	529
140"	302 × 188	290	132	339	531
141"	304 × 190	294	136	341	533
142"	306 × 191	298	140	343	535
143"	308 × 193	302	144	345	537
144"	310 × 194	306	148	348	540
145"	312 × 195	310	152	350	542
146"	314 × 197	314	156	352	544
147"	317 × 198	318	160	354	546
148"	319 × 199	322	164	356	548

4:3 projected image

116 inches or less

[Unit: mm]

	S	a	b	c	d
82"	167 × 125	99	3	235	427
83"	169 × 126	103	7	237	429
84"	171 × 128	108	12	240	432
85"	173 × 130	113	17	242	434
86"	175 × 131	117	21	245	437
87"	177 × 133	122	26	247	439
88"	179 × 134	126	30	250	442
89"	181 × 136	131	35	252	444
90"	183 × 137	135	39	255	447
91"	185 × 139	140	44	257	449
92"	187 × 140	145	49	260	452
93"	189 × 142	149	53	262	454
94"	191 × 143	154	58	265	457
95"	193 × 145	158	62	267	459
96"	195 × 146	163	67	270	462
97"	197 × 148	168	72	272	464
98"	199 × 149	172	76	275	467
99"	201 × 151	177	81	277	469
100"	203 × 152	181	85	280	472
101"	205 × 154	186	90	282	474
102"	207 × 155	190	94	285	477
103"	209 × 157	195	99	287	479
104"	211 × 158	200	104	290	482
105"	213 × 160	204	108	292	484
106"	215 × 162	209	113	295	487
107"	217 × 163	213	117	297	489
108"	219 × 165	218	122	300	492
109"	221 × 166	223	127	302	494
110"	224 × 168	227	131	305	497
111"	226 × 169	232	136	307	499

	S	a	b	c	d
112"	228 × 171	236	140	310	502
113"	230 × 172	241	145	312	504
114"	232 × 174	245	149	315	507
115"	234 × 175	250	154	317	509
116"	236 × 177	255	159	320	512

117 inches or more

[Unit: mm]

	S	a	b	c	d
117"	238 × 178	259	101	322	514
118"	240 × 180	264	106	325	517
119"	242 × 181	268	110	327	519
120"	244 × 183	273	115	330	522
121"	246 × 184	278	120	332	524
122"	248 × 186	282	124	335	527
123"	250 × 187	287	129	337	529
124"	252 × 189	291	133	340	532
125"	254 × 191	296	138	342	534
126"	256 × 192	300	142	345	537
127"	258 × 194	305	147	347	539
128"	260 × 195	310	152	350	542
129"	262 × 197	314	156	352	544
130"	264 × 198	319	161	355	547

16:6 projected image

116 inches or less

[Unit: mm]

	S	a	b	c1	d1	c2	d2
93"	221 × 83	97	1	441	633	234	426
94"	224 × 84	101	5	446	638	236	429
95"	226 × 85	105	9	450	642	238	430
96"	228 × 86	109	13	454	646	240	432
97"	231 × 87	113	17	459	651	243	435
98"	233 × 87	117	21	463	655	244	437
99"	235 × 88	121	25	468	660	247	439
100"	238 × 89	125	29	472	664	249	441
101"	240 × 90	129	33	477	669	252	444
102"	243 × 91	133	37	481	673	254	446
103"	245 × 92	137	41	485	677	255	448
104"	247 × 93	141	45	490	682	258	450
105"	250 × 94	145	49	494	686	260	452
106"	252 × 95	149	53	499	691	263	455
107"	254 × 95	153	57	503	695	264	457
108"	257 × 96	157	61	507	699	266	458
109"	259 × 97	162	66	512	704	269	461
110"	262 × 98	166	70	516	708	271	463
111"	264 × 99	170	74	521	713	274	466
112"	266 × 100	174	78	525	717	275	467
113"	269 × 101	178	82	530	722	278	470
114"	271 × 102	182	86	534	726	280	472
115"	274 × 103	186	90	538	730	282	474
116"	276 × 103	190	94	543	735	284	477

117 inches or more

[Unit: mm]

	S	a	b	c1	d1	c2	d2
117"	278 × 104	194	36	547	739	286	478
118"	281 × 105	198	40	552	744	289	481
119"	283 × 106	202	44	556	748	291	483
120"	285 × 107	206	48	561	753	293	486
121"	288 × 108	210	52	565	757	295	487
122"	290 × 109	214	56	569	761	297	489
123"	293 × 110	218	60	574	766	300	492
124"	295 × 111	222	64	578	770	302	494
125"	297 × 111	226	68	583	775	304	496
126"	300 × 112	230	72	587	779	306	498
127"	302 × 113	234	76	591	783	308	500
128"	304 × 114	238	80	596	788	311	503
129"	307 × 115	242	84	600	792	312	505
130"	309 × 116	246	88	605	797	315	507
131"	312 × 117	250	92	609	801	317	509
132"	314 × 118	254	96	614	806	320	512
133"	316 × 119	258	100	618	810	321	514
134"	319 × 120	262	104	622	814	323	515
135"	321 × 120	266	108	627	819	326	518
136"	323 × 121	270	112	631	823	328	520
137"	326 × 122	274	116	636	828	331	523
138"	328 × 123	278	120	640	832	332	525
139"	331 × 124	282	124	645	837	335	527
140"	333 × 125	286	128	649	841	337	529
141"	335 × 126	290	132	653	845	339	531
142"	338 × 127	294	136	658	850	341	534
143"	340 × 128	298	140	662	854	343	535
144"	342 × 128	302	144	667	859	346	538
145"	345 × 129	306	148	671	863	348	540
146"	347 × 130	310	152	675	867	349	542
147"	350 × 131	314	156	680	872	352	544
148"	352 × 132	318	160	684	876	354	546

21:9 projected image

116 inches or less

[Unit: mm]

	S	a	b	c1	d1	c2	d2
95"	222 × 95	98	2	383	575	234	427
96"	224 × 96	102	6	387	579	237	429
97"	226 × 97	106	10	390	582	238	431
98"	229 × 98	110	14	394	586	241	433
99"	231 × 99	114	18	398	590	243	435
100"	233 × 100	118	22	401	593	245	437
101"	236 × 101	122	26	405	597	247	439
102"	238 × 102	126	30	409	601	250	442
103"	240 × 103	130	34	413	605	252	444
104"	243 × 104	134	38	416	608	253	446
105"	245 × 105	138	42	420	612	256	448
106"	247 × 106	142	46	424	616	258	450
107"	250 × 107	146	50	427	619	260	452
108"	252 × 108	150	54	431	623	262	454
109"	254 × 109	153	57	435	627	265	457
110"	257 × 110	157	61	439	631	267	459
111"	259 × 111	161	65	442	634	268	461
112"	261 × 112	165	69	446	638	271	463
113"	264 × 113	169	73	450	642	273	466
114"	266 × 114	173	77	453	645	275	467
115"	268 × 115	177	81	457	649	277	469
116"	271 × 116	181	85	461	653	280	472

117 inches or more


[Unit: mm]

	S	a	b	c1	d1	c2	d2
117"	273 × 117	185	27	465	657	282	474
118"	275 × 118	189	31	468	660	284	476
119"	278 × 119	193	35	472	664	286	478
120"	280 × 120	197	39	476	668	288	481
121"	282 × 121	201	43	479	671	290	482
122"	285 × 122	205	47	483	675	292	484
123"	287 × 123	209	51	487	679	295	487
124"	289 × 124	213	55	491	683	297	489
125"	292 × 125	217	59	494	686	299	491
126"	294 × 126	221	63	498	690	301	493
127"	296 × 127	225	67	502	694	303	496
128"	299 × 128	228	70	505	697	305	497
129"	301 × 129	232	74	509	701	307	500
130"	304 × 130	236	78	513	705	310	502
131"	306 × 131	240	82	517	709	312	504
132"	308 × 132	244	86	520	712	314	506
133"	311 × 133	248	90	524	716	316	508
134"	313 × 134	252	94	528	720	319	511
135"	315 × 135	256	98	531	723	320	512
136"	318 × 136	260	102	535	727	322	515
137"	320 × 137	264	106	539	731	325	517
138"	322 × 138	268	110	543	735	327	519
139"	325 × 139	272	114	546	738	329	521
140"	327 × 140	276	118	550	742	331	523
141"	329 × 141	280	122	554	746	334	526
142"	332 × 142	284	126	557	749	335	527
143"	334 × 143	288	130	561	753	337	530
144"	336 × 144	292	134	565	757	340	532
145"	339 × 145	296	138	569	761	342	535
146"	341 × 146	300	142	572	764	344	536

	S	a	b	c1	d1	c2	d2
147"	343 × 147	303	145	576	768	346	538
148"	346 × 148	307	149	580	772	349	541
149"	348 × 149	311	153	583	775	350	542
150"	350 × 150	315	157	587	779	352	545
151"	353 × 151	319	161	591	783	355	547


■ Attaching the adjustment unit to the projector

1 Loosen the M4 bolt on the adjustment unit, and then align the marks for each part

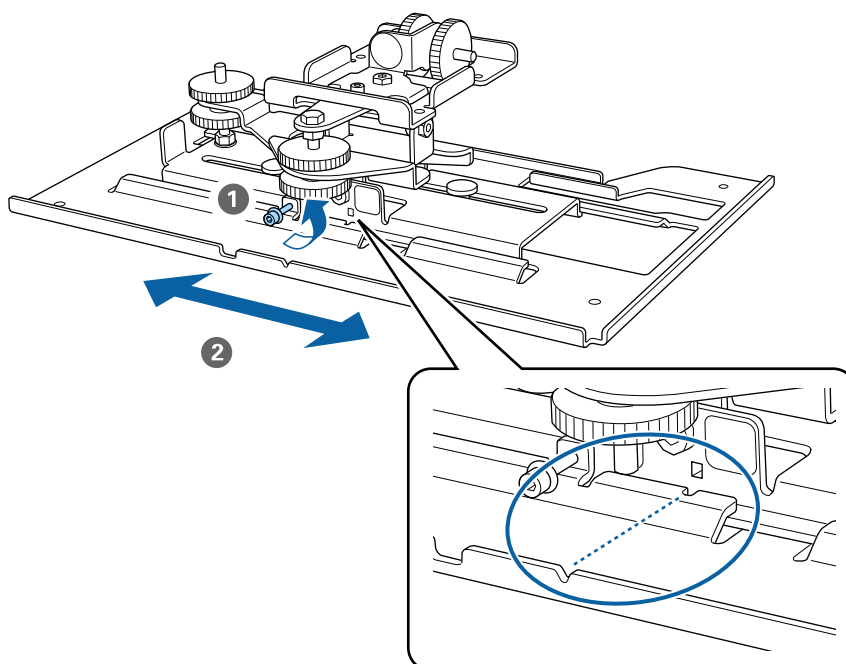

When the position is correct, tighten the M4 bolt.

2 Secure the adjustment unit to the base of the projector with the M4 x 12 mm bolts (x4) supplied

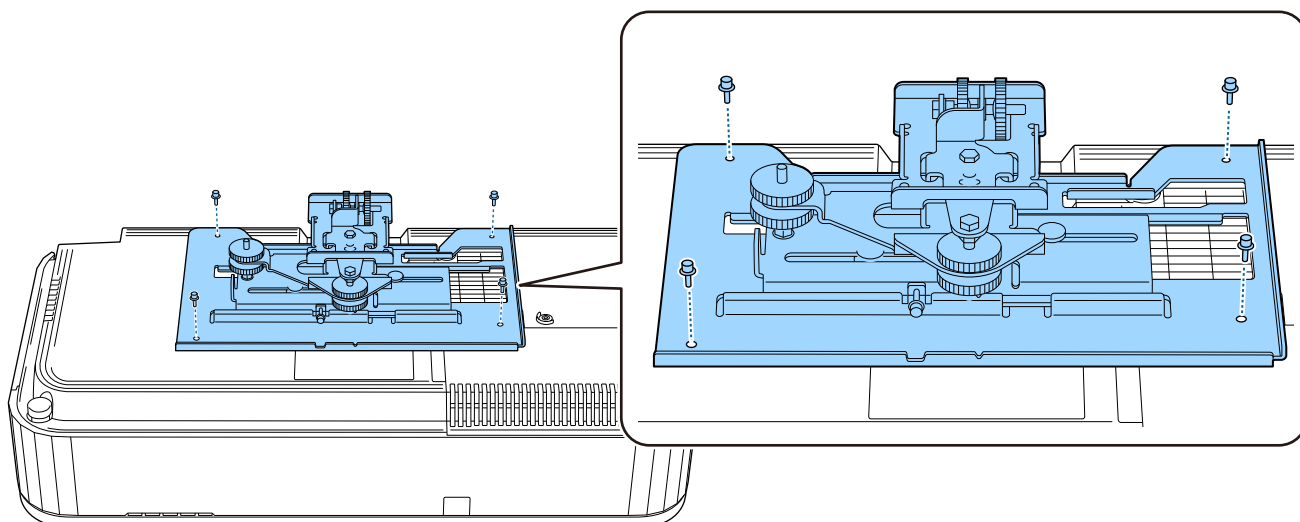


■ Install the wall plate on the wall

- 1 Attach the template sheet to the wall


Attach the template sheet according to the installation position that you confirmed using the projection distance table (p.23).

Align the center position of the screen being projected with Image Center A on the Template sheet.

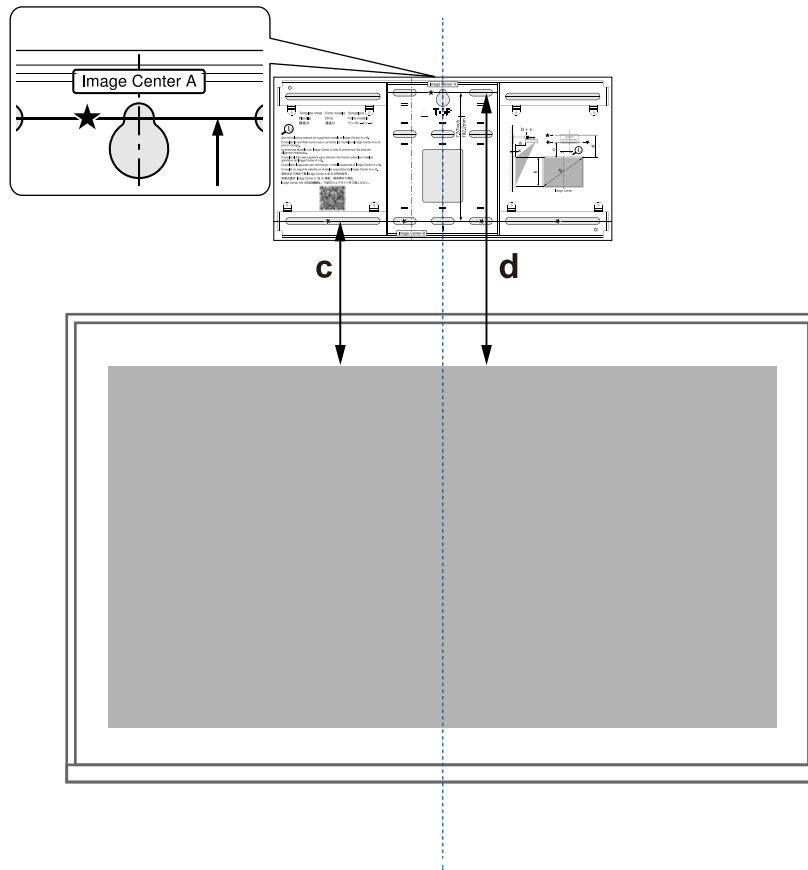


- 2 Drive a commercially available M10 screw into the position of the temporary screw hole for the wall plate

Leave a gap of 6 mm or more between the wall and the screw head.

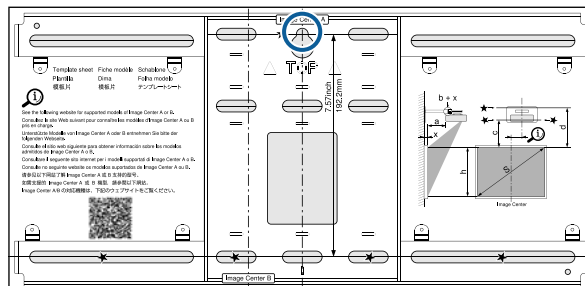


3 Determine the positions for the mounting holes for the wall plate

From the screw holes shown in the figure below, secure at least four points at the top, bottom, left, and right for optimum balance.

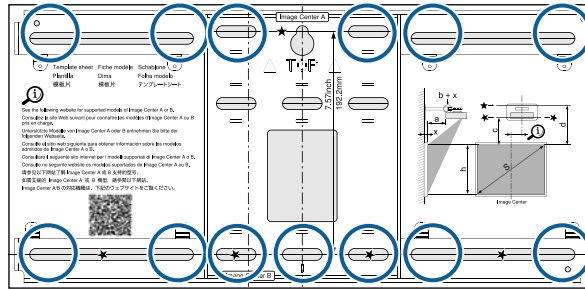


4 Drill the holes in the wall

- Drill diameter: 10.5 mm (M10) or 10 mm (3/8 inches)
- Pilot hole depth: 45 mm
- Anchor hole depth: 40 mm

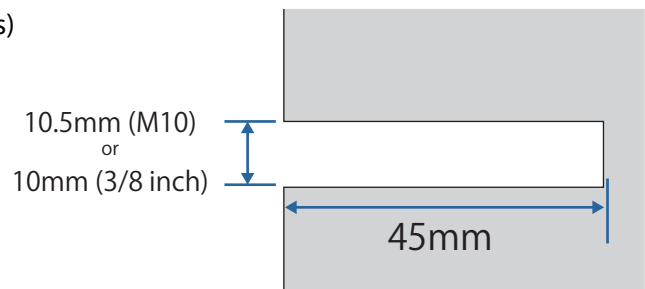


When routing cables to the projector through a wall, you can drill holes within the area shown in the figure below and use them as cable routing holes.

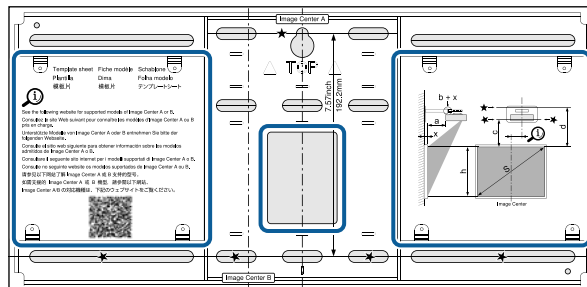


5 Remove the template sheet

6 Place the wall plate on the temporary M10 screw that you installed in step 2

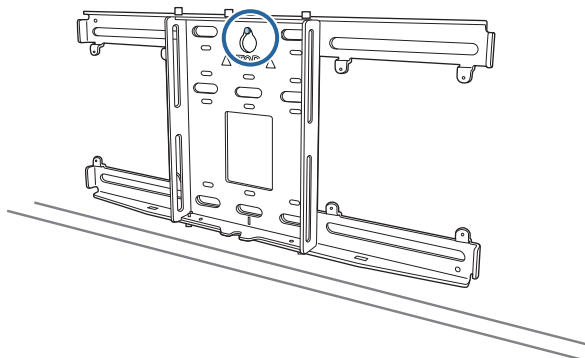


- 7 Use commercially available M10 or 3/8 inch x 60 mm anchor bolts to secure the wall plate to the holes you drilled in step 4

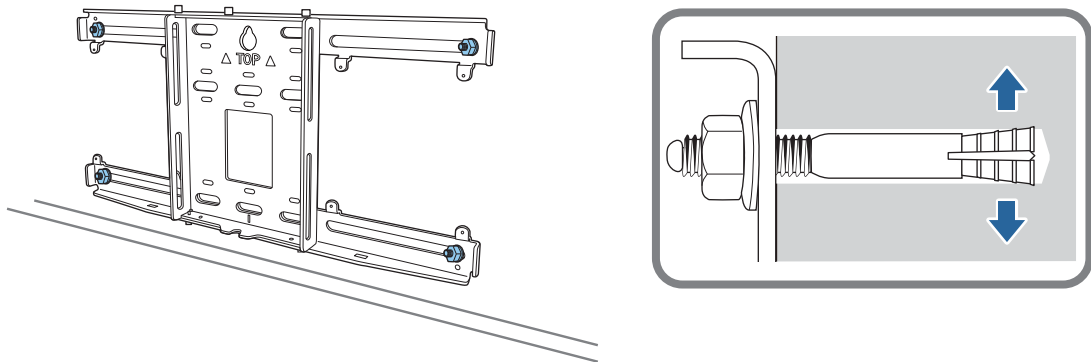


Install the arm unit on the wall plate


- 1 Loosen the M4 x 12 mm bolts (x2) and extend the arm slide on the arm unit
Adjust the scale on the slider to the combined distance of the value for (b) confirmed in the projection distance table (p.23) and the thickness of the projection surface (x).

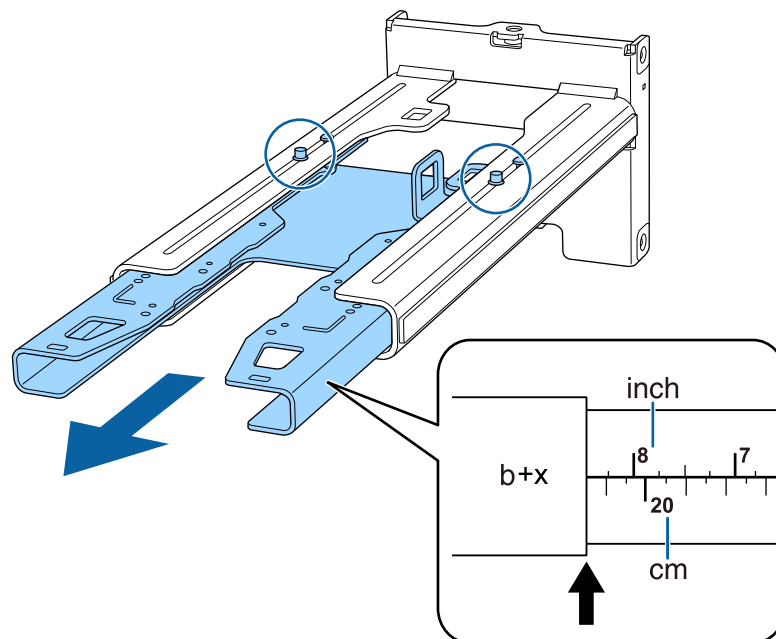

2 Insert the hexagonal axis into the arm unit

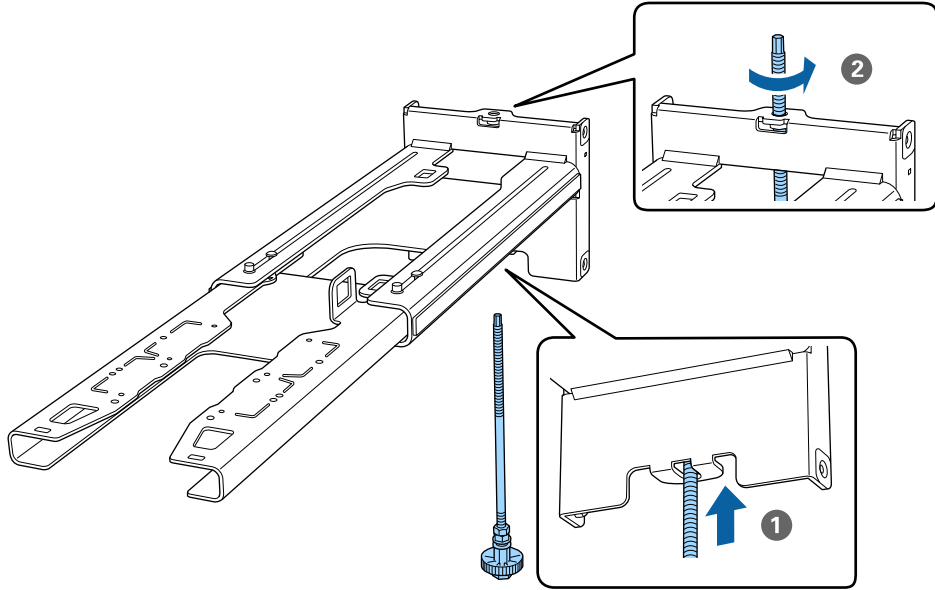


3 Route the necessary cables through the arm unit

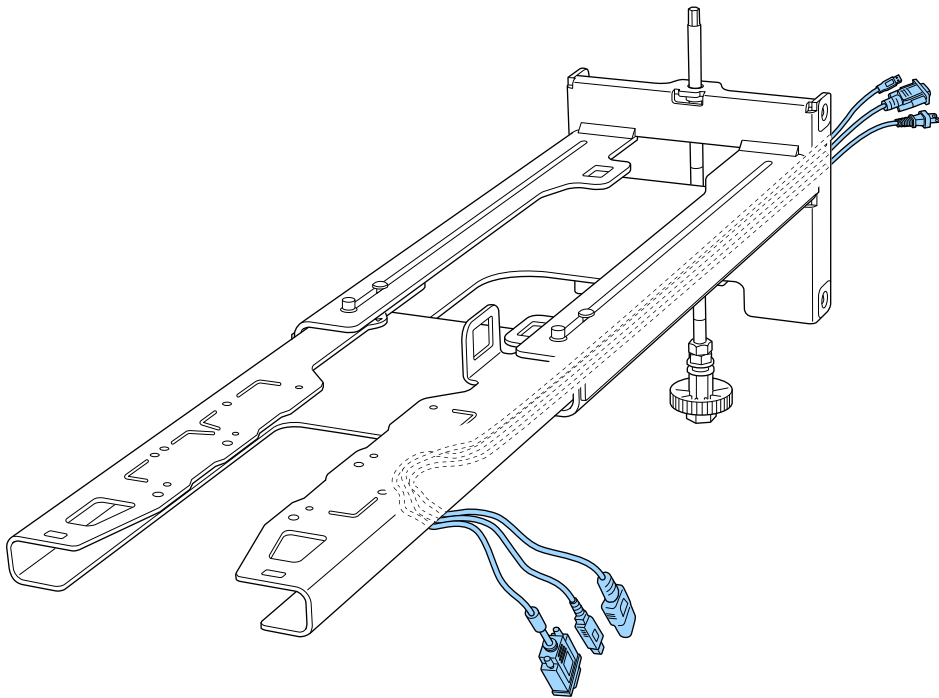

Warning
Do not hang the rest of the cables over the arm unit. They could fall and cause an accident.

Make sure that cable ports for connecting to peripheral devices such as mini PCs are routed so that they come out of the lower part of the arm unit and not through walls.


- 4** Attach the arm unit to the wall plate
Insert the hexagonal axis until the tip extends slightly out of the top of the wall plate and the other end connects to the bottom of the wall plate.

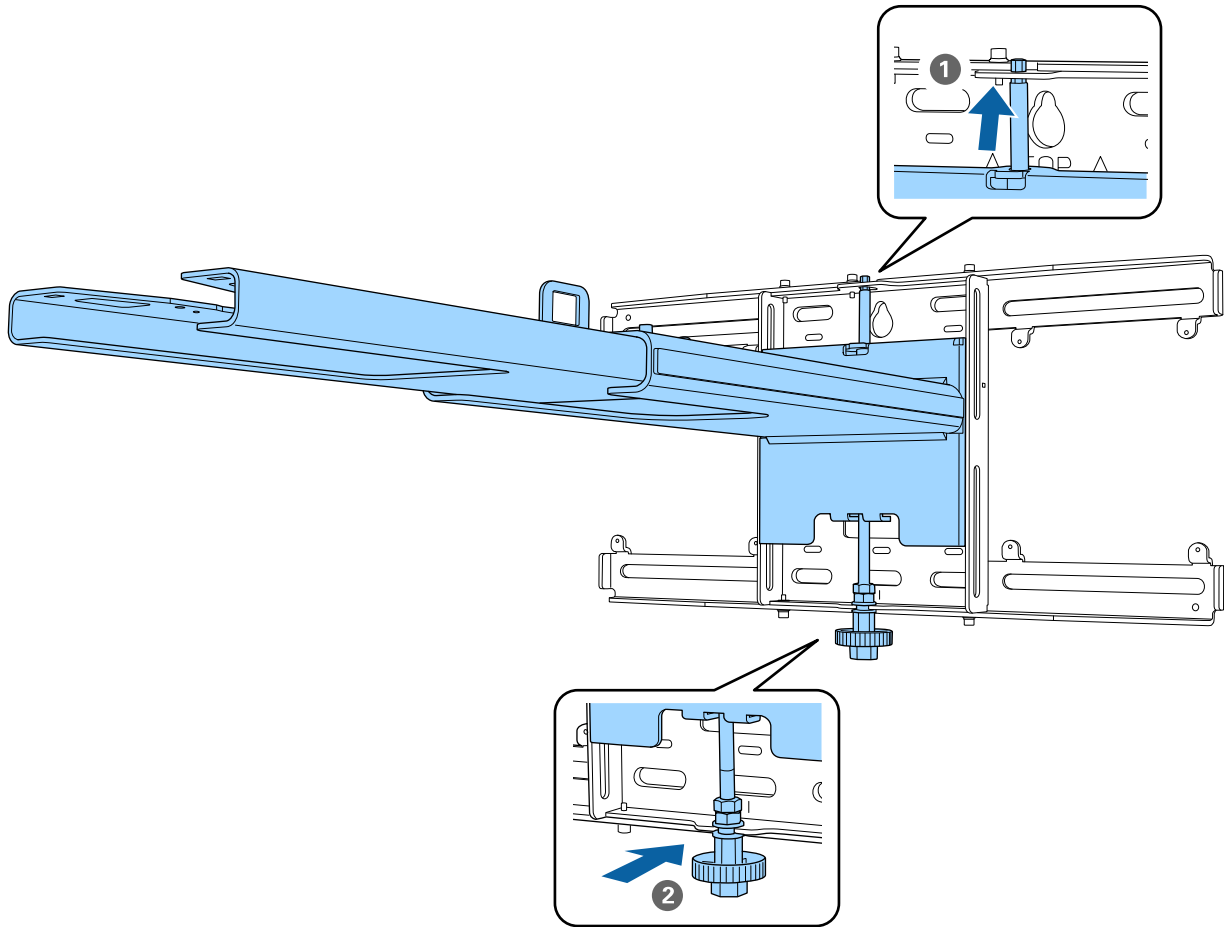


 **Caution**

Take care not to trap the cables between the arm unit and the wall plate.


- 5** Temporarily secure the arm unit
Secure three points with the M6 screws supplied (x3).

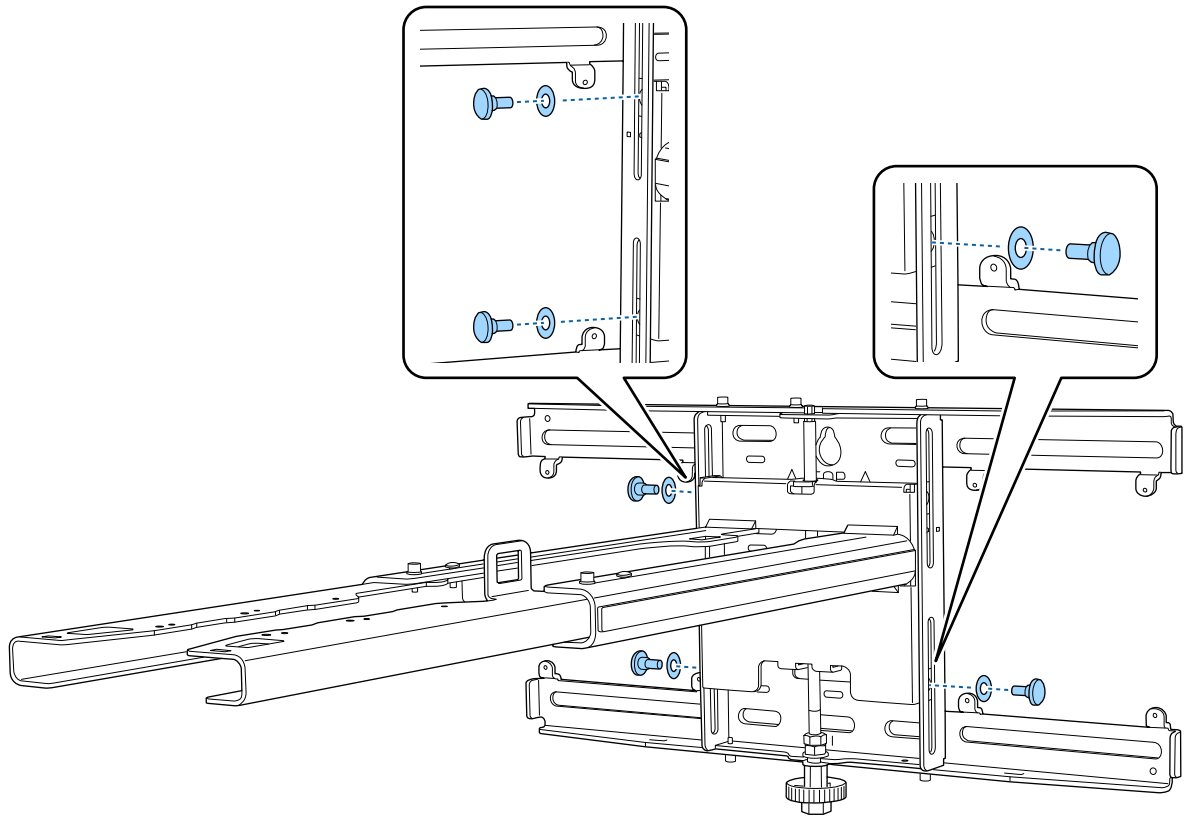

- 6** Adjust the vertical slide with the open-ended spanner to align the marks on the wall plate and the arm unit.

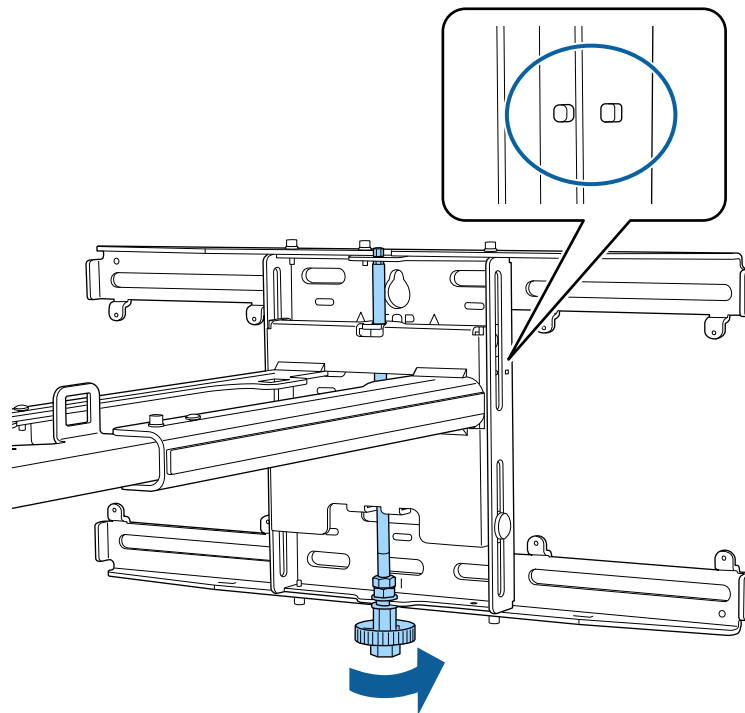

- 7 Tighten the M6 bolt (x1) to secure the arm unit in position

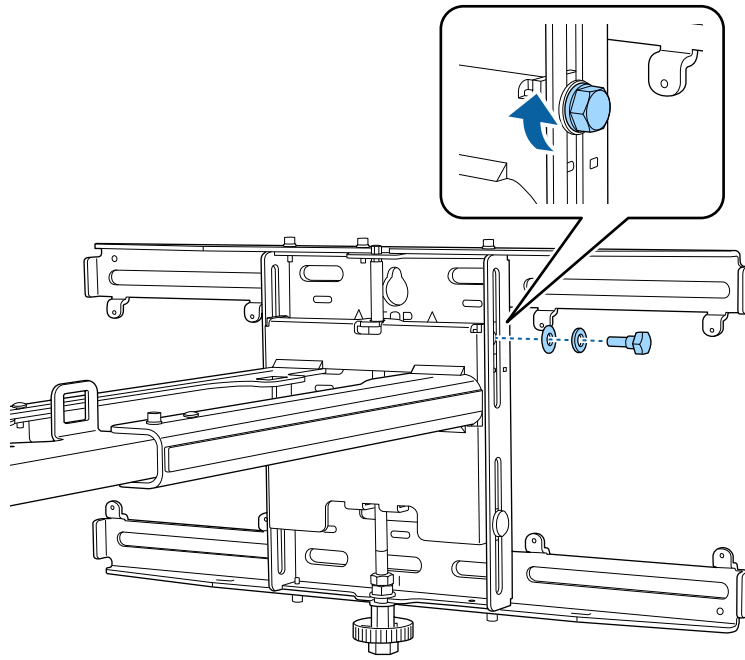


■ Attach the adjustment unit to the arm unit


1 Check the installation position for the adjustment unit

The installation position is marked on the arm unit. Install at an appropriate position according to the size of the screen you want to project on to.

- When a projected image is smaller than 117 inches: Install the unit at the ○ mark.

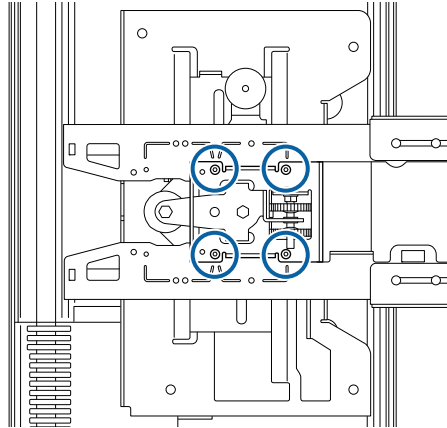


- When a projected image is 117 inches or more: Install the unit at the ○○ mark.

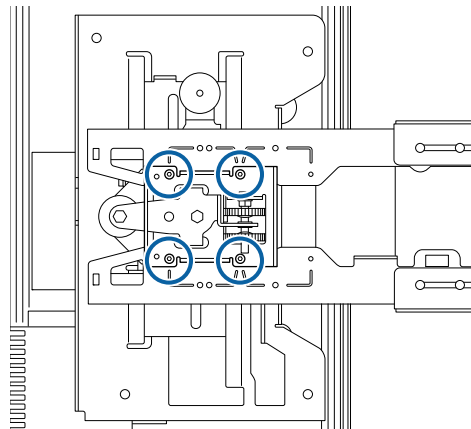

2

Secure the adjustment unit to the arm unit with the M4 x 12 mm bolts (x4) supplied

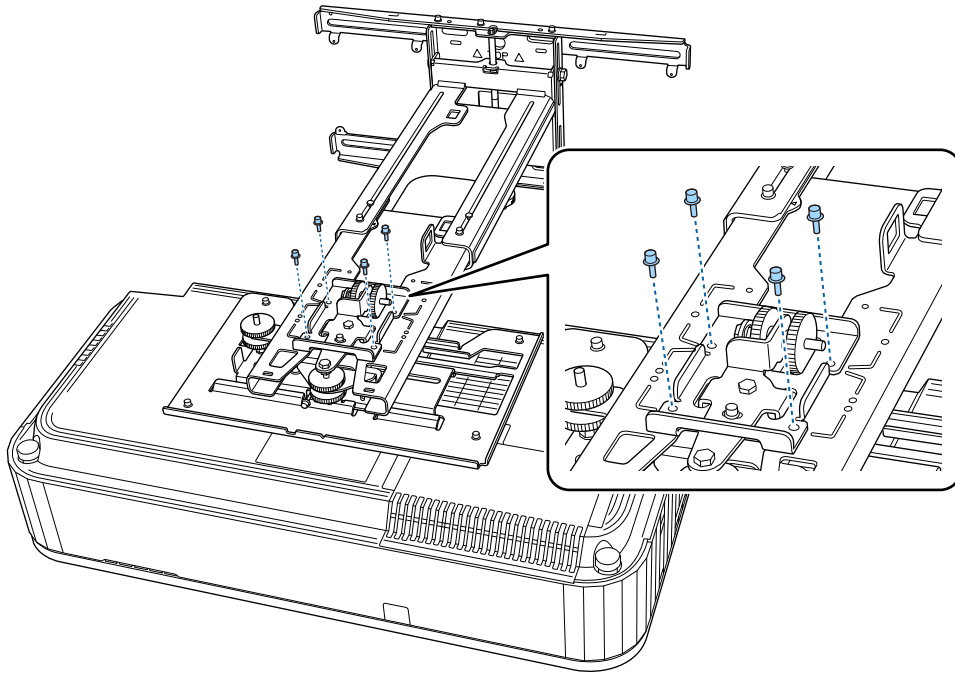

3


Connect the cables to the projector

Connect the power cord last.

■

Attaching peripheral devices

Attach the mini PC or stick PC to the mini PC plate, and secure it to the left or right side of the wall plate.

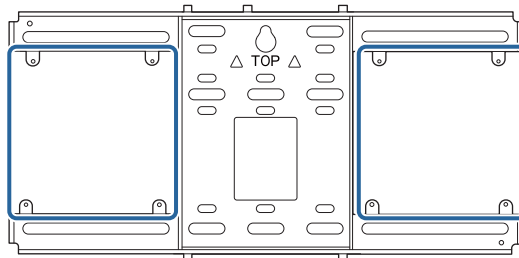


Attach it so that the air exhaust vents of the PC are not blocked.

We recommend installing the PC so that the air exhaust vents are at the top and the air intake vents are at the bottom.

When securing with the mini PC belt


1

Wrap the belt around the mini PC plate

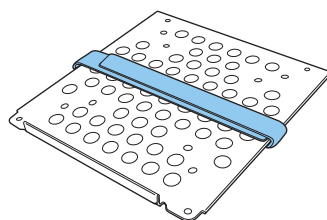


2

Secure the mini PC plate to the wall plate using the M3 x 6 mm screws (x4) supplied.

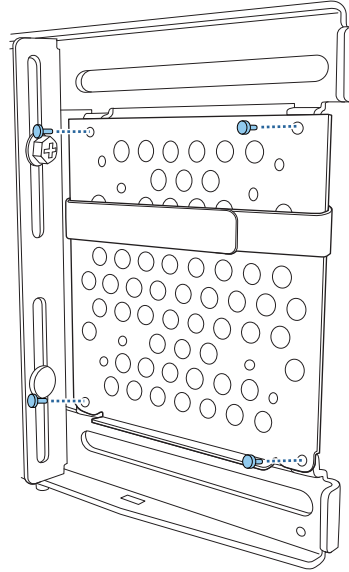

3

Place the PC on the lower edge of the mini PC plate, and secure it with the belt

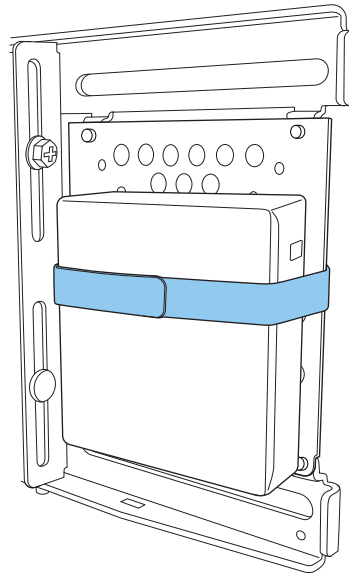


When securing with screws


Depending on the shape of the mini PC and the orientation of the screw holes, the order in which parts are installed differs. Be sure to check the installation instructions in advance.

Installation example

- Secure the mini PC plate with the PC installed to the wall plate using the M3 x 6 mm screws (x4) supplied.

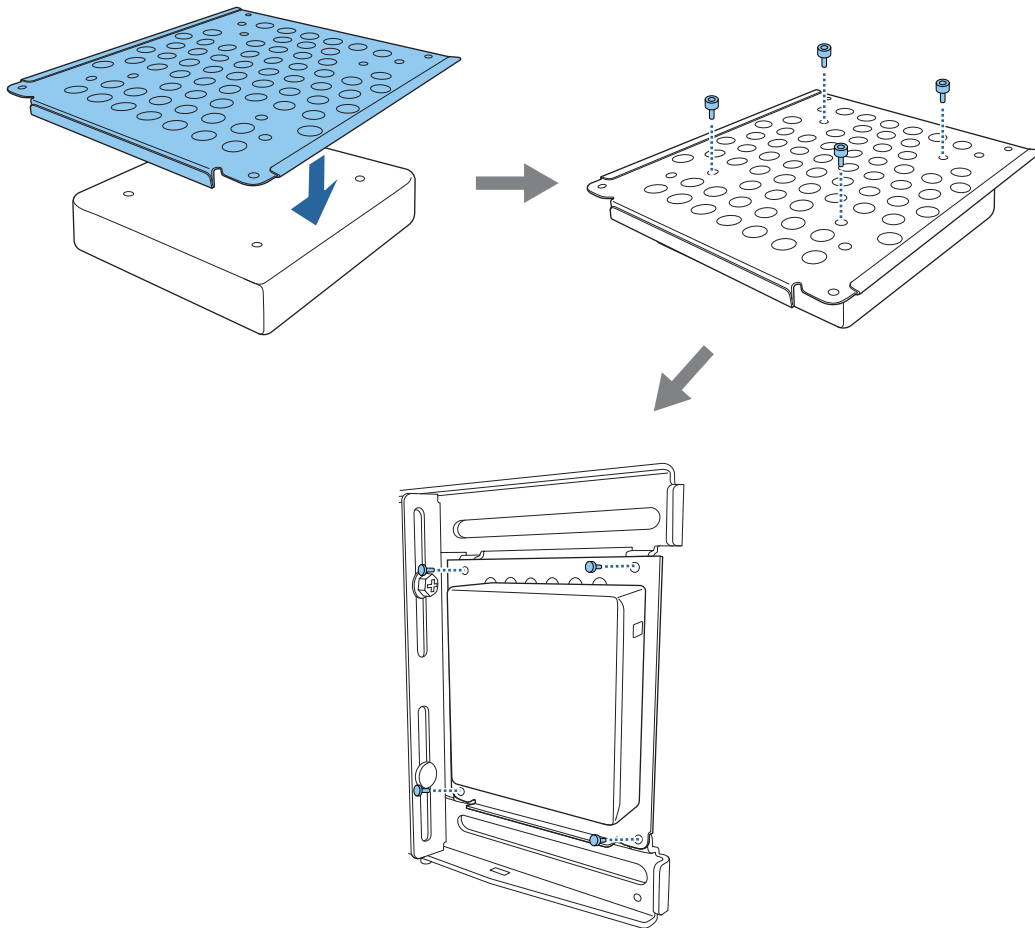

- Secure the mini PC plate to the wall plate using the M3 x 6 mm screws (x4) supplied, and then install the PC.

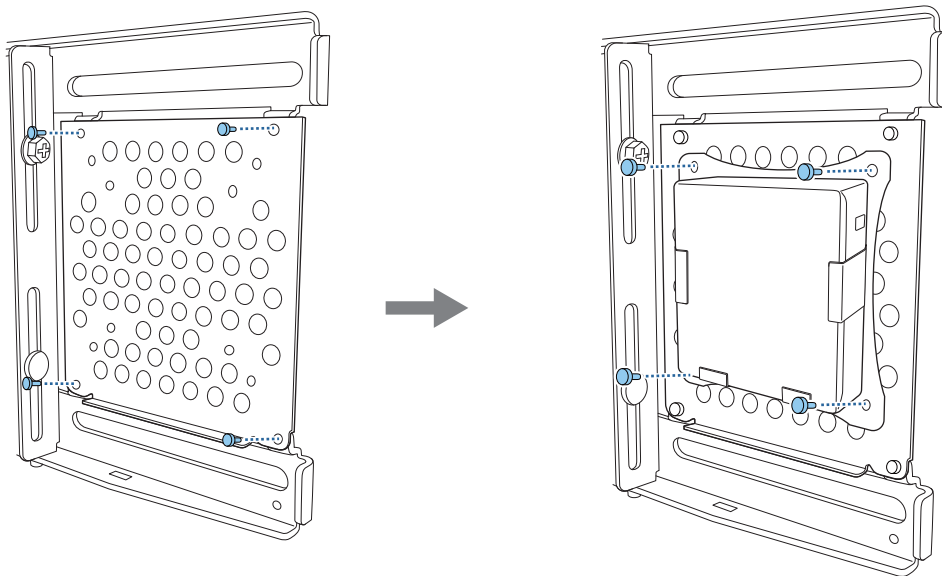


Adjusting the Position of the Projected Image

You can use any of the following methods to adjust the position of the projected image.




When multiple projectors are installed in the same room, we recommend that you set projector IDs to prevent remote control interference.

Turn on a projector and set the ID number for the projector in **Installation > Projector ID**. When you want to operate a specific projector, hold down the [ID] button on the remote control and press the button with the same number as the projector ID.

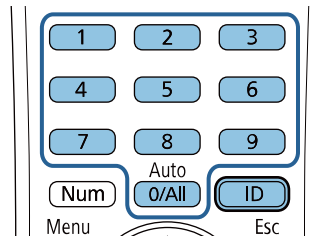

- Adjusting using the Setting Plate Installation Guide ([p.50](#))

Manually adjust the position of the setting plate according to the guide screen displayed. This is useful when you want to perform fine adjustments to the projection position while maintaining the image quality.

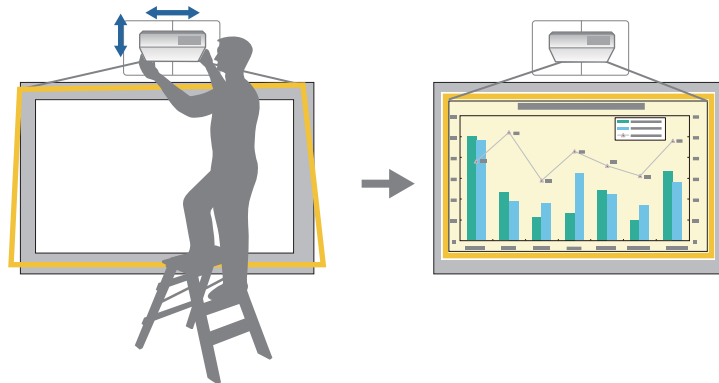


- Adjusting using the initial setup wizard

Adjust the projection position using the initial setup wizard that is displayed when you turn on the projector for the first time.

- Adjusting using the projector menus ([p.54](#))

Select the area you want to adjust and manually correct the image. This is useful when you want to make fine adjustments to the projection position after making mechanical adjustments using the guide screen.

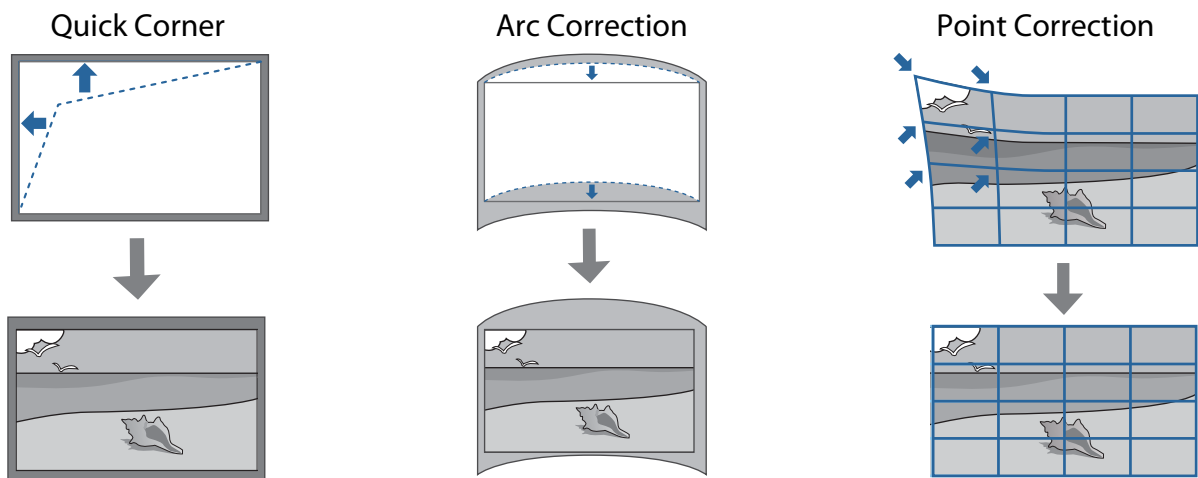



- Images are not stable immediately after turning on the projector. After starting projection, wait for at least 30 minutes before adjusting the image.
- Install and adjust the projector at a room temperature that is close to the actual intended usage environment. If the temperature changes, the position of the image may shift.
- When setting up multiple projectors using the batch setup function, perform the batch setup before adjusting the projected image.
- We recommend the mechanical position adjustment of the setting plate to adjust the image when you want to maintain image quality.

■ Preparations before adjusting

The initial setup wizard is displayed when you turn on the projector for the first time.

Use the up, down, left, right, and [Enter] buttons to set the **Projection**, **Language**, and **Date & Time**. Continue to adjust the shape and position of the projected image as necessary. If necessary, you can then enable **Quick Startup** to speed up the projector's startup. Enabling this setting increases the power consumed during standby.


■ Performing mechanical adjustment using the Setting Plate Installation Guide

Use the guidance screen to adjust the position of the image.


1

Press the [Menu] button

Using the Remote Control

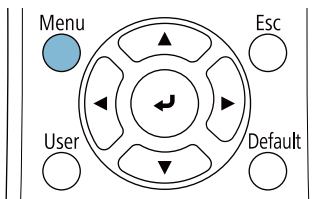

Using the Control Panel

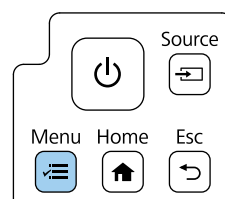

2


Select **Setting Plate Installation Guide** from the **Installation** menu

Frequently Used Items	Installation
Image	Fixed Installation Off
Signal I/O	Test Pattern
Installation	Setting Plate Installation Guide
Display	Projection Front/Upside Down
Operation	Geometry Correction Point Correction
Management	Geometry Correction Wizard
Network	Connect to Setting Assistant
Multi-Projection	Digital Zoom
Memory	Remote Receiver Off
ECO	Screen Type 16:9
Initial/All Settings	High Altitude Mode Off
	Source HDMI1
	Blanking
	Reset to Defaults
	Settings for Video Conferenc...
	Install Again
	Reset Installation Settings

You see the guidance screen.


3

Turn the adjustment dial ① in the installation guide to adjust the horizontal roll

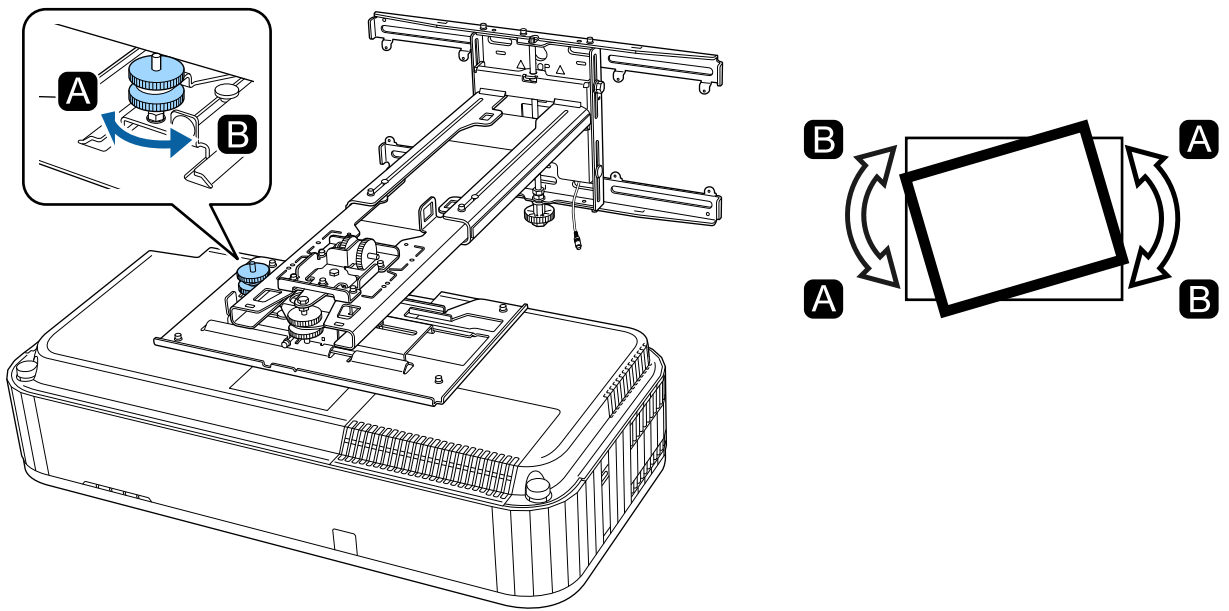


4


Loosen the M4 screw, and then turn the adjustment dial ② in the installation guide to adjust the horizontal rotation

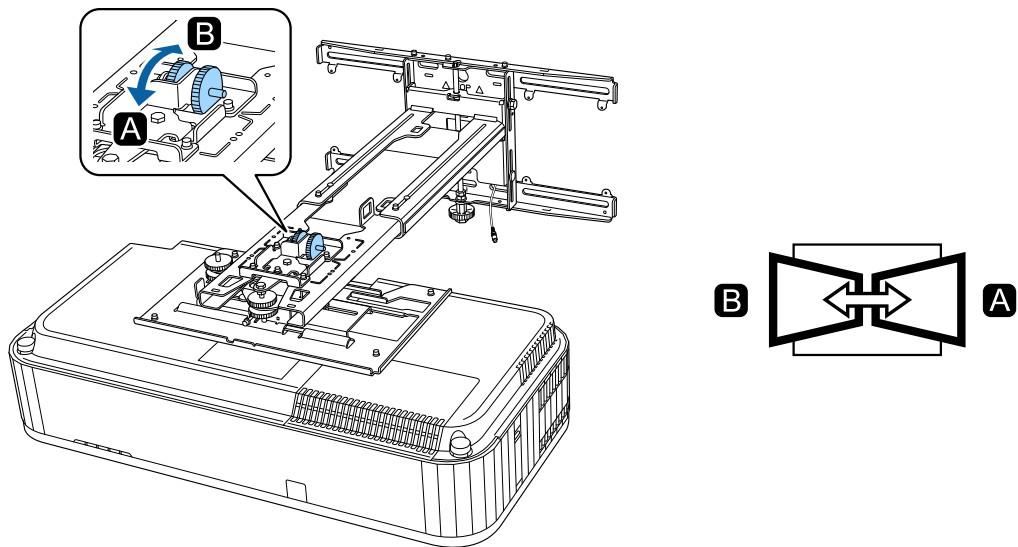


5 Turn the adjustment dial ③ in the installation guide to adjust the vertical tilt

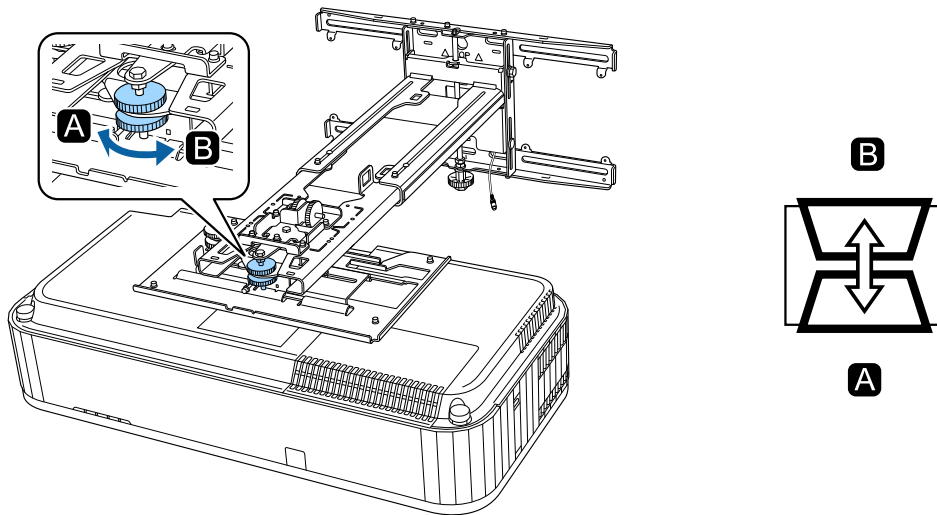

6 Loosen the M4 bolt, and then adjust the horizontal slide

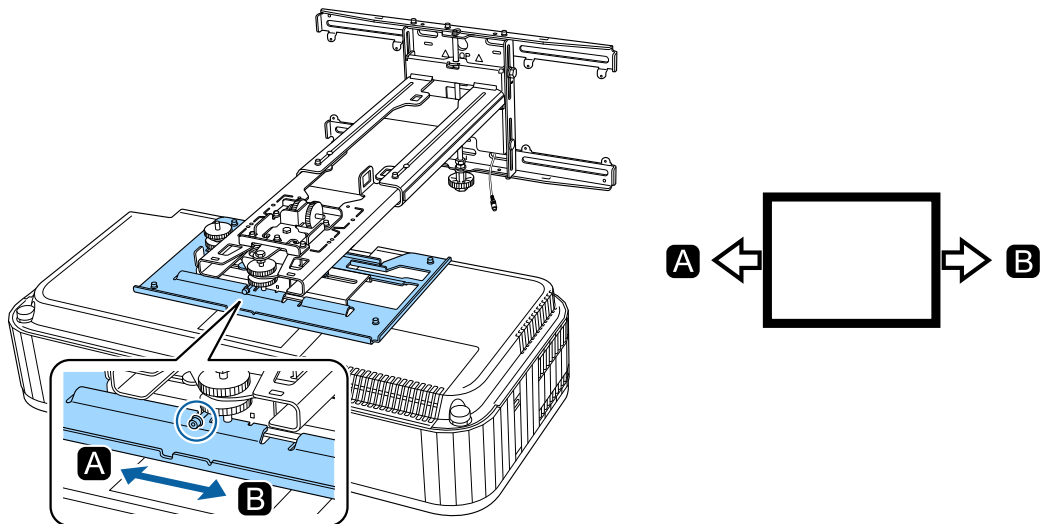


7 Loosen the M4 bolts (x2), and then adjust the forward/backward slide

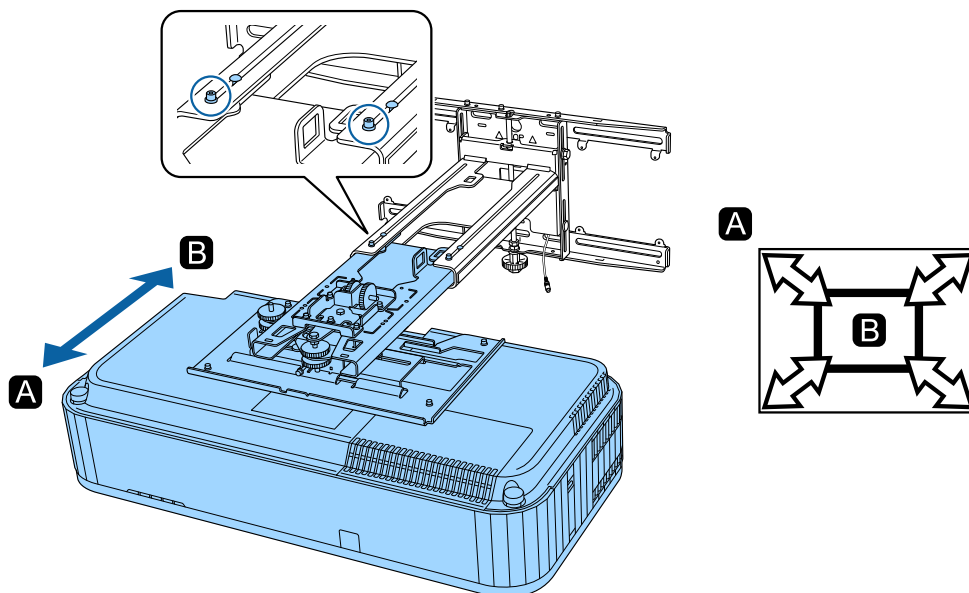

8

Loosen the M6 bolt, and then adjust the vertical slide

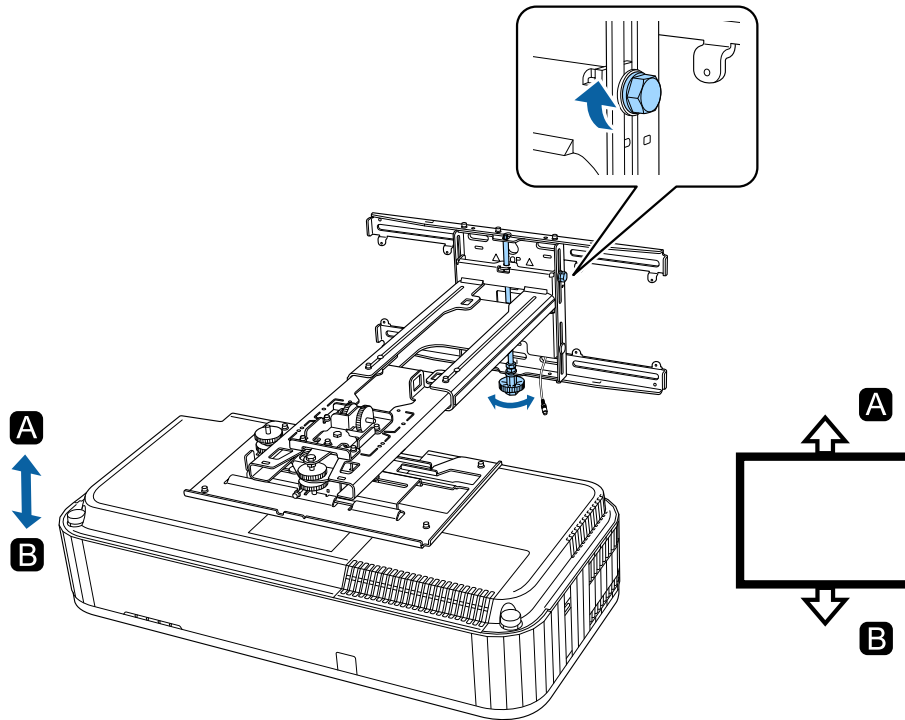

9


Re-tighten the screws and bolts that you loosened in steps 3 to 8

 **Warning**

Tighten all bolts and screws firmly. Otherwise, the product may fall and cause personal injury or property damage.

10

Adjust the focus of position A in the following figure

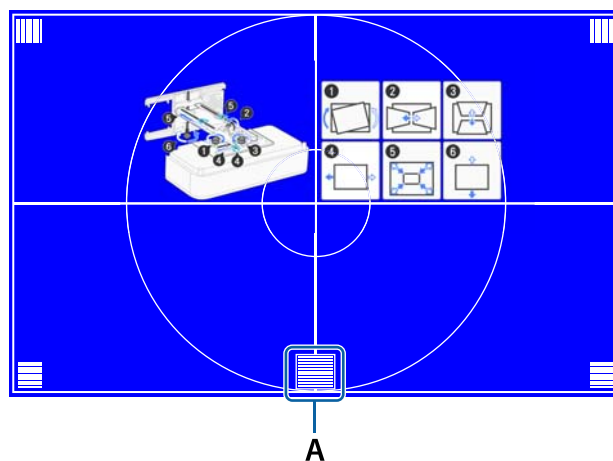

11

When you have finished making adjustments, press the [Esc] button on the remote control or the control panel to exit the guidance screen

Adjusting using the projector menus




- You can save adjusted values in **Memory** from the **Geometry Correction** menu.
- Before performing the adjustment, set the Screen Type and the Screen Position setting first. If you change the Screen Type or the Screen Position after making corrections, the corrections will be reset.

Arc Correction


1

Press the [Menu] button

Using the Remote Control

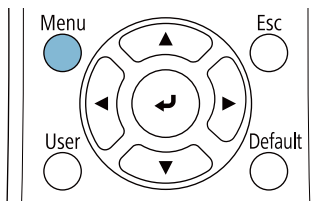


Using the Control Panel

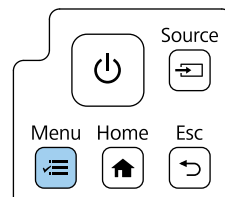


2

Select **Geometry Correction** from the **Installation** menu

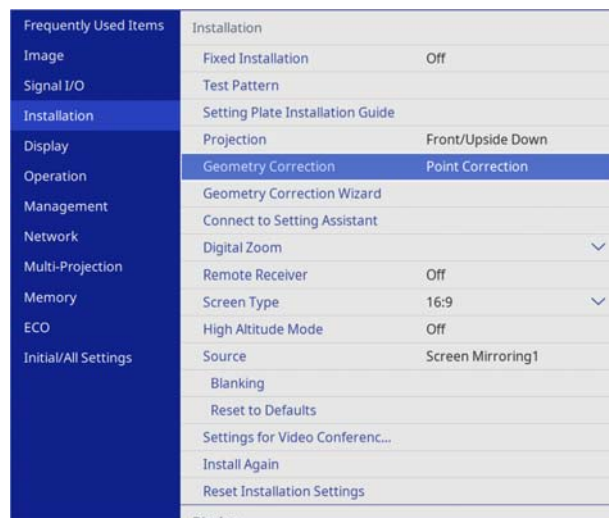


3

Select **Arc Correction**

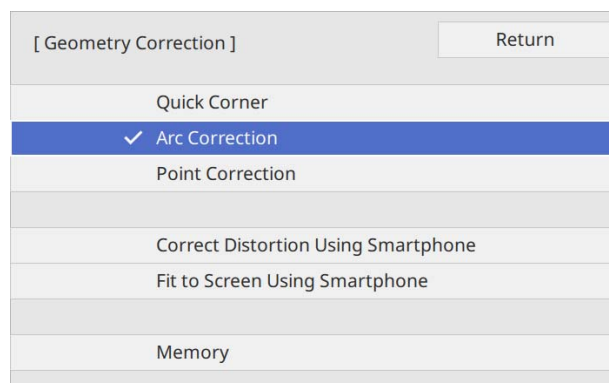

4 Select the side you want to correct and make adjustment


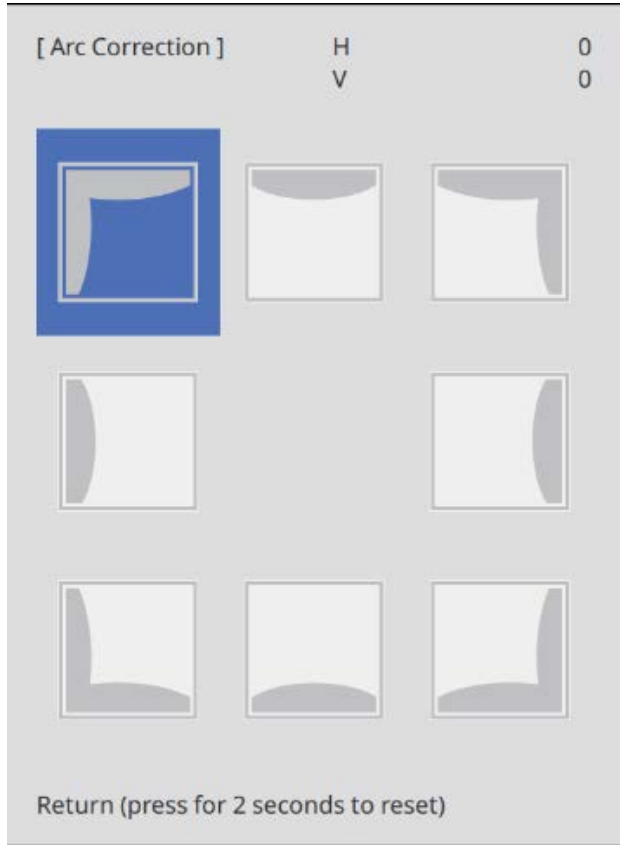


When you reach a range that cannot be adjusted, you see the message **Cannot adjust any further.** displayed.

5 When you have finished making adjustments, press the [Esc] button on the remote control or the control panel to finish adjustment

Quick Corner

1 Press the [Menu] button

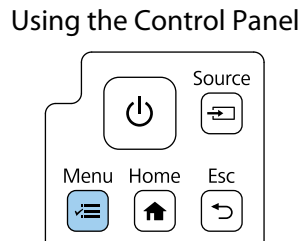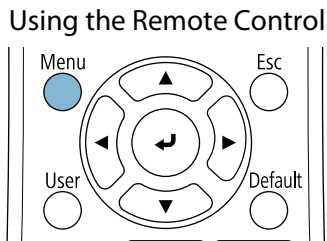


2

Select **Geometry Correction** from the **Installation** menu




3


Select **Quick Corner**

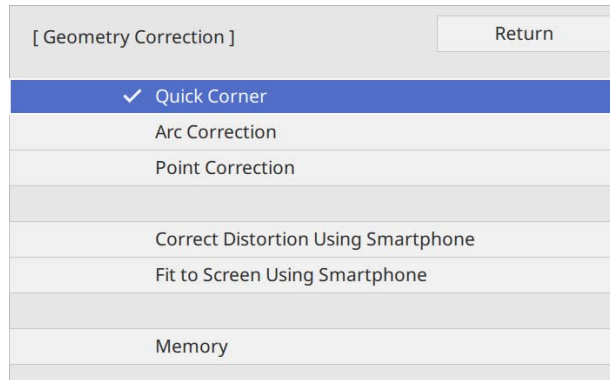

4 Select the side you want to correct and make adjustment

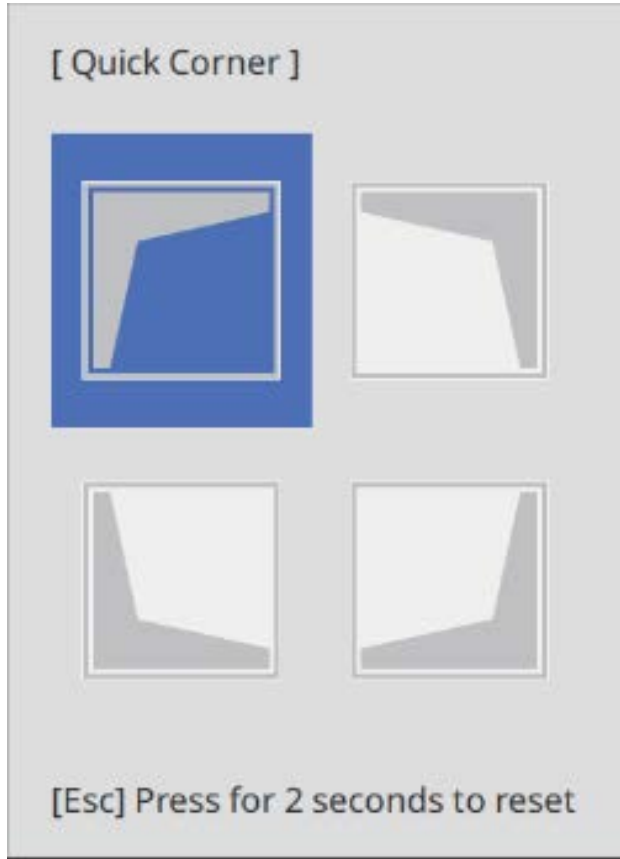



When you reach a range that cannot be adjusted, you see the message **Cannot adjust any further.** displayed.

 While adjusting the sides, press buttons [1], [3], [7], and [9] on the remote control to select the side you want to adjust.

5 When you have finished making adjustments, press the [Esc] button on the remote control or the control panel to finish adjustment

Point Correction

1 Press the [Menu] button

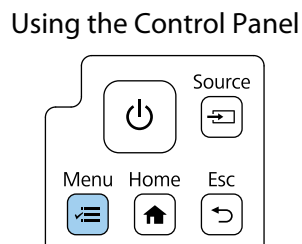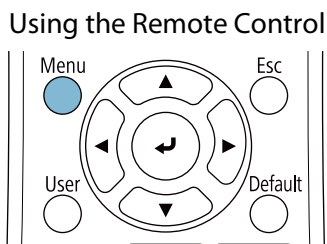


2

Select **Geometry Correction** from the **Installation** menu





3

Select **Point Correction**

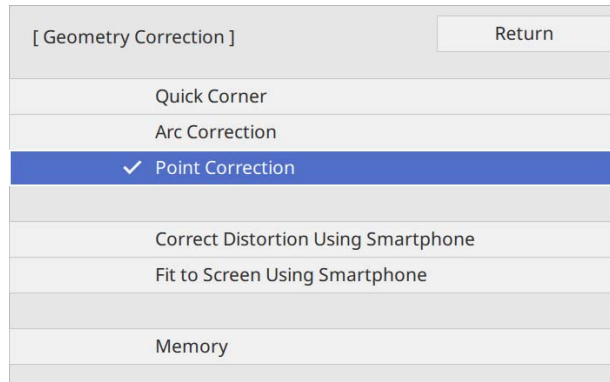



4

Select **Points (Vert.)** and **Points (Horiz.)**, and then set the number of grids

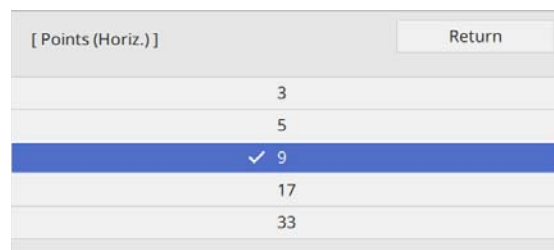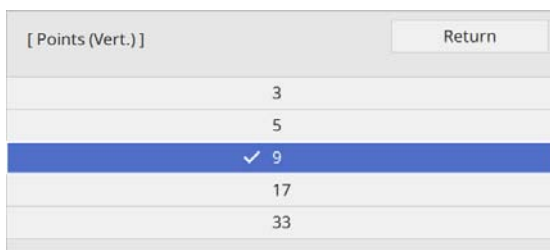

5

Select the points you want to correct and make adjustment

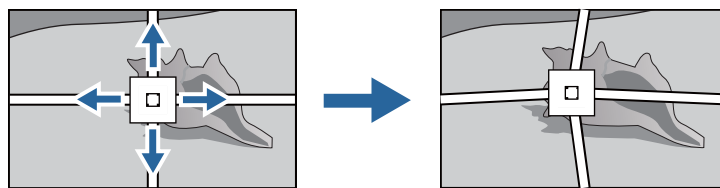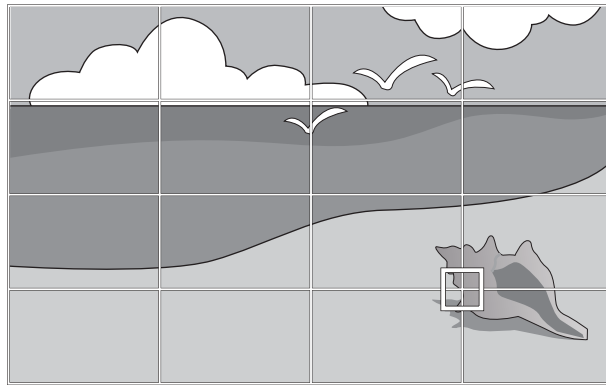

If it is hard to see the grid, use **Pattern Color** to change the color of the grid.


6

When you have finished making adjustments, press the [Esc] button on the remote control or the control panel to finish adjustment

Attaching the Covers


1

Attach the left wall plate cover

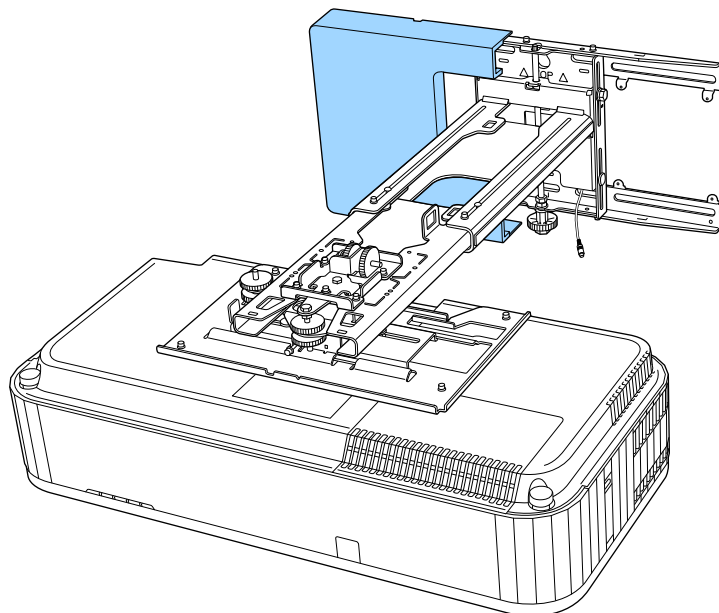


2

Attach the right wall plate cover

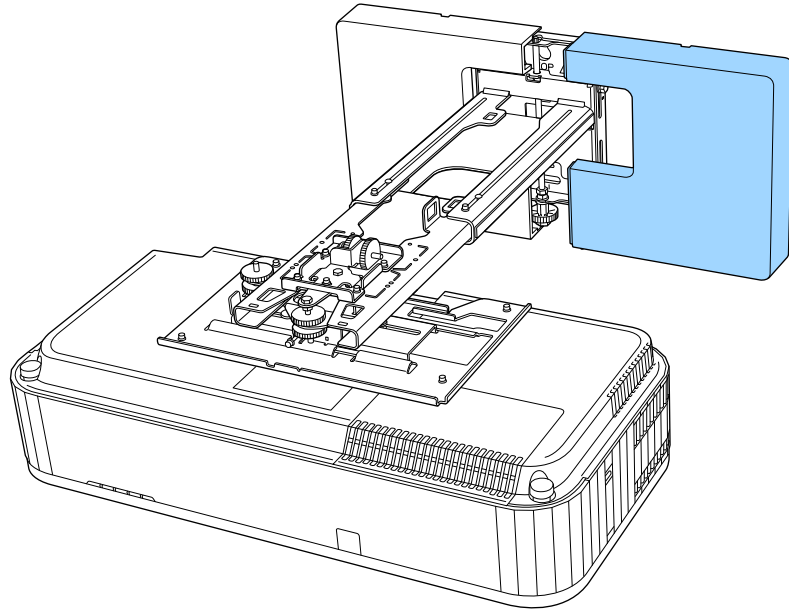


3

Fit the end cap to the arm unit

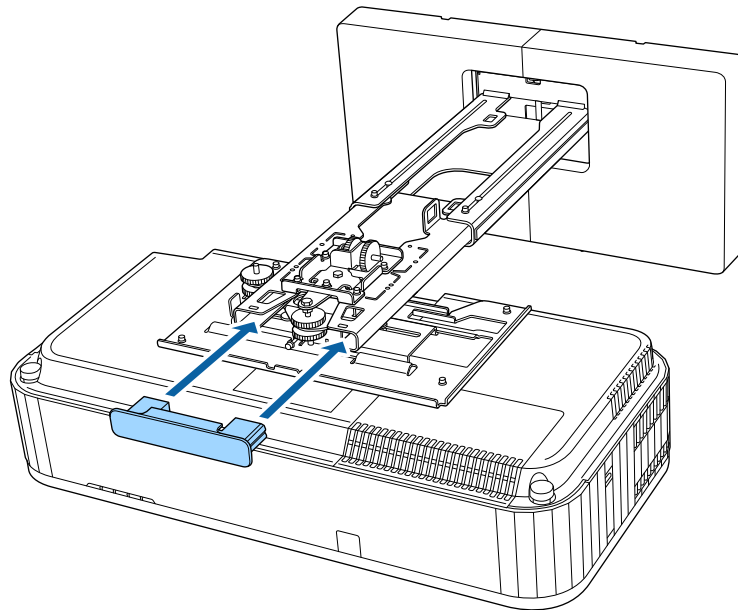


If you are concerned about the groove in the arm, stick the supplied masking sticker.

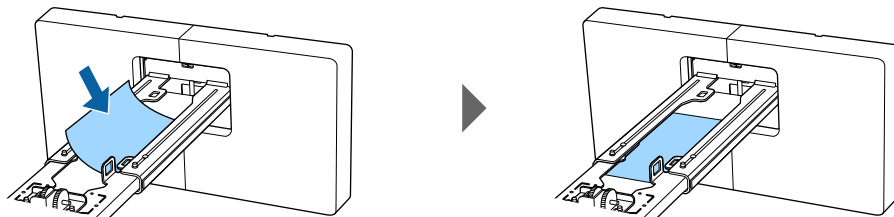

4

Attach the side cover to the projector

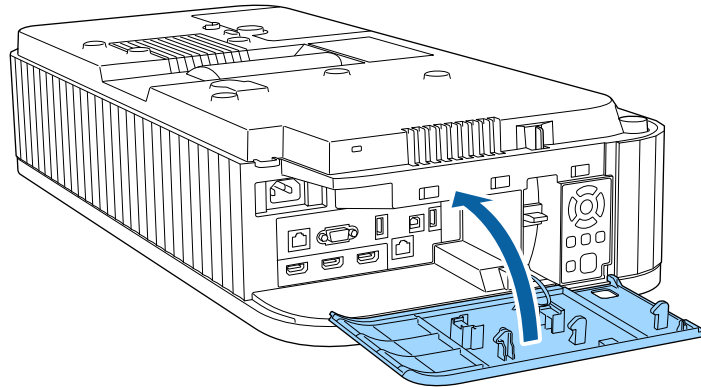


Attaching a Security Cable

If necessary, attach a security cable as a security measure.

- Attach the wire to the security cable installation point

Remove the security cable installation point cover, and then attach the wire cable to the security cable installation point on the projector.


You can attach the security cable installation point cover to the back of the side cover so that it does not get lost.

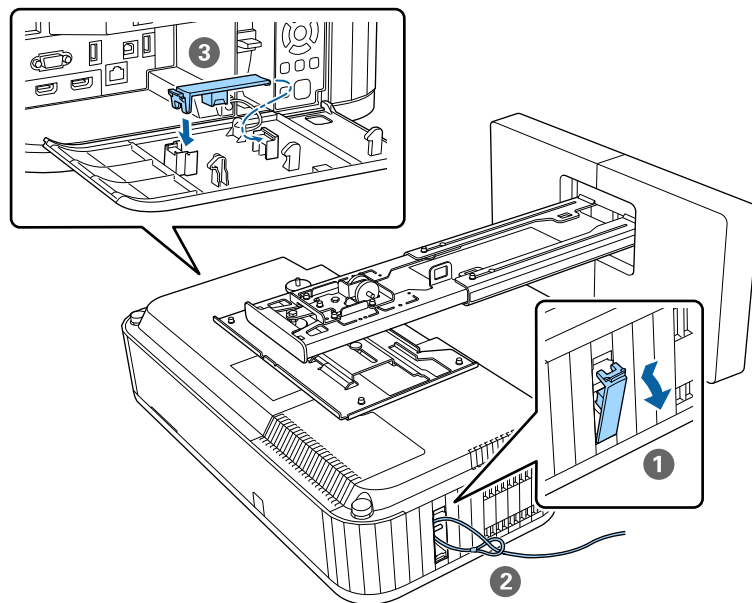

- Install a security wire from Kensington


The security slot on this product is compatible with the Microsaver Security System manufactured by Kensington. See the following for more details on the Microsaver Security System.

<http://www.kensington.com/>

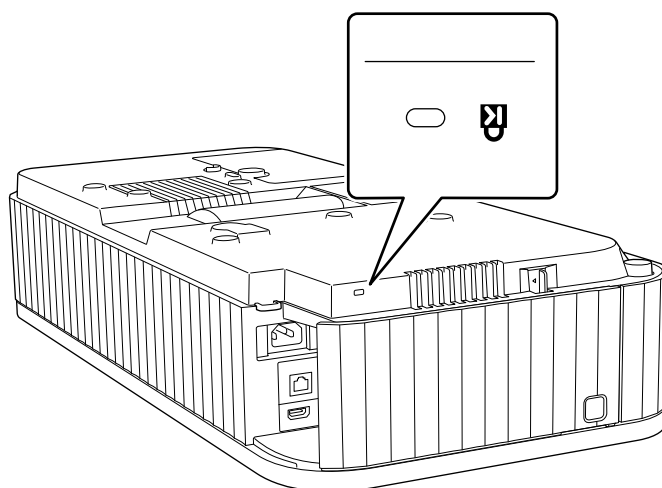


Attaching the Safety Wire


1 Attach the carabiner and the safety wire to the bottom of the projector using the clamp

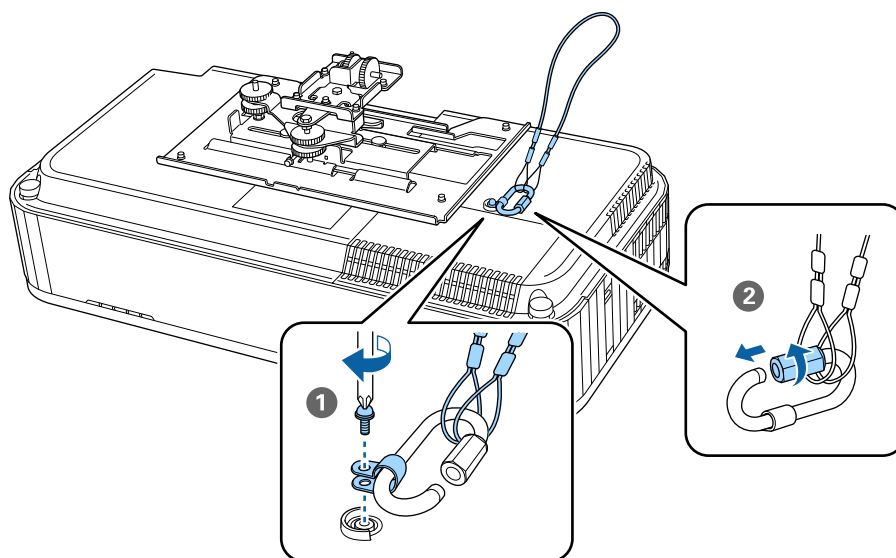

2 Place the projector into the arm unit and tighten the screws.

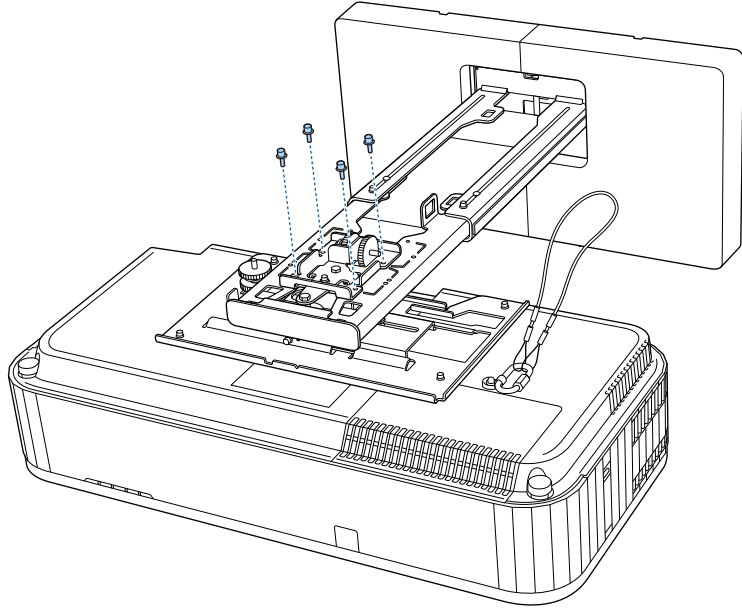

3 Attach a carabiner to the hole in the arm section of the arm unit and pass the safety wire through it.

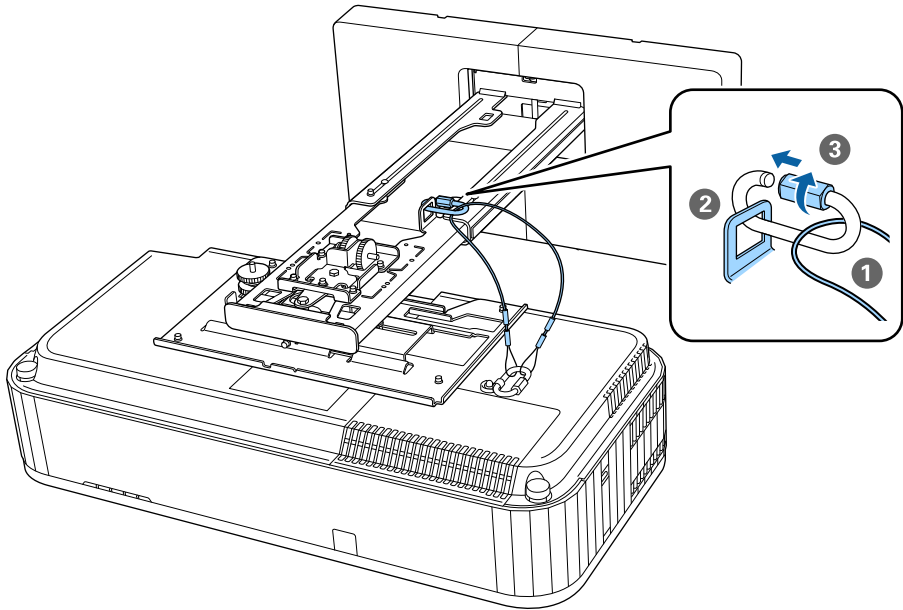

Batch Setup Function

After making the projector's menu settings for one projector, you can copy the settings to other projectors (batch setup function). The batch setup function is only for projectors with the same model number.

Use one of the following methods.

- Setup using a USB flash drive.
- Setup by connecting the computer and projector with a USB cable.
- Make settings using Epson Projector Management.

This guide explains the USB flash drive and the USB cable methods.

For details on making settings using Epson Projector Management, see the *Epson Projector Management Operation Guide*.



- If you do not want to copy the following settings, set **Batch Setup Range** to **Limited**.
 - **Password Protection**
 - **EDID** from the **Signal I/O** menu
 - **Network** menu
- Perform batch setup before adjusting the position of the projectors. The batch setup function copies adjustment values for the projected image such as Geometry Correction. If batch setup is performed after adjusting the position of the projectors, the adjustments you made may change.
- By using the batch setup function, the registered User's Logo is copied to the other projectors. Do not register confidential information as the User's Logo.



Caution

Performing batch setup is the customer's responsibility. If batch setup fails due to an accident such as a power failure, communication error, the customer is responsible for any repair costs incurred.

Setup Using a USB flash drive

This section explains how to perform batch setup using a USB flash drive.



- Use a FAT format USB flash drive.
- The batch setup function cannot be used by USB flash drives that incorporate security functions. Use a USB flash drive that does not incorporate security functions.
- The batch setup function cannot be used by USB card readers or USB hard disks.

Saving settings to the USB flash drive

1

Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off

2 Connect the USB flash drive to the projector's USB-A port




- Connect the USB flash drive directly to the projector. If the USB flash drive is connected to the projector through a USB hub, the settings may not be saved correctly.
- Connect an empty USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be saved correctly.
- The file name for the batch setup file is PJCONFDATA.bin. If you need to change the file name, add text after PJCONFDATA. If you change the PJCONFDATA section of the file name, the projector may not be able to recognize the file correctly.
- You can only use single-byte characters for the file name.

3 While holding down the [Esc] button on the remote control or the control panel, connect the power cord to the projector

The Power indicator and the Status indicator turn blue, and the Laser indicator and the Temp indicator turn orange.

When all of the projector's indicators turn on, release the [Esc] button.




When all of the indicators start flashing, the batch setup file is being written.



Caution

- Do not disconnect the power cord from the projector while the file is being written. If the power cord is disconnected, the projector may not start correctly.
- Do not disconnect the USB flash drive from the projector while the file is being written. If the USB flash drive is disconnected, the projector may not start correctly.

When writing completes normally, the projector turns off, and only the Power indicator is lit blue.



When the power turns off, remove the USB flash drive.

Copying saved settings to other projectors

1 Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off

2 Connect the USB flash drive containing the saved batch setup file to the projector's USB-A port




Do not store any data except for the batch setup file on the USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be copied correctly.

- 3 While holding down the [Menu] button on the remote control or the control panel, connect the power cord to the projector

The Power indicator and the Status indicator turn blue, and the Laser indicator and the Temp indicator turn orange.

When all of the projector's indicators turn on, release the [Menu] button. The indicators turn on for approximately 75 seconds.




When all of the indicators start flashing, the settings are being written.

Caution

- Do not disconnect the power cord from the projector while the settings are being written. If the power cord is disconnected, the projector may not start correctly.
- Do not disconnect the USB flash drive from the projector while the settings are being written. If the USB flash drive is disconnected, the projector may not start correctly.

When writing completes normally, the projector turns off, and only the Power indicator is lit blue.



When the power turns off, remove the USB flash drive.

Setup by Connecting the Computer and Projector with a USB Cable



The following operating systems support the batch setup function.

- Windows 10 and later
- macOS 10.13.x and later

■ Saving settings to a computer


- 1 Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off

- 2 Connect the computer's USB port to the projector's USB-B port with a USB cable

- 3 While holding down the [Esc] button on the remote control or the control panel, connect the power cord to the projector


The Power indicator and the Status indicator turn blue, and the Laser indicator and the Temp indicator turn orange.

When all of the projector's indicators turn on, release the [Esc] button.




The projector is recognized as a removable disk by the computer.


- 4 Open the removable disk, and save the batch setup file (PJCONFDATA.bin) to the computer

 If you need to change the name of the batch setup file, add text after PJCONFDATA. If you change the PJCONFDATA section of the file name, the projector may not be able to recognize the file correctly. You can only use single-byte characters for the file name.

- 5 Perform "Remove USB device" on your computer, and then disconnect the USB cable

 When using a Mac, perform "Remove EPSON_PJ".

The projector turns off and only the Power indicator is lit blue.



Copying saved settings to other projectors


- 1 Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off

- 2 Connect the computer's USB port to the projector's USB-B port with a USB cable

- 3 While holding down the [Menu] button on the remote control or the control panel, connect the power cord to the projector


The Power indicator and the Status indicator turn blue, and the Laser indicator and the Temp indicator turn orange.

When all of the projector's indicators turn on, release the [Menu] button.



The projector is recognized as a removable disk by the computer.


- 4** Copy the batch setup file (PJCONFDATA.bin) that you saved to your computer to the top-level folder of the removable disk

 Do not copy any files or folders other than the batch setup file to the removable disk.

- 5** Perform "Remove USB device" on your computer, and then disconnect the USB cable


 When using a Mac, perform "Remove EPSON_PJ".

When all of the indicators start flashing, the settings are being written.



 **Caution**

Do not disconnect the power cord from the projector while the settings are being written. If the power cord is disconnected, the projector may not start correctly.

When writing completes normally, the projector turns off, and only the Power indicator is lit blue.




When Setup Fails

Check	Remedy
<p>Are the Laser and the Temp indicators flashing orange quickly?</p>  <p>The diagram shows five indicator lights. The second (Laser) and third (Temp) lights are orange with radiating lines, indicating they are flashing. The other lights (Power, Status, Temp) are white.</p>	<p>The batch setup file may be corrupt, or the USB flash drive or USB cable may not be connected correctly. Disconnect the USB flash drive or the USB cable, unplug and then plug in the projector's power cord, and then try again.</p>
<p>Are the Power and the Status indicators blue, and the Laser and the Temp indicators flashing orange quickly?</p>  <p>The diagram shows five indicator lights. The first (Power) and fourth (Status) lights are blue with radiating lines, indicating they are flashing. The second (Laser) and third (Temp) lights are orange with radiating lines, indicating they are flashing. The fifth (Temp) light is white.</p>	<p>Writing the settings may have failed and an error may have occurred in the projector's firmware. Stop using the projector, remove the power plug from the electrical outlet, and contact Epson for help.</p>

Installing Multiple Projectors Side-by-Side (Multi-Projection)

You can install multiple projectors side-by-side to project one large screen (Multi-Projection).

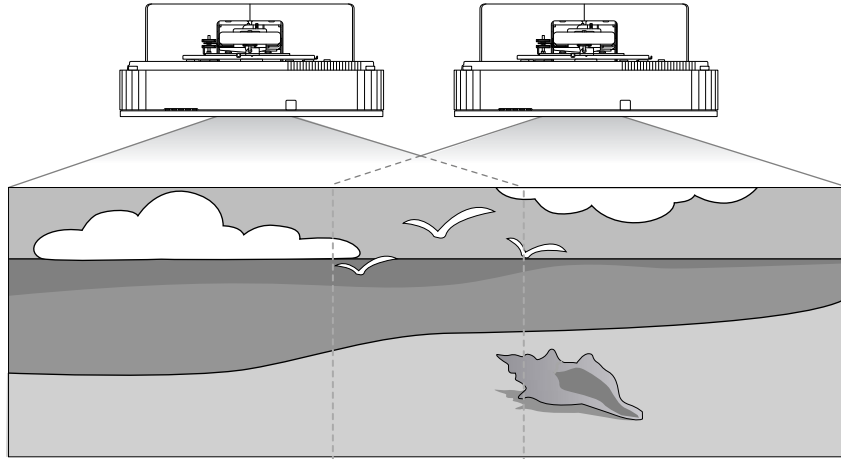

When performing multi-projection, make connections and the necessary settings in the following order.




When making settings for multi-projection, we recommend setting **Operation - Sleep Mode** to **Off** from the projector's menu.

- 1 Connecting cables (☞ p.9)
- 2 Setting the Projector ID (☞ p.69)
- 3 Multi-Projection Connection Settings (☞ p.71)
- 4 HDMI Link settings (☞ p.72)
- 5 Multi-Projection Image Settings (☞ p.73)


Setting the Projector ID

1 Turn on the projector, and then press the [Menu] button

Using the Remote Control

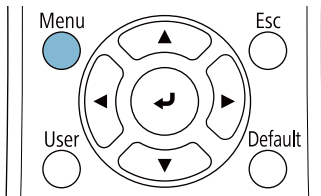


Using the Control Panel

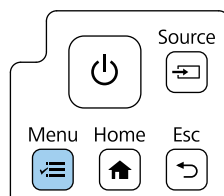


2

Select **Projector ID** from the **Multi-Projection** menu

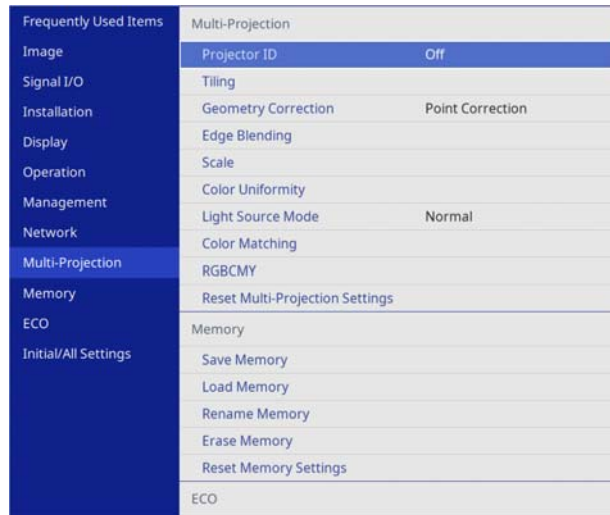

3

Select the ID number for the projector

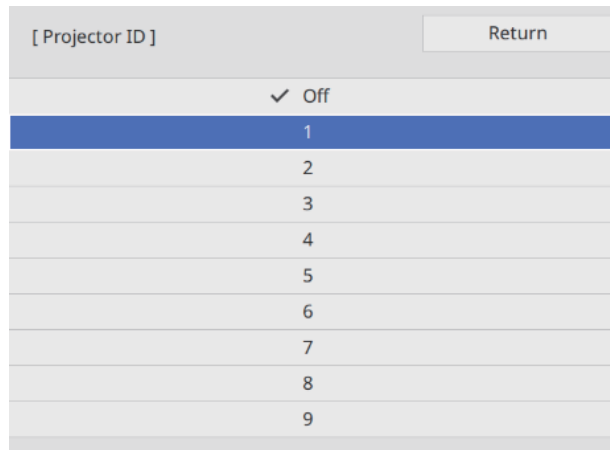


4

Press the [Esc] button to close the menu
Repeat steps 1 to 4 for the remaining projectors.

5


Point the remote control at the projector you want to operate, and then press the [ID] button

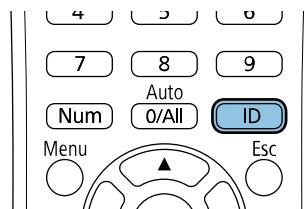

The current ID number is displayed on the projection screen.

6

While holding down the [ID] button, press the button with the same number as the projector ID for the projector you want to operate

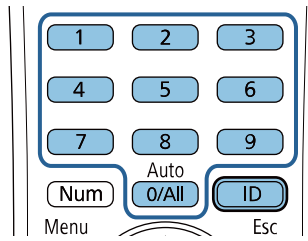

Remote control operations for the projector with the selected ID are enabled.



- When **Projector ID** is set to **Off**, you can operate the projector using the remote control regardless of the ID setting selected using the remote control.
- When the remote control ID is set to 0, you can operate all of the projectors regardless of the projector ID setting.
- Operating multiple remote controls at the same time can cause accidental operations due to infrared interference.


Multi-Projection Connection Settings

Make the following settings for all connected projectors.


1

Press the [Menu] button

Using the Remote Control

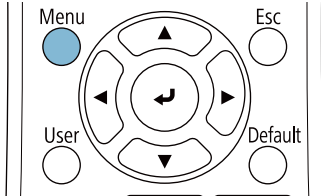

Using the Control Panel

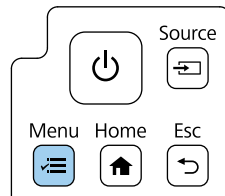


2

Select **Tiling** from the **Multi-Projection** menu

Frequently Used Items	Multi-Projection
Image	Projector ID Off
Signal I/O	Tiling
Installation	Geometry Correction Point Correction
Display	Edge Blending
Operation	Scale
Management	Color Uniformity
Network	Light Source Mode Normal
Multi-Projection	Color Matching
Memory	RGBCMY
ECO	Reset Multi-Projection Settings
Initial/All Settings	Memory
	Save Memory
	Load Memory
	Rename Memory
	Erase Memory
	Reset Memory Settings
	ECO


3 Set the **Column**

Set the number of projectors that will be used for tiling. Changing the **Column** will reset the **Column Order** setting.

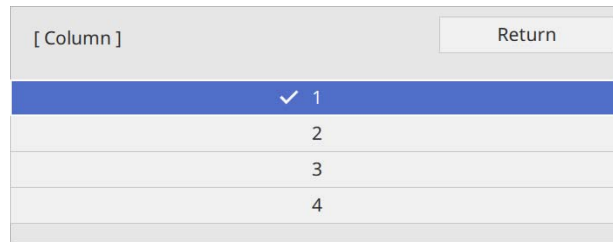

4 Set the **Column Order**

Set the projector positions by setting the first projector connected to the device as number **1**.

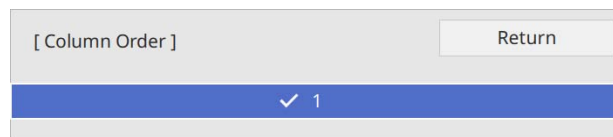


HDMI Link Settings


Use HDMI Link to link the power on/off function across multiple projectors.

1 Press the [Menu] button

Using the Remote Control

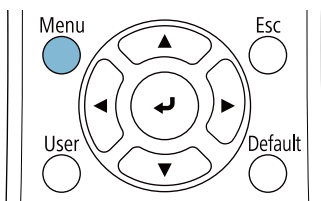

Using the Control Panel

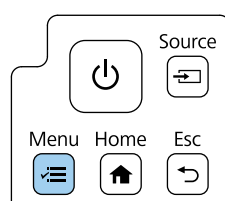


2 Select **HDMI Link** from the **Signal I/O**



3 Select **HDMI Link**



4 Select **On**

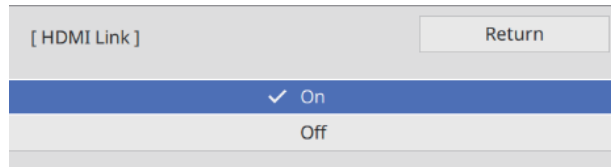

5 Set the **HDMI Link** as shown below.

Setting	First projector to connect to device	Middle projector	End projector
HDMI Out Power Link	On	On	On
HDMI Out End	Off	Off	On



This may not function correctly if there are five projectors or more in the daisy-chain or if the settings are incorrect.


Multi-Projection Image Adjustment



Images are not stable immediately after turning on the projector. After starting projection, wait for at least 30 minutes before adjusting the image.

1 Turn on the projector


2 Press the [Color Mode] button on the remote control, and then set Color Mode to **Multi-Projection**.

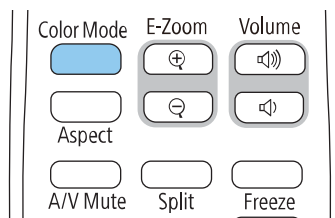


3

Press the [Menu] button

Using the Remote Control

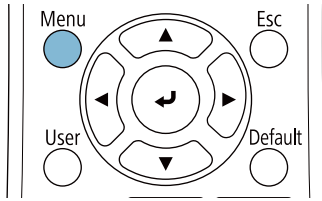

Using the Control Panel

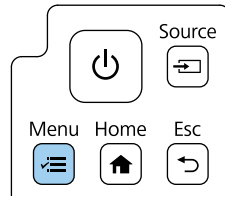

4
















Make the necessary settings on the **Multi-Projection** menu

















See the projector's *User's Guide* for details on how to set up the projector.

<p>Edge Blending</p>	<p>Adjusts the image so that the edges of individual images and overlapping areas are less noticeable. (☞ "Figures of Installation Dimensions" p.7)</p>
<p>Scale</p>	<p>Sets the magnification ratio and cropping position for the image.</p>
<p>Light Source Mode</p>	<p>Adjusts the brightness of the entire image. Select Custom and adjust the Brightness Level based on the darkest projector.</p>
<p>Color Uniformity Color Matching RGBCMY</p>	<p>Adjusts the colors of the images from each projector so that the colors for the entire image appear uniform.</p>

List of Safety Symbols

The following table lists the meaning of the safety symbols labeled on the equipment.

Symbol mark	Approved standards	Meaning
	IEC60417 No.5007	Power On To indicate connection to the mains.
	IEC60417 No.5008	Power Off To indicate disconnection from the mains.
	IEC60417 No.5009	Standby To identify the switch or switch position by means of which part of the equipment is switched on in order to bring it into the standby condition.
	ISO7000 No.0434B IEC3864-B3.1	Caution To identify general caution when using the product.
	IEC60417 No.5041	Caution, hot surface To indicate that the marked item can be hot and should not be touched without taking care.
	IEC60417 No.6042 ISO3864-B3.6	Caution, risk of electric shock To identify equipment that presents a risk of electric shock.
	IEC60417 No.5957	For indoor use only To identify electrical equipment designed primarily for indoor use.
	IEC60417 No.5926	Polarity of d.c. power connector To identify the positive and negative connections (the polarity) on a piece of equipment to which a d.c. power supply may be connected.
	---	
	IEC60417 No.5001B	Battery, general On battery powered equipment. To identify a device for instance a cover for the battery compartment, or the connector terminals.
	IEC60417 No.5002	Positioning of battery To identify the battery holder itself and to identify the positioning of the batteries inside the battery holder.
	---	
	IEC60417 No.5019	Protective earth To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth electrode.
	IEC60417 No.5017	Earth To identify an earth (ground) terminal in cases where the  is not explicitly required.

Symbol mark	Approved standards	Meaning
	IEC60417 No.5032	Alternating current To indicate that the equipment is suitable for alternating current only; to identify relevant terminals.
	IEC60417 No.5031	Direct current To indicate that the equipment is suitable for direct current only; to identify relevant terminals.
	IEC60417 No.5172	Class II equipment To identify equipment meeting the safety requirements specified for Class II equipment according to IEC 61140.
	ISO 3864	General prohibition To identify actions or operations that are prohibited.
	ISO 3864	Contact prohibition To indicate injury that could occur due to touching a specific part of the equipment.
	---	Never look into the projection lens while the projector is on.
	---	To indicate that you must never place anything on the projector.
	ISO3864 IEC60825-1	Caution, laser radiation To indicate the equipment has a laser radiation part.
	ISO 3864	Disassembly prohibition To indicate a risk of injury, such as electric shock, if the equipment is disassembled.
	IEC60417 No.5266	Standby, partial standby To indicate that part of the equipment is in the ready status.
	ISO3864 IEC60417 No.5057	Caution, movable parts To indicate that you must keep away from movable parts according to protection standards.
	IEC 60417-6056	Caution, movable fan blades To indicate that you must keep away from the blades of the movable fan according to protection standards.
	IEC 60417-6043	Caution, sharp corners To indicate that you must not touch the sharp corners of the product according to protection standards.
	--	Never look into the projection lens while the projector is on.
	ISO7010 No. W027 ISO 3864	Warning, light emission (UV, visible light, IR and so on) To indicate that you must be careful not to injure your eyes or skin when near light emitting sections.
	IEC60417 No.5109	Not to be used in residential areas To indicate that the electrical equipment/device is not suitable for use in a residential area.

**Indication of the manufacturer and the importer in accordance with requirements of directive 2011/65/
EU (RoHS)**

Manufacturer: SEIKO EPSON CORPORATION

Address: 3-5, Owa 3-chome, Suwa-shi, Nagano-ken 392-8502 Japan

Telephone: 81-266-52-3131

<http://www.epson.com/>

Importer: SEIKO EUROPE B.V.

Address: Azië building, Atlas Arena, Hoogoorddreef 5, 1101 BA Amsterdam Zuidoost The Netherlands

Telephone: 31-20-314-5000

<http://www.epson.eu/>

General Notice

Mac and OS X are trademarks of Apple Inc.

Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



© 2023 Seiko Epson Corporation